

# ENGLISH

**12.61/62 DIGITAL TIME SWITCH DAILY/ WEEKLY PROGRAMMING**  
 Programmable with NFC technology with the App FINDER TOOLBOX  
 downloaded from Google Play™

12.61

12.62



## 1 DISPLAY INDICATORS

- A Setting Menu
- B Days of the week (1=Mon...7=Sun)
- C Holiday program
- D Permanent Manual over-ride activated - channel A
- E Channel A functions (ON, OFF, Pulse)
- F Day - seconds/minutes
- G Channel B functions (ON, OFF, Pulse) (12.62 only)
- H Permanent Manual over-ride activated - channel B (12.62 only)
- I Time, day, month, hours, minutes, daylight saving ON/OFF, holiday program (Start: day/month. Finish: day/month) PIN ON/OFF, End
- L Time switch without power supply (powered by battery) - Low battery (with power supply)
- M Cancel
- N Program number (max 50) - Y(year), D(day), M(month), H(hour), M(minutes), Daylight saving ON/OFF (EU=Europe – BR=Brazil – AU=Australia) Holiday program (Start: day/month. Finish: day/month)
- O Programming

## 2 SETTINGS (examples)

- 2a Setting: year, day, month, hour, minutes, EU (daylight saving)
- 2b Holiday program (Start: day/month. Finish: day/month), PIN, END

## 3 PROGRAMMING (examples)

- 3a ON - OFF Function (6:25 ON - 19:15 OFF, Mon, Wed, Fri, Sun)
- 3b PULSE function (11:00 pulse 5 s, Mon Wed Fri)

## 4 MANUAL MODE


- 4a Manual ON/OFF channel A
- 4b Manual ON/OFF channel B (12.62 only)
- 4c Permanent Manual over-ride ON/OFF - Channel A
- 4d Permanent Manual over-ride ON/OFF - Channel B (12.62 only)

## 5 DELETION of all program


## 6 DELETION of single program

### NOTE


- Battery replacement: BATTERY CR 2032 (LiMnO<sub>2</sub>) 3V, 230mAh. Complies with Article 11, EU directive 2006/66/CE. Dispose of batteries according to local regulations
- Back-light display (only with power supply)
- Minimum switching interval: 1 second (pulse function)

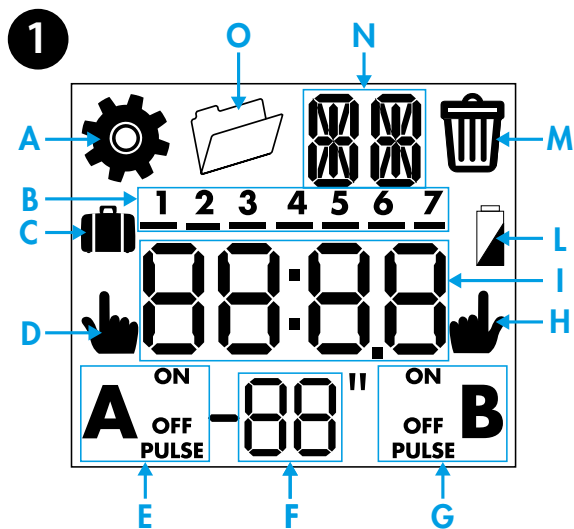

12.61

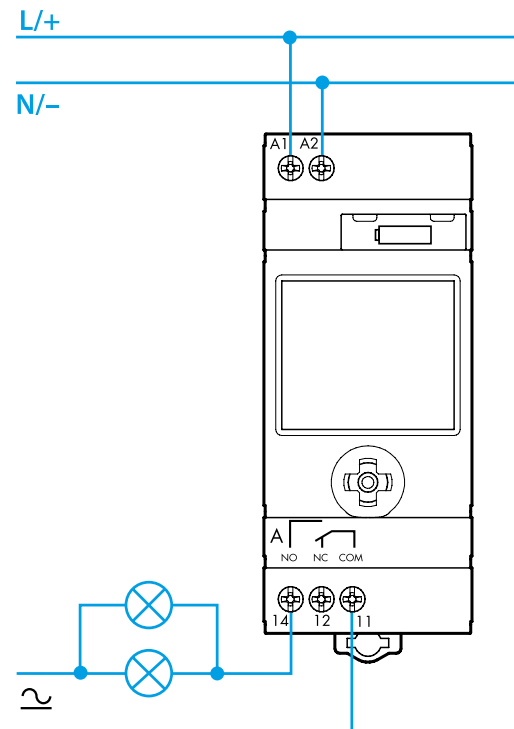


12.62

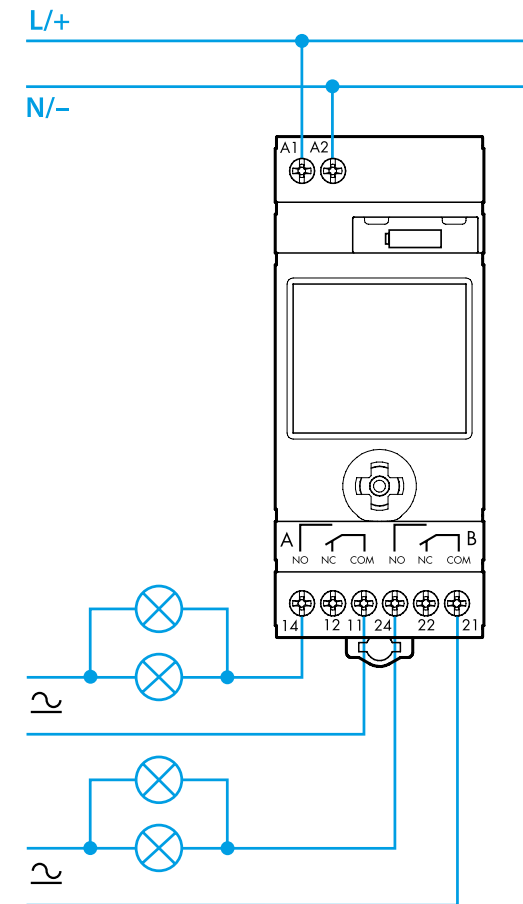


GET IT ON  
**Google Play**



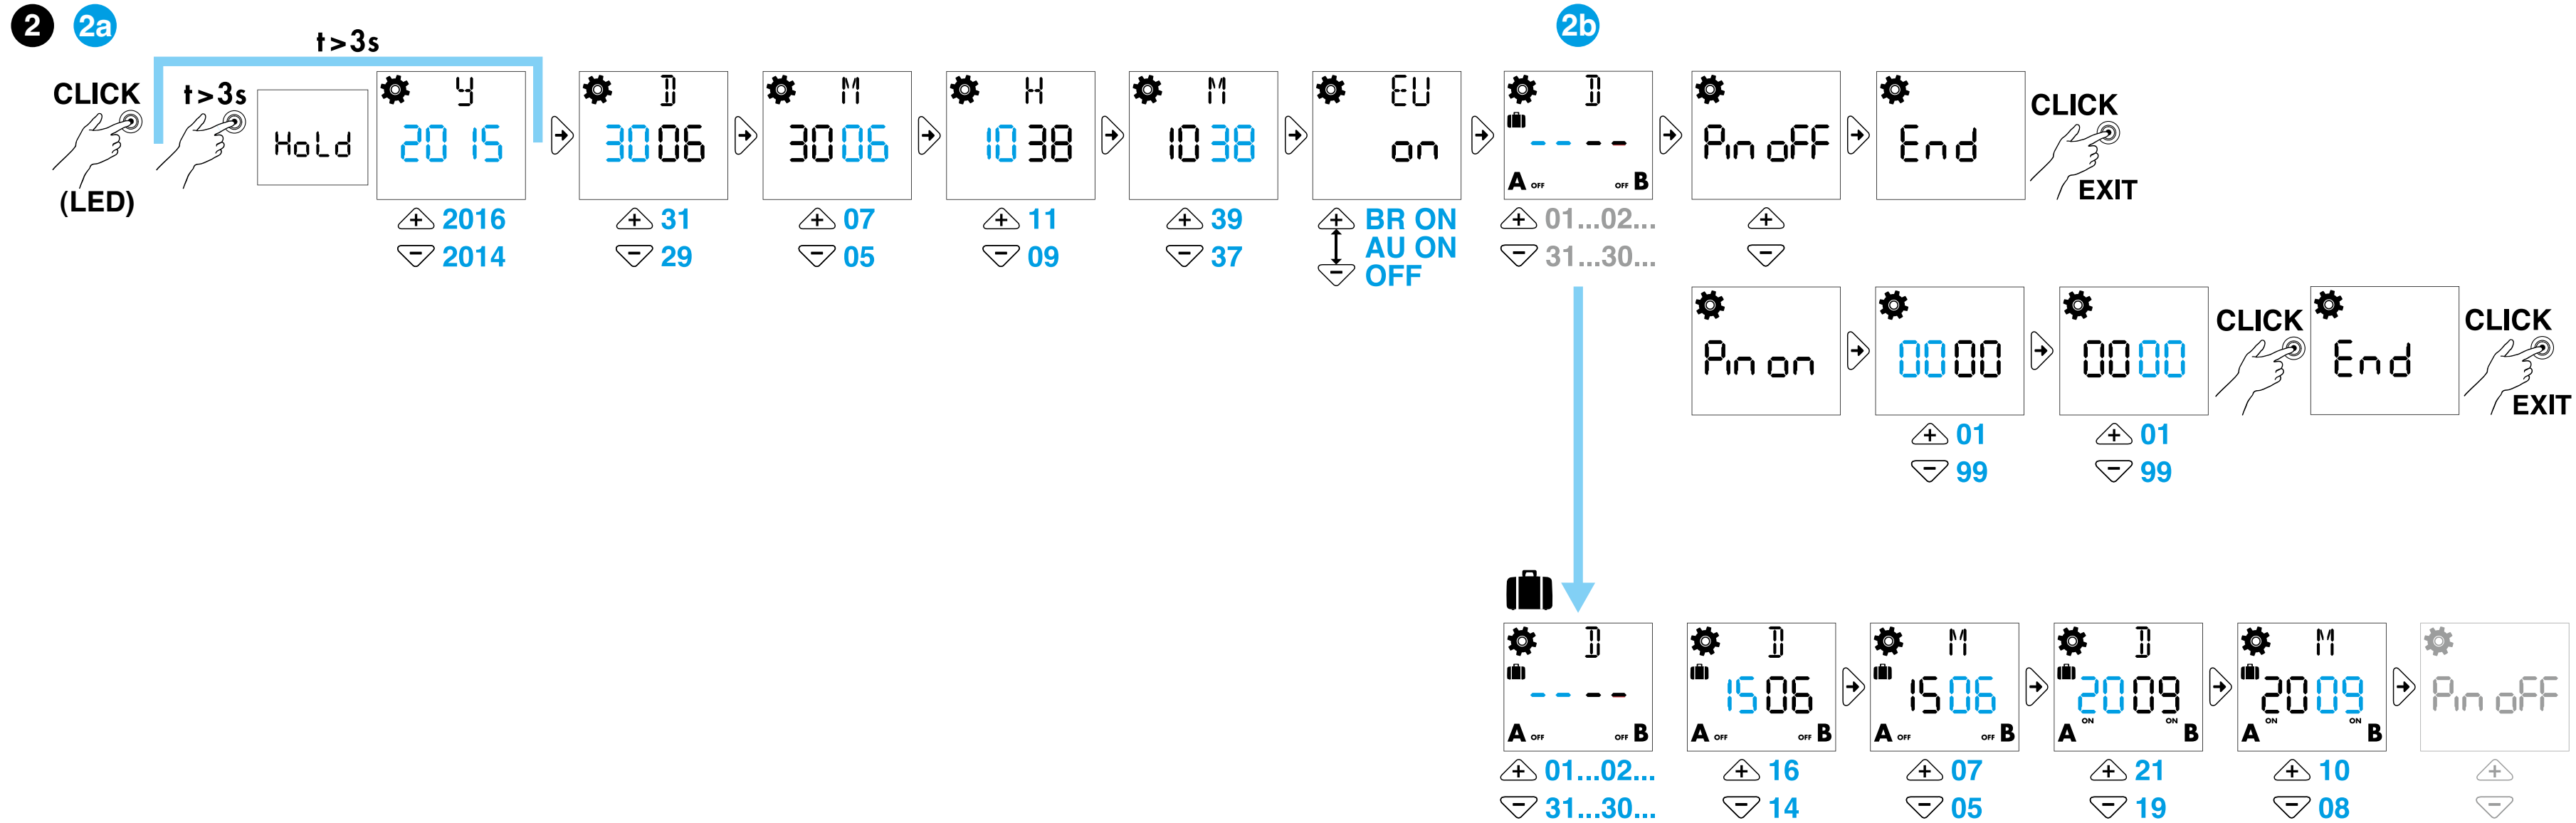


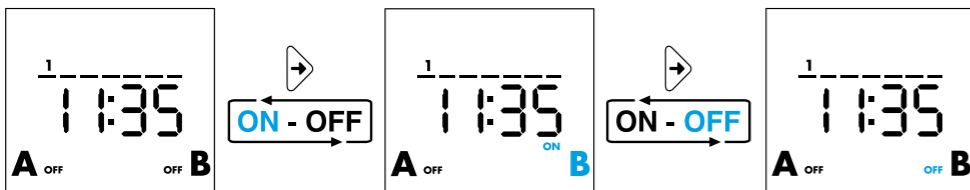

**4****4a****4b****4c****4d****5**

IT CANCELLAZIONE DI TUTTI I PROGRAMMI  
 EN DELETION OF ALL PROGRAM  
 FR SUPPRESSION DE TOUS LES PROGRAMMES  
 DE LÖSCHEN ALLER PROGRAMME  
 NL WISSEN VAN ALLE PROGRAMMA'S  
 PT ELIMINAÇÃO DE TODO PROGRAMA  
 ES BORRAR TODOS LOS PROGRAMAS

HU AZ ÖSSZESES PROGRAM TÖRLÉSE  
 CS ODSTRANĚNÍ VŠECH PROGRAMU  
 PL USUNIĘCIE WSZYSTKICH PROGRAMÓW  
 RO ȘTERGE TOATE PROGRAMELE  
 RU УДАЛЕНИЕ ВСЕХ ПРОГРАММ  
 EL ΔΙΑΓΡΑΦΗ ΌΛΩΝ ΤΩΝ ΠΡΟΓΡΑΜΜΑΤΩΝ  
 AR محو كل البرامج

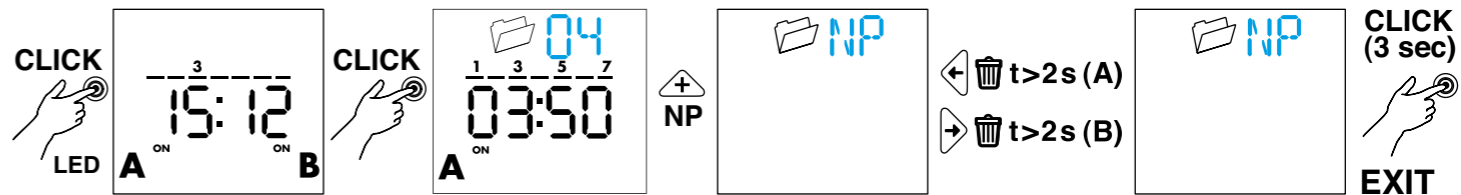**6**

IT CANCELLAZIONE DI UN SINGOLO PROGRAMMA  
 EN DELETION OF SINGLE PROGRAM  
 FR SUPPRESSION D'UN SEUL PROGRAMME  
 DE LÖSCHEN EINES PROGRAMMES  
 NL WISSEN VAN EEN ENKEL PROGRAMMA  
 PT ELIMINAÇÃO DE PROGRAMA INDIVIDUAL  
 ES BORRAR UN PROGRAMA

HU EGY PROGRAM TÖRLÉSE  
 CS ODSTRANĚNÍ JEDNOHO PROGRAMU  
 PL USUNIĘCIE JEDNEGO PROGRAMU  
 RO ȘTERGE UN SINGUR PROGRAM  
 RU УДАЛЕНИЕ ОДНОЙ ПРОГРАММЫ  
 EL ΔΙΑΓΡΑΦΗ ΕΝΟΣ ΠΡΟΓΡΑΜΜΑΤΟΣ  
 AR محو برنامج واحد

