

STARKE *ARVID*

Instructions for Use

Board & Material Lift



Dear Customer!

Thank you for choosing a STARKE ARVID® product.

We have more than 25 years of experience within the construction business. We develop, manufacture and sell equipment intended for professional material management. Starke Arvid´s product assortment includes a total of 20 different products.



Browse in at www.starkearvid.se

General use and safety regulations:

- Maximum load must not be exceeded.
- Place the load centrally on the lifting beam.
- Check for any damage to the wire before use.
- Check for any damage to the castor.
- Use the necessary safety equipment.
- Check the winch according to separate instructions for use.
- Under no circumstances may the lift be driven with a raised load.
- In order to avoid pinning in connection to winching the plastic coated handle should be held.
- When winching down, make sure that the trolley follows smoothly down and does not catch and fall.

General maintenance and care instructions:

- All mobile parts must be greased once a month.
N.B.! there are special greasing and care instructions for the winch, see separatet instructions for use.
- Check all mobile part as well as welding joints, wheels and other material at least once a year.
- Remove any outer rust and coat with anti-corrosive paint..
- Replace worn parts.
- When unsure, contact Alia AB.

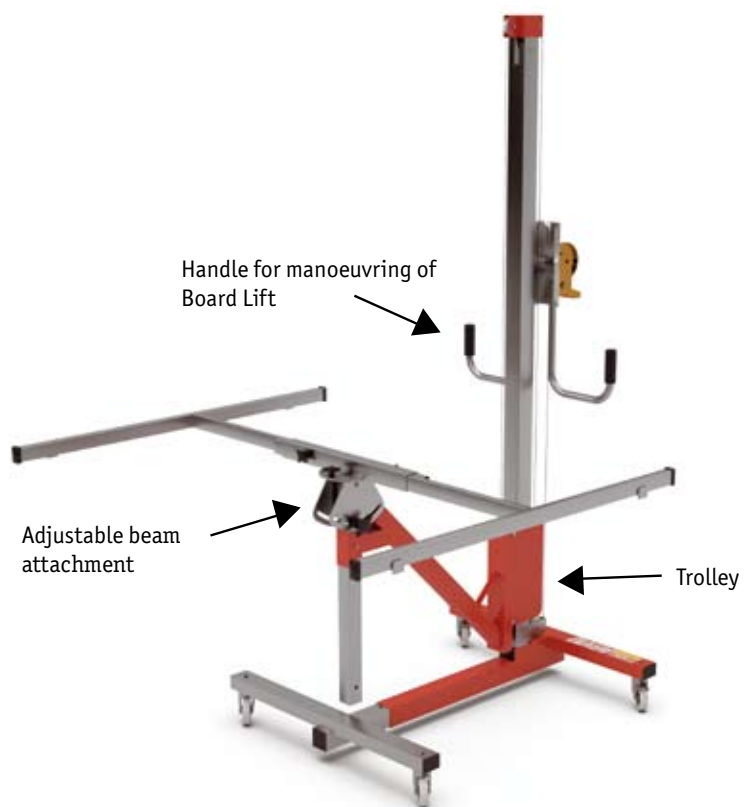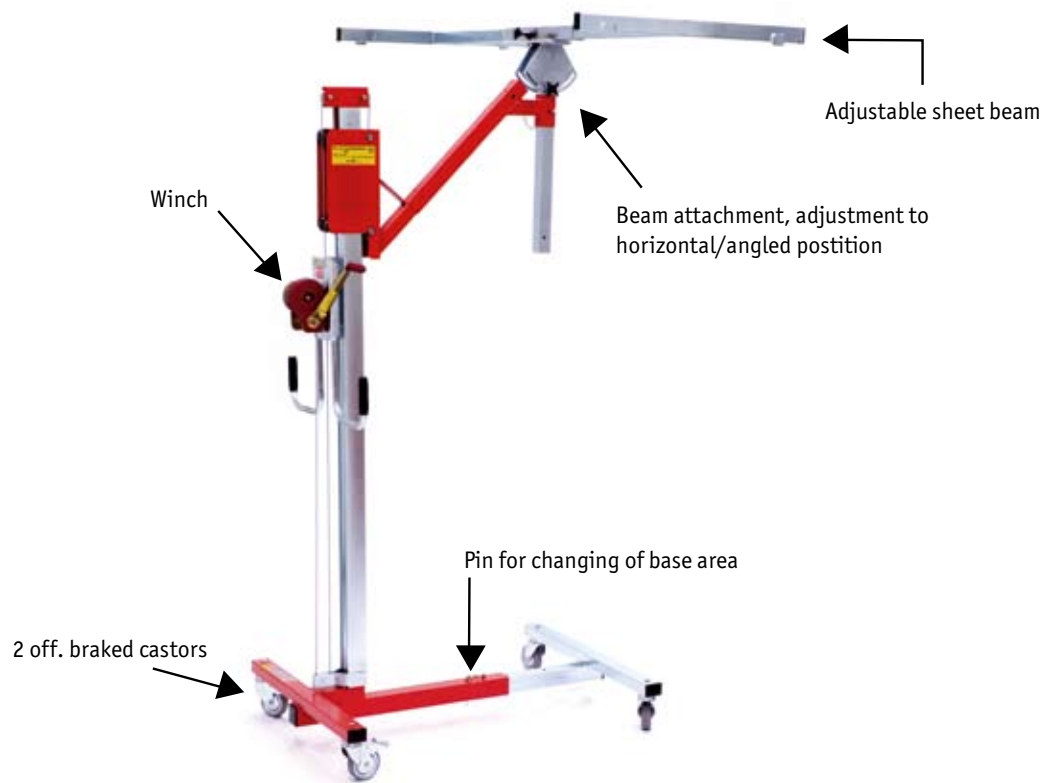




Adjustable chassis



Beam attachment

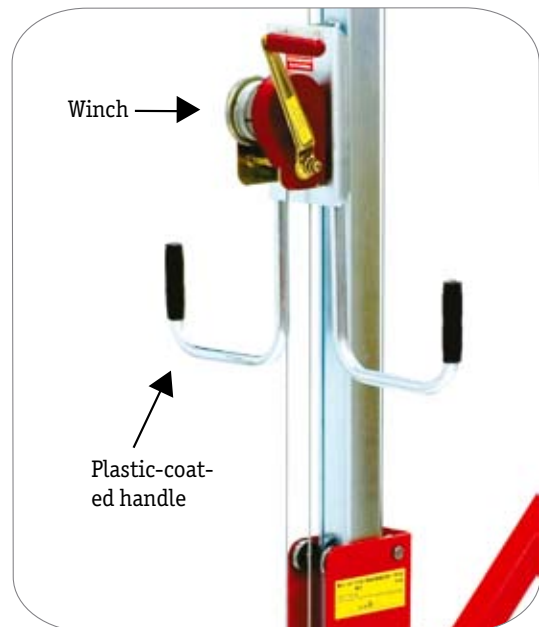

In order to avoid pinching risks when winching, hold the plastic-coated handle.

Extra Equipment



Extender

Technical Data

Board & Material Lift

Board & Material Lift

Extra Equipment:

Article no:	23000	Extender
Maximum load:	100 kg	
Maximum load with extender:	50 kg	
Width:	810 mm	
Length:	810 mm	
Height:	2040 mm	
Lifting height, lower level:	850 - 3,350 mm	
Lifting height, upper level:	1,250 - 3,750 mm	
Lifting height with extender, lower level:	1,950 - 4,450 mm	
Lifting height with extender:	2,450 - 4,950 mm	
Weight:	54 kg	
Wheels (type):	(dubble braked castor with bearings)	
	2 off. 100 mm	
	2 off. braked 100 mm	

Service/Extra parts:

A number of retailers for STARKE ARVID® products are available for your basic security. If you have any questions regarding service or extra parts turn to you nearest retailer or directly to ALIA AB.

Gaurantee:

Under the condition that all instructions for use have been followed, we offer a one-year guarantee according to NL 01.
The product may not be modified by the user.

*Produced and
marketed by:*

Alia AB
Box 93
SE-459 22 LJUNGSKILE

Phone: +46-(0)522 22 000
Fax: +46-(0)522 22 344

office@starkearvid.se
www.starkearvid.se