# RadMan 2LT/2XT

### **Personal radiation monitor**

Operating manual





Narda Safety Test Solutions GmbH Sandwiesenstraße 7 72793 Pfullingen, Germany

® Names and logo are registered trademarks of Narda Safety Test Solutions GmbH and L3 Communications Holdings, Inc. - Trade names are trademarks of the owners.

© 2019 Order no.: 2280/98.21 Published: 05/2019 Earlier edition: --/--.--Subject to change. Our normal guarantee and delivery terms apply. Printed in Germany

### Contents

1	About	this operating manual5
	1.1	Language of the user interface5
	1.2	Used characters and symbols5
2	Gener	al safety instructions7
	2.1	Electromagnetic fields7
	2.2	Using batteries7
	2.3	Device malfunctions
	2.4	Intended use
3	Unpa	
	3.1	Included in the case10
4	About	this device
	4.1	Comparison of key features11
	4.2	Device overview
	4.3	The operating modes
	4.4	Standard conformity14
	4.5	Sensor technology14
	4.6	Body effects
	4.7	Assembly and fastening15
5	Opera	tion18
	5.1	Display and operating elements
	5.2	Power supply
	5.3	Switching the device on/off21
	5.4	Displaying the charge state
	5.5	Switching the integration time (RadMan 2XT only) 23

	5.6 5.7	Changing the operating mode (RadMan 2XT only)24 Displaying the maximum exposure	
6	Data logger25		
7	RadMan 2-TS PC software27		
8	Device firmware		
9	9 Cleaning, maintenance, repair		
	9.1	Cleaning	
	9.2	Performing calibration	
	9.3	Warning messages and troubleshooting	
		in the event of faulty self-test	
	9.4	Changing the batteries	
	9.5	Repair	
10	Disposal		
	10.1	Disposing of RadMan 234	
	10.2	Disposing of batteries	
11	Technical data35		
	11.1	Product properties	
	11.2	Declaration of conformity	
12	Ordering information40		
	12.1	Radiation monitor sets	
	12.2	Optional accessories	
13	RadM	an 2LT quick reference guide42	
14	RadM	an 2XT quick reference guide44	

## 1 About this operating manual

### 1.1 Language of the user interface

In this operating manual, the user interface is described using English terms.

### 1.2 Used characters and symbols

In this operating manual, various elements are used to indicate special text meanings or especially important text passages.

#### Symbols and terms used in warnings

In accordance with American National Standard ANSI Z535.6-2011, the following warnings, symbols and terms are used in this document:

	The general danger symbol warns of risk of serious injury when used with the signal words <b>CAUTION</b> , <b>WARNING</b> and <b>DANGER</b> . Follow all the instructions in order to avoid injuries or death.
NOTICE	Indicates a hazardous situation which, if not avoided, results in damage to or destruction of the device.
CAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

#### Structure of warnings

### **▲ SIGNAL WORD**

#### Type and source of the danger

Consequences resulting from non-observance

 $\Rightarrow$  Action for danger avoidance

#### Symbols and marks

✓	Prerequisite	
	Indicates a prerequisite that must be satisfied before one of the	
	following actions is performed, e.g.:	
	<ul> <li>You are in the measurement display.</li> </ul>	
⇒	Action	
	Indicates a single action, e.g.:	
	$\Rightarrow$ Switch on device.	
1.	Sequence of actions	
2.	Indicates a sequence of actions that must be performed in the	
3.	specified order.	
Ŕ	Result	
	Indicates the result of an action, e.g.:	
	rightarrow The device starts a self-test.	
Bold text	t Operating element or menu name	
	Indicates operating elements and menu names, e.g.:	
	$\Rightarrow$ Press the <b>OK</b> button.	
NOTE:	Important additional information or notes regarding exceptions	
	and special cases.	

## 2 General safety instructions

### 2.1 Electromagnetic fields

### \land WARNING

#### Strong electromagnetic fields

## Very strong electromagnetic fields occur near many radiation sources.

- $\Rightarrow$  Observe safety barriers and markings.
- $\Rightarrow$  In particular, persons with electronic implants must keep away from dangerous areas.

### 2.2 Using batteries

### 

#### Unsuitable environmental conditions

# Excessively high temperatures and air humidity can result in a short circuit that can start a fire. Injuries or destruction of the batteries may result.

- $\Rightarrow$  Observe the data sheet for storing the device and batteries.
- ⇒ Periodically check whether the storage temperature and air humidity are within the specified limits.
- ⇒ Do not leave discharged batteries in the measurement device for extended periods of time.
- $\Rightarrow\,$  Do not store the batteries for longer than six months without charging from time to time.
- $\Rightarrow$  The batteries must not be stored with other metal objects.
- ⇒ Long storage reduces the capacity of the battery and shortens the expected functional life. The housing can also be damaged from within by escaping electrolyte.

### 2.3 Device malfunctions

### NOTICE

#### Malfunction

Improper use, damages and unauthorized repairs can affect the accuracy and function of the device.

- $\Rightarrow\,$  Only operate the device under the conditions and for the purposes for which it was designed.
- $\Rightarrow$  Periodically inspect the device for damages.
- $\Rightarrow$  Only have repairs performed by specialists.

### 2.4 Intended use

The RadMan 2LT/2XT radiation monitors are warning devices for the protection of people who work in areas where increased levels of electromagnetic radiation are present. Broadcasting, telecommunications and radar antennas are examples of sources of strong high-frequency radiation. Transmission systems can often not be completely shut down. Should this be necessary, a check must be performed to determine whether the shutdown has actually occurred. In these situations, a personal monitor provides safety. The device is worn on the body and warns the user in good time before the impermissible limit values are exceeded.

## 3 Unpacking

The packaging is designed so that it can be reused if not damaged during a prior transport. Thus, the original packaging can be used in all further transports.

The device and accessory parts may exhibit transport damages especially if the packaging has already been clearly damaged.

#### Check for completeness and damages:

⇒ Remove device and accessories from the case and check for completeness as well as any transport damages.

#### CAUTION! Do not operate a damaged device.

⇒ In the event of an incomplete delivery and damages to the device or accessories, please contact your Narda sales partner. You can find the Narda sales partner responsible for you on the Narda website at www.narda-sts.com.

### 3.1 Included in the case



No.	Description	
1	RadMan 2LT/2XT Basic unit with two installed batteries and mounting adapter	
2	USB-2.0 cable, Operating manual, Fastening strap and Lanyard	
3	Power supply with manufacturer's manual (optional)	
4	Allen wrench 1.5 mm	
5	Car charger adapter (optional)	
6	Carrying case	

For further information on orders, scope of delivery and optional accessories, see *Ordering information* on page 40.

## 4 About this device

The RadMan 2LT/2XT monitors are worn on the body and warn of electromagnetic radiation. As part of the exposure determination, the device outputs acoustic, vibration and LED warning signals as soon as the limit values defined in the standards are exceeded.

### 4.1 Comparison of key features

RadMan 2LT	RadMan 2XT		
Frequency range up to 8 GHz	Expanded frequency range (up to 60 GHz) enables warning of excessive microwave signals, radar signals and 5G millimeter waves		
Monitoring of E-fields and H-fields	elds with frequency response evaluation		
Automatic sensor function test	when switching on		
800 hours of operating time with one battery charge			
USB-C interface for fast data transfer and for charging the batteries			
RF absorber minimizes body effects			
Isotropic monitoring away from the body by simply releasing from the holder			
Tripod thread for mounting an	extension rod		
Data logger	Data logger with increased memory capacity and configurable recording intervals		
Fixed integration time of 1 s	Switchable integration time (1 s/30 ms)		
-	RF Detection Mode with tone search function (RF detection) for precise localization of leaks		

### 4.2 Device overview



Figure 1: Product views of RadMan 2XT and mounting adapter

atus
ging

### 4.3 The operating modes

In addition to the standard **Monitor** operating mode of the RadMan 2LT, RadMan 2XT offers the **RF Detection** operating mode.

	Monitor	RF Detection (2XT only)
Application	Warning: Electromagnetic radiation	<ul> <li>Detection of high- frequency continuous signals or pulsed signals</li> <li>Leakage search on waveguides</li> <li>Check to determine whether antennas are actually switched off</li> </ul>
Integration time	<ul><li> 2LT: 1 s</li><li> 2XT: 1 s of 30 ms</li></ul>	• 30 ms
Field exposure display	<ul> <li>5 – 200%, individual red LED indicates measurement value for E- or H-field (whichever is higher)</li> </ul>	<ul> <li>5 – 200%, red LEDs as bar display</li> <li>Acoustic signal above 5%, sound becomes higher with increasing value</li> </ul>
Alarm threshold 1 50% exposure and higher <sup>1</sup> )	<ul> <li>Alarm LED flashes slowly</li> <li>Alarm signal sounds slowly</li> <li>Slow vibration</li> </ul>	<ul><li>Alarm LED flashes slowly</li><li>Slow vibration</li></ul>
Alarm threshold 2 100% exposure and higher <sup>1)</sup>	<ul> <li>Alarm LED flashes rapidly</li> <li>Alarm signal sounds rapidly</li> <li>Fast vibration</li> </ul>	<ul><li>Alarm LED flashes rapidly</li><li>Fast vibration</li></ul>
Data logger	Activated	Deactivated

1) The alarm signals switch off once the limit values are no longer exceeded.

### 4.4 Standard conformity

The permissible limit values specified in the standards are frequency-dependent. Weighting filters in the sensors of the RadMan 2 simulate the frequency response of the standard. They ensure that the alarm thresholds are correct over the entire frequency range. Settings are not necessary. Underlying safety standards:

- ICNIRP 1998 / Occupational (corresponds to Directive 2013/35/EU)
- FCC 96-326 / Occupational
- · Canada Safety Code 6 (2015) / Controlled
- · ICNIRP 1998 / General Public, E-Field (RadMan 2LT only)

### 4.5 Sensor technology

At close range to a radiation source, the otherwise fixed relationship between an electric field and magnetic field no longer applies. Both field types must therefore be checked. RadMan 2 is equipped with E-field and H-field sensors and thus warns reliably, independent of the distance to the radiation source.

#### Automatic sensor test

The newly developed sensor test tests the proper function of the individual sensors each time the device is switched on. The device no longer needs to be tested with a test generator prior to beginning work.

### 4.6 Body effects

The radiation monitors are mainly worn on the body. For simple fastening to a climbing harness or belt, RadMan 2 includes a suitable holder with integrated RF absorber. The RF absorber reduces the signal reflections caused by the body that would affect the results output by the monitor. If necessary, the RadMan 2 can be removed from the holder with one hand to determine the field exposure off the body with isotropic directional response. An elastic safety lanyard between the device and holder protects the device from falling down.

### 4.7 Assembly and fastening


### 4.7.1 Attaching the safety lanyard

Monitor and mounting adapter (holder) can be connected to one another using a safety lanyard. This protects the monitor from falling down if it is removed from the case attached to the body. The safety lanyard can very easily be removed from the holder by means of a carabiner.

#### Connecting the safety lanyard to the monitor

On the monitor, the mounting loop of the safety lanyard is threaded through the opening on the bottom of the housing.


- 1. Fold down the cover cap on the bottom of the housing.
- 2. Push the mounting loop through the opening of the cover cap.
- **3.** Thread the mounting loop through the opening above the threaded connection, pull up and out on the rear side and place around the two notches at the front.
- 4. Tighten the loop.
- 5. Close the cover cap again.

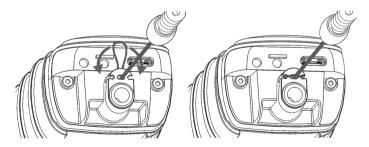

#### Connecting the safety lanyard to the mounting adapter

The safety lanyard is secured to the mounting adapter via the carabiner.

- ✓ Monitor is separated from the mounting adapter.
- $\Rightarrow\,$  Push the carabiner into the mounting adapter from below and attach to the bracket.

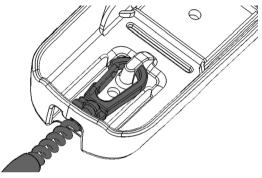

**NOTE:** By releasing the carabiner, the monitor can easily be removed from the mounting adapter. The monitor is then no longer protected against falling down, however!

### 4.7.2 Fastening the monitor to the body

The mounting adapter is intended to be attached to a climbing harness or a belt. For this purpose, the mounting adapter is secured to the desired position with the supplied fastening strap. The buckle allows the mounting adapter to be attached and released quickly.

#### Attaching the mounting adapter:

- 1. Guide the fastening strap through the two slots of the mounting adapter (Figure 2, **a**):
  - To fasten to a climbing harness: use longitudinal slots.
     The buckle should be located to the right of the mounting adapter and the fastening tab should point upward.
  - To fasten to a belt: use horizontal slots.
     The buckle should be located at the bottom and the fastening tab should point upward.
- 2. Place the fastening strap around the climbing belt strap or the belt and thread through the buckle.

The end of the strap is sewn down to prevent the device from accidentally slipping out (Figure 2, **b**). When releasing the strap, press the sewn-down part against the strap and pull out of the buckle.

3. Tighten the fastening strap and close the buckle (Figure 2, c).

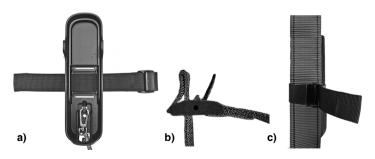


Figure 2: Attaching the mounting adapter

## 5 Operation

### 5.1 Display and operating elements

Element	Name	Function
(	<b>Operating button</b> On the device side (see figure 1, <b>4</b> )	<ul> <li>Switch on/off</li> <li>Select operating modes (2XT)</li> <li>Select integration times (2XT)</li> <li>Display maximum exposure</li> </ul>
5200%	Exposure LEDs	<ul> <li>6 red LEDs for displaying:</li> <li>Exposure (5/10/25/50/100/200%)</li> <li>Charge state</li> <li>Error codes</li> </ul>
	Alarm LED	Flashes red in the event of an alarm.
( <sup>1</sup> )	Power LED	Flashes green during operation.
Pulse	Pulse LED (RadMan 2XT only)	<ul> <li>Illuminates red:</li> <li>in Monitor Mode: integration time = 30 ms</li> <li>in RF Detection Mode</li> </ul>
	Battery status LED	<ul> <li>While charging:</li> <li>flashes green: batteries are charging</li> <li>illuminates green: batteries are fully charged</li> <li>In operation:</li> <li>illuminates green: after switching on, as long as the remaining capacity is displayed</li> <li>flashes red: remaining capacity &lt; 5%</li> </ul>

### 5.2 Power supply

As standard, power is supplied by two NiMH batteries of type AA (Mignon).

#### 5.2.1 Operation with batteries

The device is delivered with partially charged batteries. The batteries must be fully charged prior to the first use, however. Charging can be performed at the USB-C connection via a suitable USB port (e.g., on a PC) or with a standard USB charger (min. 500 mA charging current). The fully charged batteries can supply power for an operating duration of approx. 800 hours (without alarm).

**NOTE:** Already a short battery charging time of approx. 5 minutes allows the device to be used for up to 8 hours.

#### 5.2.2 Operation with non-rechargeable batteries

**NOTE:** Operation with non-rechargeable batteries is **not recommended**, but is, in principle, possible.

Regardless of the use of non-rechargeable batteries, charging is started when a USB connection is made or when the charger is connected. Therefore, be certain to observe the following warning instruction.

### 

#### Use of non-rechargeable batteries

When using non-rechargeable batteries, establishing a USB connector or connecting the charger results in an impermissible charging process. This may cause the batteries to explode and lead to severe injuries.

- $\Rightarrow$  If non-rechargeable batteries are used, do not establish a USB connection and do not connect the charger.
- ⇒ Only use non-rechargeable batteries if absolutely necessary and replace with rechargeable batteries as quickly as possible.

### 5.2.3 Charging batteries

### 

#### Improper charging and discharging

Improper charging or discharging may result in an explosion, a fire or the release of chemical substances. This may lead to injuries or the destruction of the batteries.

- $\Rightarrow\,$  Only charge the rechargeable batteries as described in this operating manual.
- $\Rightarrow$  The charging temperature must be between 0 °C and +40 °C.

#### Starting the charging process:

⇒ Connect the USB-C connection of the RadMan 2 to a suitable USB port (e.g., PC) using the supplied USB cable.

– or –

Connect the USB-C connection of the RadMan 2 to the power grid using one of the optionally available chargers or other standard charger.

## ATTENTION! The mains voltage must correspond to the permissible operating voltage of the charger.

- The charging process begins; the **Battery** LED flashes green during the charging process. It takes up to 8 hours to fully charge.
- Solution of the sector of the

For further information on the various battery status displays, see *Displaying the charge state* on page 22.

### 5.3 Switching the device on/off

#### 5.3.1 Switch on the device

#### $\Rightarrow$ Press the **operating button** for at least 1 s.

Each time the device is switched on, an automatic self-test including sensor function test is performed. During the self-test, all LEDs must illuminate for 3 seconds. The remaining capacity of the rechargeable batteries is then displayed for 3 seconds; the battery status LED also illuminates green during this time. Afterwards, the self-test is concluded and the green Power LED flashes. The following results are possible:

Signals	Result/measures		
1 short beep	<ul> <li>No errors were detected and the device is fully functional.</li> <li>The device switches to the Monitor operating mode.</li> </ul>		
<ul> <li>3 short beeps:</li> <li>Battery status LED flashes red</li> </ul>	<ul> <li>✓ No errors were detected and the device is fully functional.</li> <li>✓ Battery with remaining capacity &lt; 5%</li> <li>♥ The device switches to the Monitor operating mode.</li> <li>♥ The rechargeable batteries should be charged within the next 10 hours (see <i>Charging batteries</i> on page 20).</li> </ul>		

#### 5 Operation

Signals	Result/measures	
<ul> <li>3 short beeps:</li> <li>Individual exposure LEDs flash for 5 s</li> </ul>	<ul> <li>▲ At least one error has occurred; the device can be used, however.</li> <li>♥ The device switches to the Monitor operating mode.</li> <li>⇒ For warning messages, see page 31.</li> </ul>	
<ul> <li>3 x 3 short beeps:</li> <li></li> <li>All 6 exposure LEDs flash</li> </ul>	▲ A serious error has occurred. ⇒ Do not use the device; switch it off. ↔ The device must be repaired (see <i>Repair</i> on page 33).	

#### 5.3.2 Switch off the device

- $\Rightarrow$  Press the **operating button** for at least 2 s.
  - ✤ The alarm LED illuminates.
  - ✤ A long beep sounds.
  - ✤ The device is switched off.

### 5.4 Displaying the charge state

The charge state is displayed in the individual operating phases to provide information about the remaining charge capacity at all times:

#### When switching on the device

- **I** illuminates green.
- The exposure LEDs display the remaining capacity as a bar.
- After 3 s, the display changes to the Monitor operating mode.

#### In operation

#### Charge state > 5% remaining capacity

No display

#### Charge state < 5% remaining capacity

- • I flashes red.
- $\Rightarrow$  The rechargeable batteries should be charged within the next 10 hours (see *Charging batteries* on page 20).

#### When charging

#### **During charging:**

- • I flashes green.
- While switched off, the exposure LEDs indicate the already charged capacity as a bar.

#### After completing the charging process:

- **I** illuminates green.
- The exposure LEDs illuminate as a bar up to 100%.

# 5.5 Switching the integration time (RadMan 2XT only)

In the Monitor operating mode, the integration time of the measurement can be set to 1 s or 30 ms. For the reliable detection of brief or pulsed fields, the short integration time of 30 ms is recommended.

#### Setting the integration time:

- ✓ The device is switched on and in the Monitor operating mode (default).
- ✓ After switching on, the integration time is set to 1 s.
- $\Rightarrow$  Press () 3x.
  - $\clubsuit$  The integration time changes to 30 ms.
  - ♥ Three short beeps sound and the **Pulse** LED illuminates continuously.
- $\Rightarrow$  Press () 3x.
  - The integration time changes back to 1 s.
  - $\diamondsuit$  One long beep sounds.

NOTE: After switching on, the last set integration time is applied.

# 5.6 Changing the operating mode (RadMan 2XT only)

With the RadMan 2XT, it is possible to switch between the Monitor and RF Detection operating modes. In the RF Detection operating mode, the integration time is permanently set to 30 ms to allow rapid changes to be detected.

- ✓ The device is switched on and in the Monitor operating mode (default).
- $\Rightarrow$  Press (') 2x.
  - Sky **RF Detection** is active.
  - ✤ The Pulse LED illuminates.
- $\Rightarrow$  Press () 2x again to return to the Monitor operating mode.
- **NOTE:** After switching back to the Monitor operating mode, the integration time last set there is used again.

### 5.7 Displaying the maximum exposure

A maximum value display shows the highest exposure since the last time the device was switched on.

- ✓ The device is switched on.
- $\Rightarrow$  Press () 1x.
  - ✤ The maximum exposure is indicated by the exposure LEDs.
  - ✤ After 5 s, the display returns to the current exposure.
- **NOTE:** With the RadMan 2XT, the maximum value for the two operating modes Monitor and RF Detection is determined separately. The maximum value of the selected operating mode is displayed.

## 6 Data logger

The RadMan 2 continuously stores the exposure values for the E-field and the H-field and adds a time stamp to each record. The recorded data can be read out and analyzed using the PC software (see *RadMan 2-TS PC software* on page 27).

The data logger begins recording automatically after the device is switched on. A new record is created each time the device is switched on. Recording must occur for at least 1 minute to create a record.

With the **ring memory concept**, older data is deleted after the maximum storage volume is reached. Thus, storage is not limited by time. The following table shows the available storage volumes.

	RadMan 2LT	RadMan 2XT
Recorded data	value of the exposu and with time stam field.	verage value and minimum re for each recording interval p, separate for E-field and H- s can be adapted to different ter on.
Maximum number of records	2,880 events	100,000 events

	RadMan 2LT	RadMan 2XT
Recording interval	1 min	Factory setting: 1 min Adjustable via PC software in steps of 1 s to 6 min or can be switched off
Recording time until data is overwritten	48 h	<ul> <li>at 1 s: approx. 27 h</li> <li>at 1 min (default): 1,667 h (approx. 69 days)</li> <li>at 6 min: 10,000 h (approx. 416 days)</li> </ul>


**NOTE:** RadMan 2XT: The data logger is deactivated in the RF Detection operating mode.

## 7 RadMan 2-TS PC software

The following functions are available:

- · Read out and analyze the data stored in the data logger
- Save the data in the integrated database
- · Perform live measurements of current exposure values
- · Configuration of the RadMan 2 (e.g., setting the local time; CET is preset)

The software is not supplied with the device but can be downloaded free of charge from the Narda website at www.narda-sts.com.

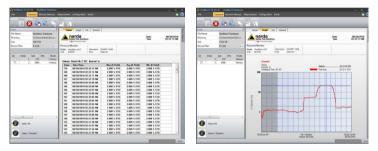

- Figure 3: Tabular and graphical depiction of stored values with the help of RadMan 2-TS PC software.
- **NOTE:** The RadMan 2-TS PC software can be installed on all computers with the Microsoft Windows 7 operating system or newer.

#### Connecting the device to the PC software:

- 1. Download and install the PC software from www.narda-sts.com (installation requires administrator rights).
- 2. Connect the switched-off RadMan 2 to the PC using a USB cable.
- 3. Open the PC software.
  - The connected device is automatically detected.
- 4. Click on the **Connect** icon in the PC software.
  - ✤ The connection to the device is established.

The content read out from data logger can be analyzed on the PC and stored in the integrated database.

The ring memory of the data logger does not require any deletion of data. It is, however, possible to delete the data with the **Delete** icon.

Live measurements are also possible with the RadMan 2.

 $\Rightarrow\,$  You can find further information on using the PC software in the online help of the PC software.

## 8 Device firmware

When available, new firmware versions are made available for download on the www.narda-sts.com website.

The download consists of a flash tool as executable .exe file which the user can use to quickly and easily update the firmware.

Prerequisite for the flash tool is the installed Microsoft .NET Framework, version 3.5 or higher (included standard with Windows 7 and higher).

NOTE: Updating the device firmware does not require administrator rights.

#### Updating firmware:

- Device is switched on or off.
- 1. Connect device to the PC with the USB cable.
- 2. Start the flash tool with the executable .exe file.
  - $\clubsuit$  The firmware will be updated within 10 s.

## 9 Cleaning, maintenance, repair

### 9.1 Cleaning

### NOTICE

#### Unsuitable cleaning methods

Solvents can damage the RadMan 2 or the charger. Water can damage the charger.

- ⇒ Do not use solvents to clean the RadMan 2 and charger. As cleaning fluid, we recommend the use of lukewarm water to which a drop of liquid detergent has been added.
- $\Rightarrow\,$  To clean the charger, use only a slightly damp cloth. Never allow water to enter the charger.
- $\Rightarrow$  If necessary, wipe down the still-damp device parts with a dry cloth.

### 9.2 Performing calibration

Narda recommends recalibrating the device after 36 months. For new devices, this recommendation applies from the date of commissioning by the customer. Depending on the conditions in which the device is used, you may independently decide to define other calibration intervals.

⇒ For calibration, send the device to your Narda sales partner. You can find the Narda sales partner responsible for you on the Narda website at www.narda-sts.com.

### 9.3 Warning messages and troubleshooting in the event of faulty self-test

Each time the device is switched on, an automatic self-test is performed. A warning message occurs any time certain functions (with the exception of the warning function) of the device are affected. In this case, the device can continue to be used and reliably warns of excessively high electromagnetic radiation but should, however, be serviced soon.

**NOTE:** If the warning function is affected, the device can no longer be used. In this case, please contact your Narda sales partner. You can find the Narda sales partner responsible for you on the Narda website at www.narda-sts.com.

The following table shows all possible warning messages and the possibilities for rectifying:

Signals	Error	Troubleshooting
<ul> <li>3 short beeps:</li> <li></li> <li>5% LED flashes for 5 s</li> </ul>	Real Time Clock RTC incorrect Device time is incorrect and reset to the default value of 2000-01-01 00:00	<ol> <li>Connect device to PC.</li> <li>Start the RadMan 2-TS PC software.</li> <li>Resynchronize date/time.</li> </ol>
<ul> <li>3 short beeps:</li> <li></li> <li>10% LED flashes for 5 s</li> </ul>	Data Logger Malfunction Faulty data recording by the data logger	<ol> <li>Connect device to PC.</li> <li>Start the RadMan 2-TS PC software.</li> <li>Delete the content of the data logger in the Device Memory menu.</li> <li>If the error message persists, the device must be repaired (see <i>Repair</i> on page 33).</li> </ol>

### 9.4 Changing the batteries

### 

#### Wrong polarity

The batteries can explode if installed with the wrong polarity. This will destroy the device.

 $\Rightarrow\,$  Observe the marking for the plus and minus pole in the battery compartment.

The batteries can be changed by the user. It may be necessary to change the batteries if the operating duration with fully charged batteries significantly decreases.

- **NOTE:** Observe the regulations regarding the disposal of batteries, both rechargeable and non-rechargeable (see *Disposal* on page 34).
- ✓ Use suitable rechargeable batteries: 2x NiMH, type AA (Mignon).
- 1. Open the protective cap (1) on the bottom end of the RadMan 2.
- 2. Loosen 2 Allen screws (2) with the Allen wrench (1.5 mm).
- 3. Remove the battery cover (3).
- 4. Remove and replace the rechargeable batteries (4).
- 5. Mount the battery cover and tighten the Allen screws.
- 6. Close the protective cap.

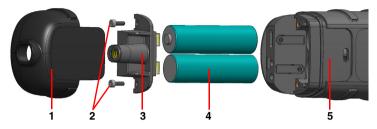


Figure 4: RadMan 2 battery compartment

No.	Description	No.	Description
1	Protective cap (Photo shows the entire cap. To change the batteries, it suffices to open the cap.)		
2	2x Allen screws	4	Batteries
3	Battery cover	5	RadMan 2

### 9.5 Repair

Repairs may only be performed by qualified specialists.

 $\Rightarrow\,$  For more information, please contact your Narda sales partner or visit www.narda-sts.com.

## 10 Disposal

### 10.1 Disposing of RadMan 2

The RadMan 2LT/2XT is a high-quality device that can be expected to function for a long time. Nevertheless, this device will eventually reach the end of its service live. At that time, be aware that electrical devices must be properly disposed of.

The RadMan 2LT/2XT complies with the WEEE Directive of the European Union (2002/96/EC) and belongs to Category 9 (monitoring and control instruments).



As the manufacturer, you can return the device to Narda free of charge for proper environment-friendly disposal.

For more information, please contact your Narda sales partner or visit www.narda-sts.com.

### 10.2 Disposing of batteries

During normal use, no environmental damage is caused by the batteries. Both rechargeable and non-rechargeable batteries are, however, special waste and must be disposed of separately after use as they contain hazardous chemicals.

Both types of batteries must only be disposed of through an approved takeback system. Under no circumstances may batteries be disposed of with household waste.

## 11 Technical data

### 11.1 Product properties

#### **General data**

	RadMan 2LT/2XT
Recommended calibration interval	3 years, beginning 3 years after commissioning
Power supply	2 replaceable NiMH rechargeable batteries, type AA (Mignon), chargeable via USB connection.
Operating time/ charge duration (typ.)	800 h operation (without alarm)/charge duration < 8 h
Temperature range	Operation: -10 °C to +55 °C (14 °F to 131 °F)
	Transport: -40 °C to +70 °C (-40 °F to 158 °F)
Air humidity	5% to 95%, non-condensing (≥ 29 g/m <sup>3</sup> , IEC 60721-3-2 Class 7K2)
Ingress protection	Protection class IP65 (dust-tight and protected against water jets)
Dimensions (H x W x D)	165 mm x 47 mm x 31 mm (6.5 in x 1.85 in x 1.22 in) without mounting adapter
Weight	185 g (0.4 lb) without mounting adapter
Country of origin	Germany

#### Specifications

	RadMan 2LT	RadMan 2XT
Sensors	Isotropic E-field and H-field sensors, diode-based system (only E-field sensors for models for the general population)	
Directionality	Isotopic (3-axis)	
Absorber	Yes, integrated in mour	nting adapter
Integration time of input signal	1 s Switchable between 1 s and 30 ms (Pulse)	
Type of frequency response	Shaped response (weighted) according to a safety standard (see <i>Ordering information</i> on page 40)	
Frequency range E-field	50 MHz to 8 GHz	<ul> <li>900 kHz to 60 GHz (ICNIRP models)</li> <li>3 MHz to 60 GHz (FCC models</li> <li>10 MHz to 60 GHz (SC6 models)</li> </ul>
Frequency range H-field	50 MHz to 1 GHz	<ul> <li>27 MHz to 1 GHz (ICNIRP, SC6 models)</li> <li>3 MHz to 1 GHz (FCC models)</li> </ul>
Sensitivity	< 1% of standard	
Display	<ul><li> 6 level LEDs</li><li> 1 power LED</li><li> 1 battery LED</li></ul>	<ul> <li>6 level LEDs</li> <li>1 power LED</li> <li>1 pulse LED</li> <li>1 battery LED</li> </ul>
RF exposure display	5/10/25/50/100/200% of standard (with respect to the power density)	

	RadMan 2LT	RadMan 2XT
Alarm display	<ul> <li>Visual: %-level LEDs, 2 bright alarm LEDs (270° viewing angle)</li> <li>Audio: alarm buzzer (approx. 85 dBA at 30 cm) and vibration</li> </ul>	
Alarm thresholds	<ul><li>Alarm 1: 50%</li><li>Alarm 2: 100%</li></ul>	
Alarm signal	<ul><li>Alarm 1: 2 Hz buzzet</li><li>Alarm 2: 4 Hz buzzet</li></ul>	0
Overload limit (sinusoidal continuous signal)	20 dB over standard, but not more than 10 kV/m or 26.5 A/m	
Overload limit (impulse signals)	40 dB over standard for pulse widths < 10 $\mu$ s, but not more than 100 kV/m or 265 A/m	
ELF immunity at 50/60 Hz	10 kV/m	
Data interface	USB type C	
Data logger (ring me	mory)	
Number of records	2,880 events	100,000 events
Recording intervals	1 min	Factory setting:1 min, via PC 1 s to 6 min or off
Recording time	48 h	Approx. 27 h to approx. 416 days
Recorded data	Exposure values max./avg./min. with time stamp, separate for E-field and H-field	

#### Frequency response/isotropy

Field	RadMan 2LT	RadMan 2XT
ICNIRP 1998, General Public		
Е	±3.5 dB (50 MHz to 8 GHz)	Not available
ICNIRP	1998, Occupational (correspond	ds to Directive 2013/35/EU)
E	±3.5 dB (50 MHz to 8 GHz)	<ul> <li>±3 dB (900 kHz to 10 GHz)</li> <li>+6/-3 dB (&gt; 10 to 20 GHz)</li> <li>+10/-3 dB (&gt; 20 to 60 GHz)</li> </ul>
Н	±3 dB (50 MHz to 1 GHz)	±3 dB (27 MHz to 1 GHz)
FCC 96-326, Occupational		
E	±3.5 dB (50 MHz to 8 GHz)	<ul> <li>±3 dB (3 MHz to 10 GHz)</li> <li>+6/-3 dB (&gt; 10 to 20 GHz)</li> <li>+10/-3 dB (&gt; 20 to 60 GHz)</li> </ul>
Н	±3 dB (50 MHz to 1 GHz)	±3 dB (3 MHz to 1 GHz)
Safety	Code 6 (2015), Controlled	<u> </u>
E	<ul> <li>+4/-3 dB (50 MHz to 3 GHz)</li> <li>+6/-3 dB (3 GHz to 8 GHz)</li> </ul>	<ul> <li>+4/-3 dB (10 MHz to 10 GHz)</li> <li>+6/-3 dB (&gt; 10 to 20 GHz)</li> <li>+11/-3 dB (&gt; 20 to 60 GHz)</li> </ul>
Н	+4/-3 dB (50 MHz to 1 GHz)	+4/-3 dB (27 MHz to 1 GHz)
Isotropic response		
Е	±1 dB (< 2.7 GHz)	
Н	±1 dB (< 500 MHz)	

**NOTE:** Values in the positive range of the frequency response mean an early warning.

### 11.2 Declaration of conformity

#### Supplier's Declaration of Conformity

(in accordance with ISO/IEC 17050-1)

SDoC no.:	2019-03		
Issuer's name:	Narda Safety Test Solutions GmbH (manufacturer)		
Issuer's address:	Sandwiesenstr. 7, D-72793 Pfullingen, Germany		
Object of declaration:	Model No. Part No. Designation		
	RadMan 2LT	2280/xx	Personal Monitor
	RadMan 2XT	2281/xx	Personal Monitor

The object of the declaration described above is in conformity with the requirements of the following documents:

Documents No.	Title
2014/30/EU	Directive of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to electromagnetic compatibility (previously 2004/108/EC)
EN 61326-1: 2013	Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 1: General requirements
2014/35/EU	Directive of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits (previously 2006/95/EC)
EN 61010-1: 2010	Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements
2011/65/EU (RoHS)	Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (previously 2002/95/EC)
Signed for and on behalf of:	Narda Safety Test Solutions GmbH
Place and date of issue:	Pfullingen, 2019-03-05
Signature:	()
Name, function:	Hans-J. Foerster, Managing Director

## 12 Ordering information

### 12.1 Radiation monitor sets

Model designation	Part no.
RadMan 2LT – personal monitor sets 8 GHz	
RadMan 2LT, ICNIRP 1998 / Occupational 1)	2280/101
RadMan 2LT, FCC 96-326 / Occupational	2280/102
RadMan 2LT, SC 6 (2015) / Controlled	2280/103
RadMan 2LT, ICNIRP 1998 / General Public, E-field	2280/111
RadMan 2XT – personal monitor sets 60 GHz	
RadMan 2XT, ICNIRP 1998 / Occupational 1)	2281/101
RadMan 2XT, FCC 96-326 / Occupational	2281/102
RadMan 2XT, SC 6 (2015) / Controlled	2281/103

 The ICNIRP Occupational models satisfy the requirements of numerous national and international standards and ordinances such as Directive 2013/35/EU, EMFV 2016 (Germany) and VEMF 2016 (Austria).

The scope of supply of a set comprises:

- RadMan 2 Basic Unit
- USB 2.0 cable
- · Mounting adapter
- · Carrying case
- · Lanyard with carabiner
- Allen wrench 1.5 mm
- Fastening strap
- · Operating manual, English

### 12.2 Optional accessories

Description	Part no.
Tripod, benchtop, 0.16 m, non-conductive	2244/90.32
Handle, non-conductive extension, 0.42 m	2250/92.02
Belt bag for RadMan	2250/92.06
Car charger adapter, USB 5 V	2259/92.20
Power supply (Europe), USB 5 V	2259/92.21
Power supply (USA), USB 5 V	2259/92.22
Power supply (UK), USB 5 V	2259/92.23

## 13 RadMan 2LT quick reference guide


	Monitor operating mode
Switch on the device	$\Rightarrow$ Press ( <sup>1</sup> ) > 1 s.
Switch off the device	$\Rightarrow$ Press (') > 2 s.
Applications	The monitor is worn on the body and warns of electromagnetic radiation.
Integration time	1 s
Frequency range	Up to 8 GHz
Field exposure display	5 – 200%, illuminated individual red LED indicates measurement value for E- or H-field (whichever is higher)
Alarm threshold 1 50% exposure and higher	<ul> <li>Alarm LED flashes slowly</li> <li>Alarm signal sounds slowly</li> <li>Slow vibration</li> </ul>
Alarm threshold 2 100% exposure and higher	<ul> <li>Alarm LED flashes rapidly</li> <li>Alarm signal sounds rapidly</li> <li>Fast vibration</li> </ul>

### Display of the maximum exposure that has occurred since the last time the device was switched on:

- $\Rightarrow$  Press (<sup>1</sup>) 1x.
  - bisplay returns to the Monitor operating mode after 5 s.

#### Display of the battery capacity **Solution**:

- Nower supply/charge mode via USB
- Batteries are fully charged (800 h operating time with one battery charge)
- Remaining operating time in battery mode < 5%

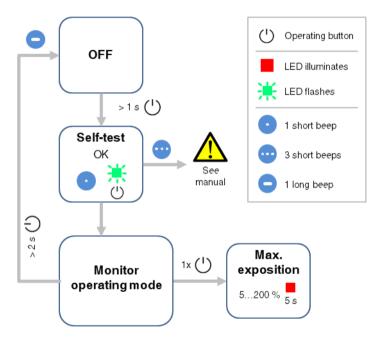

## 14 RadMan 2XT quick reference guide

	Monitor operating mode	RF Detection operating mode
Switch on the device	⇒ Press (') > 1 s.	
Changing the operating mode	<ul> <li>⇒ Press (<sup>1</sup>) 2x.</li> <li><sup>t</sup> The operating mode switches between RF Detection and Monitor.</li> </ul>	
Switch off the device	$\Rightarrow$ Press (') > 2 s.	
Applications	The monitor is worn on the body and warns of electromagnetic radiation.	<ul> <li>Leakage search on waveguides</li> <li>Check to determine whether antennas are actually switched off</li> </ul>
Integration time	<ul> <li>1 s (pulse LED off)</li> <li>30 ms (pulse LED illuminates red)</li> </ul>	<ul> <li>30 ms (pulse LED illuminates red)</li> </ul>
Frequency range	Up to 60 GHz	
Field exposure display	<ul> <li>5 – 200%, illuminated individual red LED indicates measurement value for E- or H-field (whichever is higher)</li> </ul>	<ul> <li>5 – 200%, red LEDs as bar display</li> <li>Acoustic signal above 5%, sound becomes higher with increasing value</li> </ul>
Alarm threshold 1 50% exposure and higher	<ul> <li>Alarm LED flashes slowly</li> <li>Alarm signal sounds slowly</li> <li>Slow vibration</li> </ul>	<ul> <li>Alarm LED flashes slowly</li> <li>Slow vibration</li> </ul>
Alarm threshold 2 100% exposure and higher	<ul> <li>Alarm LED flashes rapidly</li> <li>Alarm signal sounds rapidly</li> <li>Fast vibration</li> </ul>	<ul><li>Alarm LED flashes rapidly</li><li>Fast vibration</li></ul>

## Display of the maximum exposure that has occurred since the last time the device was switched on:


- $\Rightarrow$  Press () 1x.
  - bisplay returns to the previously used mode after 5 s.

#### Display of the battery capacity **CO**:



Power supply/charge mode via USB

- Batteries are fully charged (800 h operating time with one battery charge)
- Remaining operating time in battery mode < 5%

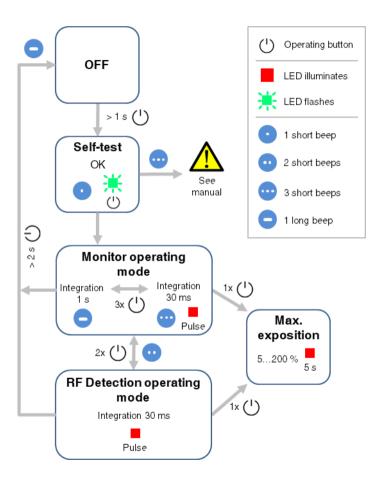

#### Narda Safety Test Solutions GmbH

Sandwiesenstraße 7 72793 Pfullingen, Germany Phone: +49 7121 9732-0 Fax: +49 7121 9732-790 E-mail: support.narda-de@L3T.com www.narda-sts.com

#### Narda Safety Test Solutions

435 Moreland Road Hauppauge, NY 11788, USA Phone: +1 631 231-1700 Fax: +1 631 231-1711 E-mail: NardaSTS@L3T.com www.narda-sts.us

#### Narda Safety Test Solutions Srl

Via Leonardo da Vinci, 21/23 20090 Segrate (Milano), Italy Phone: +39 02 2699871 Fax: +39 02 26998700 E-mail: nardait.support@L3T.com www.narda-sts.it