



2 2a

CLICK (LED)

t > 3s

Hold

20 15

+ 2016  
- 2014

3006

+ 31  
- 29

3006

+ 07  
- 05

1038

+ 11  
- 09

1038

+ 39  
- 37

EU on

+ BR ON  
- AU ON  
- OFF

2b

A OFF OFF B

+ 01...02...  
- 31...30...

Pin off

+  
-

End

CLICK EXIT

Pin on

0000

+ 01  
- 99

0000

+ 01  
- 99

CLICK

End

CLICK EXIT



A OFF OFF B

+ 01...02...  
- 31...30...

1506

+ 16  
- 14

1506

+ 07  
- 05

2009

+ 21  
- 19

2009

+ 10  
- 08


Pin off

+  
-



4

4a

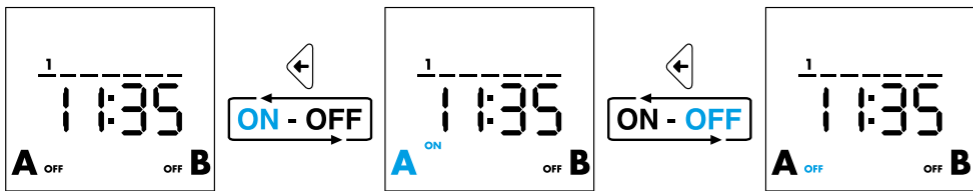

4b



4c




4d



5

IT CANCELLAZIONE DI TUTTI I PROGRAMMI  
 EN DELETION OF ALL PROGRAM  
 FR SUPPRESSION DE TOUS LES PROGRAMMES  
 DE LÖSCHEN ALLER PROGRAMME  
 NL WISSEN VAN ALLE PROGRAMMA'S  
 PT ELIMINAÇÃO DE TODO PROGRAMA  
 ES BORRAR TODOS LOS PROGRAMAS

HU AZ ÖSSZES PROGRAM TÖRLÉSE  
 CS ODSTRANĚNÍ VŠECH PROGRAMU  
 PL USUNIĘCIE WSZYSTKICH PROGRAMÓW  
 RO ȘTERGE TOATE PROGRAMELE  
 RU УДАЛЕНИЕ ВСЕХ ПРОГРАММ  
 EL ΔΙΑΓΡΑΦΗ ΌΛΩΝ ΤΩΝ ΠΡΟΓΡΑΜΜΑΤΩΝ  
 AR محو كل البرامج

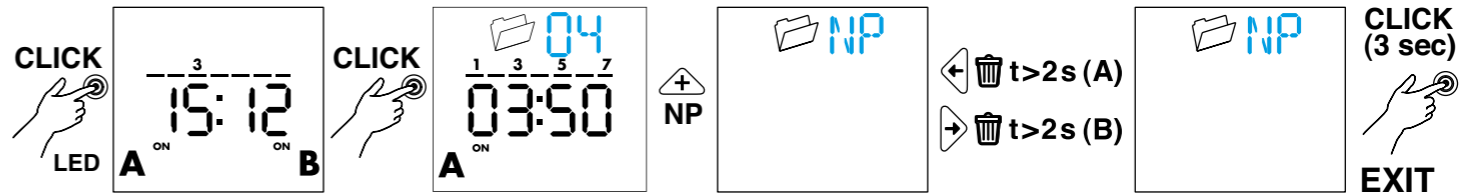

6

IT CANCELLAZIONE DI UN SINGOLO PROGRAMMA  
 EN DELETION OF SINGLE PROGRAM  
 FR SUPPRESSION D'UN SEUL PROGRAMME  
 DE LÖSCHEN EINES PROGRAMMES  
 NL WISSEN VAN EEN ENKEL PROGRAMMA  
 PT ELIMINAÇÃO DE PROGRAMA INDIVIDUAL  
 ES BORRAR UN PROGRAMA

HU EGY PROGRAM TÖRLÉSE  
 CS ODSTRANĚNÍ JEDNOHO PROGRAMU  
 PL USUNIĘCIE JEDNEGO PROGRAMU  
 RO ȘTERGE UN SINGUR PROGRAM  
 RU УДАЛЕНИЕ ОДНОЙ ПРОГРАММЫ  
 EL ΔΙΑΓΡΑΦΗ ΕΝΟΣ ΠΡΟΓΡΑΜΜΑΤΟΣ  
 AR محو برنامج واحد

