STARKE AR IIID

Instructions for Use

Extension Truck



Dear Customer!

Thank you for choosing a STARKE ARVID® product.


We have more than 25 years of experience within the construction business. We develop, manufacture and sell equipment intended for professional material management. Starke Arvid's product assortment includes a total of 20 different products. Browse in at www.starkearvid.se

General use and safety regulations:

- Check the air pressure and the tires condition before use.
- Maximum load must not be exceeded.
- Place the load centrally on the truck.
- Use the necessary safety equipment.
- Secure the load before transport.

General maintenance and care instructions:

- All mobile parts must be greased once a month.
- Check all mobile parts as well as welding joints, wheels and other material at least once a year.
- Remove any outer rust and coat with anti-corrosive paint..
- · Check the draw ring with crack indication spray.
- Replace worn parts
- When unsure, contact Alia AB.

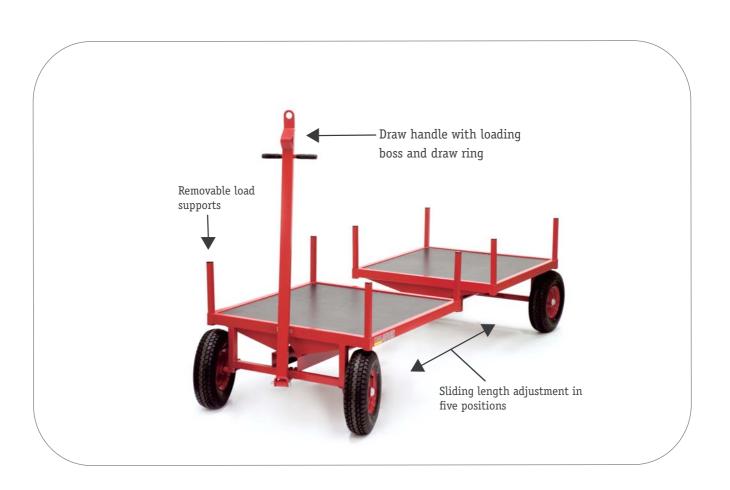



Technical Data

Extension Truck

	Without platform	With divided platform	Extra equipment:
Articlel no:	13100	13500	(polyurethane-filled)
Maximum load:	2500 kg	2500 kg	
Width, platform:	1080 mm	1080 mm	
Length, platform:	-	2x1080 mm	
Heigth:	540 mm	540 mm	
Drawbar length:	1490 mm	1490 mm	
Distance to axle:	2420 - 2720 - 3020 - 3320 - 3620		
Weight:	100 kg	120 kg	
Whells (type):	(air rubber wheels with bearings)		
	4 off. 5.00x8"	4 off. 5.00x8"	
	6-layered	6-laered	
Air pressure:	490 kPa	490 kPa	
Maximum speed:	15 km/h	15 km/h	

Service/Extra parts:

A number of retailers for STARKE ARVID® products are available for your basic security. If you have any questions regarding service or extra parts turn to you nearest retailer or directly to ALIA AB.

Gaurantee:

Under the condition that all instructions for use have been followed, we offer a one-year guarantee according to NL 01. The product may not be modified by the user.

Produced and marketed by: