


## AHP02,003,004 AIR/HYD FOOT PUMP

PROD NO. 033125,126,127  
MOD NO. AHP002,003,004

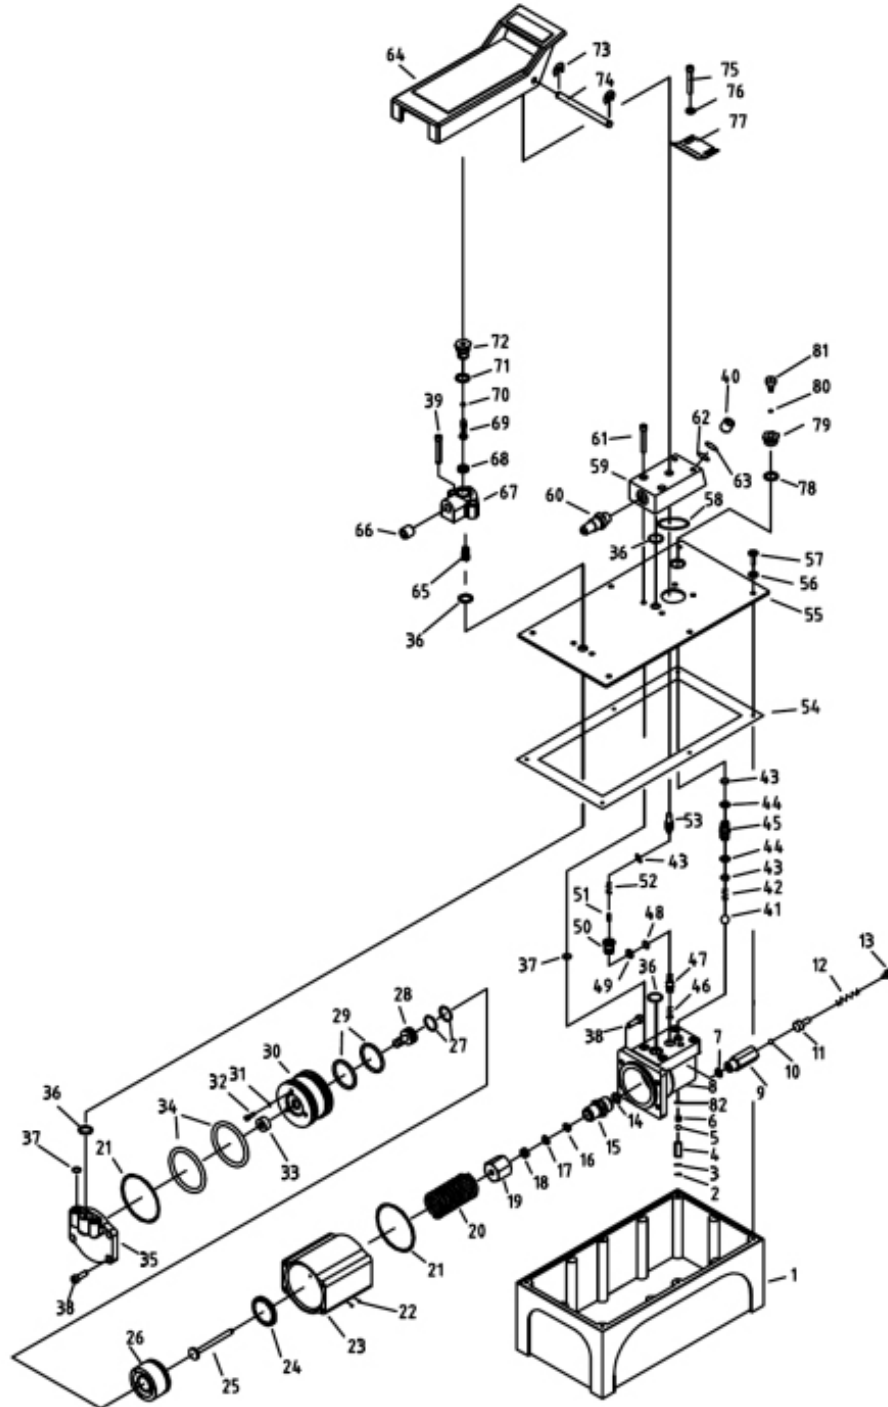

## AHP02,003,004 AIR/HYD FOOT PUMP

PROD NO. 033125,126,127  
MOD NO. AHP002,003,004

REF	Part Number	Description	REQ	REF	Part Number	Description	REQ
1	PEP-AHP002-01	Reservoir AHP002	1	45	PEP-AHP002-45	Coupler	1
1	PEP-AHP003-01	Reservoir AHP003	1	46	PEP-AHP002-46	Spring	1
1	PEP-AHP004-01	Reservoir AHP004	1	47	PEP-AHP002-47	Ball Seat	1
2	PEP-AHP002-02	Snap Ring	1	48*	PEP-AHP002-48	O-ring	1
3	PEP-AHP002-03	Oil filter	1	49*	PEP-AHP002-49	Nylon Gasket	1
4	PEP-AHP002-04	Oil Suction Pipe	1	50	PEP-AHP002-50	Release Valve	1
4	PEP-AHP004-04	4-4 Oil Suction Pipe AHP004	1	51	PEP-AHP002-51	Pin	1
5	PEP-AHP002-05	Steel Ball	1	52	PEP-AHP002-52	Spring	1
6	PEP-AHP002-06	Block	1	53	PEP-AHP002-53	Release Rod	1
7*	PEP-AHP002-07	Copper Washer	1	54	PEP-AHP002-54	Seal AHP002	1
8	PEP-AHP002-08	Valve Block	1	54	PEP-AHP003-54	Seal AHP003	1
9	PEP-AHP002-09	Safety Valve	1	54	PEP-AHP004-54	Seal AHP004	1
10	PEP-AHP002-10	Steel Ball	1	55	PEP-AHP002-55	Cover AHP002	1
11	PEP-AHP002-11	Ball Seat	1	55	PEP-AHP003-55	Cover AHP003	1
12	PEP-AHP002-12	Safety Valve Spring	1	55	PEP-AHP004-55	Cover AHP004	1
13	PEP-AHP002-13	Bolt	1	56	PEP-AHP002-56	Copper Washer AHP002	6
14*	PEP-AHP002-14	Copper Washer	1	56	PEP-AHP003-56	Copper Washer AHP003	12
15	PEP-AHP002-15	Pump Cylinder	1	56	PEP-AHP004-56	Copper Washer AHP004	12
16*	PEP-AHP002-16	Y-ring	1	57	PEP-AHP002-57	Bolt AHP002	6
17*	PEP-AHP002-17	Nylon Gasket	1	57	PEP-AHP003-57	Bolt AHP003	12
18*	PEP-AHP002-18	Copper Washer	1	57	PEP-AHP004-57	Bolt AHP004	12
19	PEP-AHP002-19	Nut	1	58*	PEP-AHP002-58	O-ring	1
20	PEP-AHP002-20	Spring	1	59	PEP-AHP002-59	Fixing Base	1
21*	PEP-AHP002-21	O-ring	2	60	PEP-AHP002-60	Exhaust Muffler	1
22	PEP-AHP002-22	Steel Ball	4	61	PEP-AHP002-61	Bolt	2
23	PEP-AHP002-23	Air Pump Housing	1	62	PEP-AHP002-62	Filter	1
24	PEP-AHP002-24	Washer	1	63	PEP-AHP002-63	Snap Ring	1
25	PEP-AHP002-25	Pump Plunger	1	64	PEP-AHP002-64	Foot Pedal	1
26	PEP-AHP002-26	Air Piston Base	1	65	PEP-AHP002-65	Spring	1
27*	PEP-AHP002-27	O-ring	2	66	PEP-AHP002-66	End Cap	1
28	PEP-AHP002-28	Air Shuttle Valve	1	67	PEP-AHP002-67	Air Valve	1

\* Items included in Repair Kit, Repair Kit order number: PEP-HPS140-RK