



PARTS LIST

Item No.	Description	Item No.	Description	Item No.	Description
1.1	cap	3.22	connecting brush	6.12	spring
1.2	compression spring	3.23	cotter pin	6.13	piston rod
1.3	deflector rod	3.24	connecting rod	6.14	steel ball
1.4	screw rod	3.25	driving rod	6.15	push needle
1.5	control rod(handle)	3.26	cotter pin	6.16	valve seat
1.6	washer	3.27	pin	6.17	screw
1.7	fastening screw	3.28	piston rod	6.18	spring
2.1	foot pedal	3.29	locking nut	6.20	outer body
2.2	wire	3.30	protect dust ring	6.22	steel ball
2.3	pin	3.31	stop ring	6.23	small push rod
2.4	fork member	3.32	seal ring	6.24	steel ball
2.5	bush	3.33	bush prevent ring	6.25	large ball rod
2.6	base	4.1	cover	6.26	washer
2.7	spring	4.2	wheel cover	6.27	bolt
2.8	pin	4.3	grease fitting	6.28	steel ball
2.9	cap	4.4	washer	6.29	valve seat
2.10	shaft	4.5	screw	6.30	spring
2.11	screw	4.6	bearing cover		
2.12	washer	4.7	steel ball	6.32	screw
2.13	washer	4.8	bearing holder	6.33	seal ring
2.14	clamp ring	4.9	wheel fork	6.34	screw
3.1	filter	4.10	wheel	6.35	washer
3.2	washer	4.11	rivet	6.35B	shaft
3.3	outside tube	5.1	axle	7.1	saddle
3.4	washer	5.2	nut	7.2	saddle carrier
3.5	valve seat	5.3	stop ring	7.3	axle
3.6	needle	5.4	wheel	7.4	level supporting rod
3.7	wire	5.5	grease fitting	7.5	axle
3.8	nut	5.6	roller	7.6	rocker
3.9	spring	5.7	stop ring	7.7	bolt
3.10	screw rod	5.8	split ring	7.8	axle
3.11	robber ring	6.1	joint	7.9	axle
3.12	robber ring	6.2	screw	7.10	grease fitting
3.13	cylinder body	6.3	seal ring	7.11	split ring
3.14	paper washer	6.4	large nut	8.1	cover plate
3.15	cover plate	6.4A	oil seal	8.2	side plate
3.16	bole	6.5	ring	8.3	
3.17	screw	6.6	washer	8.5	screw
3.18	washer	6.7	bush	8.6	washer
3.19	seal washer	6.8	seal ring	8.7	nut
3.19A	washer	6.9	piston rod	8.8	nut
3.20	bolt	6.10	rubber cup	8.9	washer
3.21	nut	6.11	stop ring	8.10	limiter axle