





Item No.	Description	Item No.	Description	Item No.	Description
1.1	End Cover	3.24	Connecting Rod	3.61	Screw
1.2	Compression Spring	3.25	Drying Brush	3.62	Screw Tube
1.3	Deflector Rod	3.26	Wire	3.63	Elbow Joint
1.4	Screw Rod	3.27	Pin	3.64	Union Lighting
1.5	Control Rod	3.28	Piston Rod	3.65	Spiral Clamp Ring
1.6	Washer	3.29	Locking Nut	3.66	Rubber Hose
1.7	Fastening Screw	3.30	Ring	3.67	Spring
2.1	Foot Pedal	3.31	Dust-proof Ring	3.69	
2.2	Cir Clip	3.32	Seal Ring	3.70	Filter Nozzle
2.3	Pin	3.33	Dust-proof Ring	3.71	Case
2.4	Fork Member	3.34	Dust-proof Ring	3.72	Spring
2.5	Bush	3.35	Outside Tube	3.73	
2.6	Base	3.36A	Washer	3.74	Piston Rod
2.7	Spring	3.36	Ring	3.75	Seal Ring
2.8	Pin	3.37	Fastening Nut	3.76	Rubber Ring
2.9	Cap	3.38	Nut	3.77	Rubber Ring
2.10	Shaft	3.39	Cylinder Base	3.78	Throttle
2.11	Screw	3.40	Pump Body	3.79	Handle Cover
2.12	Washer	3.40A	O-ring	3.80	Locking Spring
2.13	Washer	3.41	Rubber Ring	3.81	Pin
2.14	Clamp Ring	3.42	Seal Ring	3.90	Union
3.1	Filter	3.43	Plug Bush	3.91	
3.2	Washer	3.44	Plug	4.1	Cover
3.3	Outside Tube	3.45	Cap	4.2	Wheel
3.4	Washer			4.3	Injecting Oil Nozzle
3.5	Valve Seat			4.4	Washer
3.6	Needle	3.46	Copper Spring	4.5	Screw
3.7	Wire	3.47	Spring Holder	4.6	Bearing Cover
3.8	Nut	3.48	Piston	4.7	Steel Ball
3.9	Spring	3.49	Rubber O-ring	4.8	Bearing Holder
3.10	Screw Rod			4.9	Wheel Fork
3.11	Rubber Ring	3.50	Seal Ring	4.10	Wheel
3.12	Rubber Ring	3.51	Seal Throttle	4.11	Rivet
3.13	Cylinder Body	3.52	Washer	5.1	Axle
3.14	Cover Plate	3.53	Throttle Rod	5.2	Nut
3.15	Cover	3.54	Rubber O-ring	5.3	Stop Ring
3.16	Bolt	3.55	Rubber O-ring	5.4	Wheel
3.17	Bolt	3.56	Air Pump Body	5.5	Pressure Filter Port
3.18	Washer	3.57	Washer	5.6	Roller
3.21	Nut	3.58	Bolt	5.7	Stop Ring
3.22	Connecting Brush	3.59	Rubber O-ring	5.8	Split Ring
3.23	Wire	3.60	End Cover	6.1	Joint

PARTS LIST CONTINUED

6.2	screw	6.24	steel ball	7.3	stop ring
6.3	seal ring	6.25	large ball rod	7.4	level supporting rod
6.4	large nut	6.26	washer	7.5	axle
6.4A	dust-proof ring	6.27	bolt	7.6	rocker
6.5	ring	6.28	steel ball	7.7	bolt
6.6	washer	6.29	valve	7.8	axle
6.7	bush	6.30	spring	7.9	axle
6.8	seal ring	6.32	screw	7.10	injecting oil nozzle
6.9	piston rod	6.33	seal ring	7.11	split ring
6.10	rubber cup	6.34	screw	8.1	cover plate
6.11	stop ring	6.35	washer	8.2	side plate
6.12	spring	6.35B	shaft	8.3	
6.13	piston rod	6.36	steel ball	8.4	
6.14	steel ball	6.37	spring	8.5	screw
6.15	push needle	6.38	valve seat	8.6	washer
6.16	valve seat	6.39	steel ball	8.7	nut
6.17	screw	6.40	spring	8.8	nut
6.18	spring	6.41	washer	8.9	washer
6.20	outer body	6.42	scrw	8.10	limiter axle
6.22	steel ball	7.1	tray		
6.23	small push rod	7.2	joint		