

**NOTE: WHEN ORDERING PARTS PLEASE SPECIFY MODEL NUMBER AND CAPACITY**

No.	Description
01	Extension Screw (1)
02	Cap (1)
03	Ram O-ring (1)
04	Top Sealing Gasket (1)
05	Ram (1)
06	Ram Rubber Cup (1)
07	Cylinder (1)
08	Housing (1)
09	Oil Filler Plug (1)
10	Lower Sealing Gasket (1)
11	Base (1)
12	Valve Release Screw (1)
13	Release Valve O-ring (1)
14	Release Valve Bearing (1)
15	Pump Valve Assembly (1) included in base
16	Pump Cylinder Outer O-ring (1)
17	Pump Cylinder Washer (1)
18	Pump Cylinder Inner O-ring (1)
19	Pump Cylinder (1)
20	Pin (1)
21	Split Cotter Pin (1)
22	Piston and Fulcrum Assembly (1)
24	Handle Assembly (1)

