

## **FILLING AND LIGHTING INSTRUCTIONS**

- Your new torch was shipped without fuel and must be filled prior to operation
- Torch may require one complete charge and discharge before achieving maximum capacity
- Ensure flame is out and torch is cool to the touch before refilling
- Use only butane lighter fuel
- Hold torch upside down and locate filler valve
- Press gas canister nozzle onto filler valve to release gas. When gas seeps out around edge of nozzle the torch is full. Remove gas canister and allow excess gas to evaporate

## **DANGER! EXTREMELY FLAMMABLE. CONTENTS UNDER PRESSURE**

- Contains flammable gas under pressure. Do not use near sparks or open flames. Do not puncture or incinerate container or store at temperatures above 50°C (120°F)
- Centre the gas adjustment dial between the (-) and (+) marks
- Rotate the air adjustment ring to expose half the air hole (model JBT-1322 only)
- Pull down Child Safety Lock
- Hold the torch in one hand and push and hold the ignition button with your thumb. If torch does not light immediately you will have to pull down the Child Safety Lock again.
- Once lit, letting go of the ignition button will extinguish the torch. For constant flame, push in (for JBT-1322) or shift the Continuous Flame button to the right (for JBT-1330) while the torch is lit. This will lock the flame on.
- To extinguish the flame, push ignition button to end continuous flame mode (model JBT-1322) or slide Continuous Flame button to the left (model JBT-1330)