


The Universal chip type will support any of the printers listed in the tables below.

Printer Model	OEM SKU	Yield	Static Control Product Code (Chip Marking)
HP® 1160, 1320, 3390 MFP, 3392 MFP	Q5949A	2.5k	U17-3CHIP (U17-3)
Canon® LBP-3300, LBP-3360	CRG-108, CRG-308, CRG-508, CRG-708	2.5k	
HP® 1300	Q2613A	2.5k	
HP® P2014, P2015, M2727 MFP	Q7553A	3k	
Canon® LBP-3310, LBP-3370	CRG-315, CRG-515, CRG-715	3k	
HP® 2300	Q2610A	6k	
HP® 2410, 2420, 2430	Q6511A	6k	
HP® P3005, M3027 MFP, M3035 MFP	Q7551A	6.5k	
HP® 4200	Q1338A	12k	
HP® 4240, 4250, 4350	Q5942A	10k	

HP® 1320, 3390 MFP, 3392 MFP	Q5949X	6k	U18-3CHIP (U18-3)
Canon® LBP-3300, LBP-3360	CRG-108II, CRG-308II, CRG-508II, CRG-708H	6k	
HP® 1300	Q2613X	4k	
HP® P2014, P2015, M2727 MFP	Q7553X	7k	
Canon® LBP-3310, LBP-3370	CRG-315II, CRG-515II, CRG-715H	7k	
HP® 2300	Q2610A	6k	
HP® 2410, 2420, 2430	Q6511X	12k	
HP® P3005, M3027 MFP, M3035 MFP	Q7551X	13k	
HP® 4200	Q1338A	12k	
HP® 4250, 4350	Q5942X	20k	
HP® 4300	Q1339A	18k	
HP® 4345 MFP, M4345 MFP	Q5945A	18k	

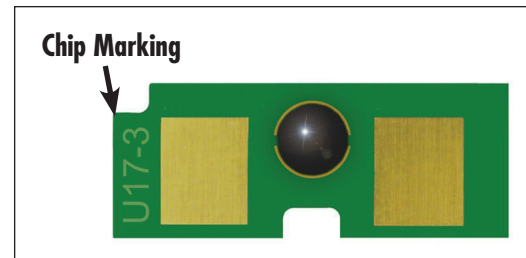

Chip appearance subject to change. Pictures and images may not be reflective of current offering.

Chip Removal & Installation

- Using a small slotted screwdriver, pry the OEM chip off of the cartridge. See Figure 1.

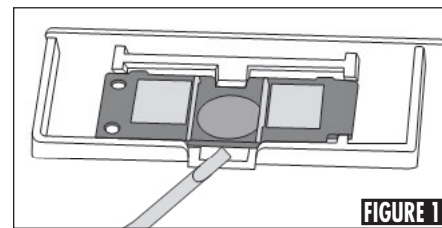


FIGURE 1

- Moisten a lint free cleaning cloth with 91% - 99% Isopropyl Alcohol and clean the surface where the chip is mounted as shown in Figure 2.

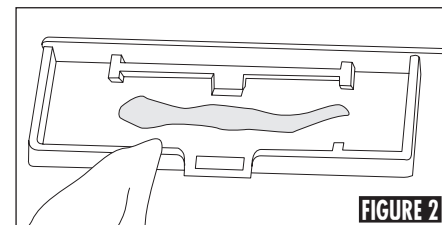


FIGURE 2

Chip Removal & Installation

- Remove the adhesive backing from a new chip.
- Then, place the chip on the cartridge as shown in Figure 3.

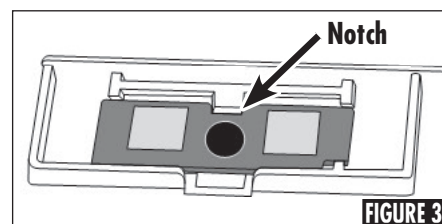


FIGURE 3



Note: The notch on the top edge of the chip must be aligned as shown in Figure 3.

- Press firmly on the chip to activate the pressure sensitive adhesive.

V.5 - 03.13