


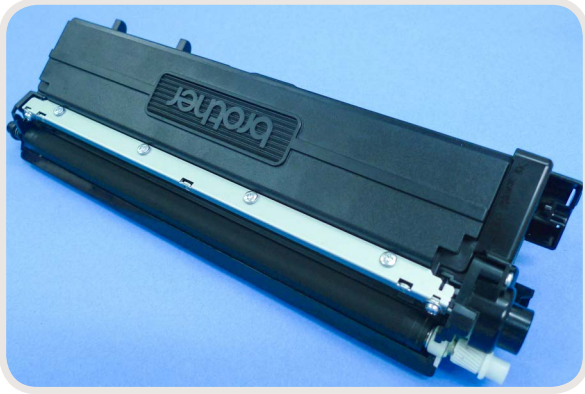


How to Install The Static Control B9310UHYFGR-10

Applicable Printers: Brother HL-L8360/MFC-L8900/ HL-L9310/MFC-L9570
TN426BK/ /TN910BK/C/M/Y ULTRA HIGH YIELD FLAG GEAR AND SPRING


Brother HL-L8260/L8360/
DCP-L8410/MFC-L8690/L8900
STARTER CARTRIDGE



Brother HL-L9310/MFC-L9570
STARTER CARTRIDGE

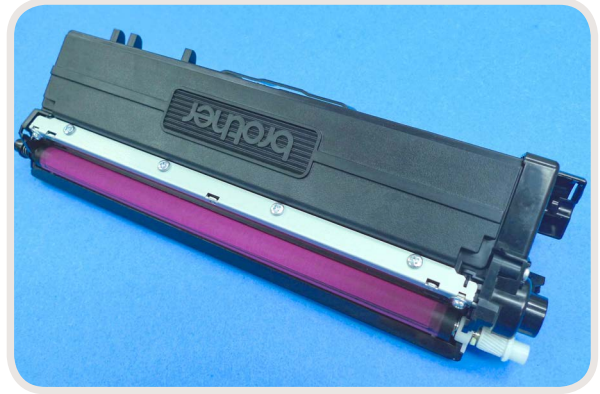

B9310UHYFGR-10
ULTRA HIGH YIELD FLAG GEAR AND SPRING

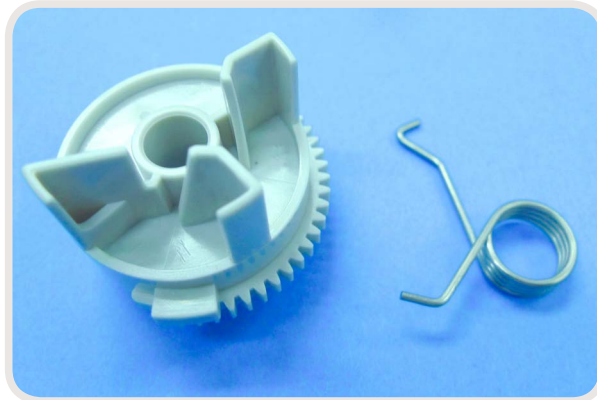

Procedures to convert a Starter Cartridge into a TN426BK / TN910BK/C/M/Y Ultra High Yield Cartridge

STEP 1




Unscrew the OEM Left End Cap from the Starter Toner Cartridge. Keep the end cap and small screws for reuse.



How to Install The Static Control B9310UHYFGR-10


Applicable Printers: Brother HL-L8360/MFC-L8900/ HL-L9310/MFC-L9570
TN426BK/ /TN910BK/C/M/Y ULTRA HIGH YIELD FLAG GEAR AND SPRING

STEP 2

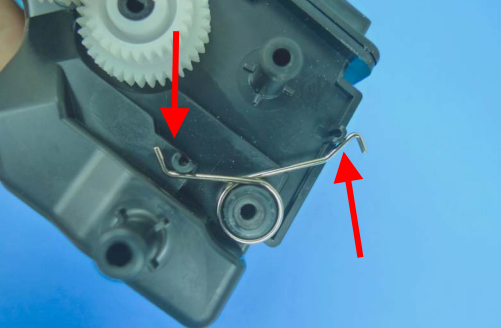



Place the Spring from STATIC CONTROL B9310UHYFGR-10 onto the boss on the cartridge and position the front end and back end of the spring hooked to the two ribs of the cartridge respectively as shown in the photo.

STEP 3

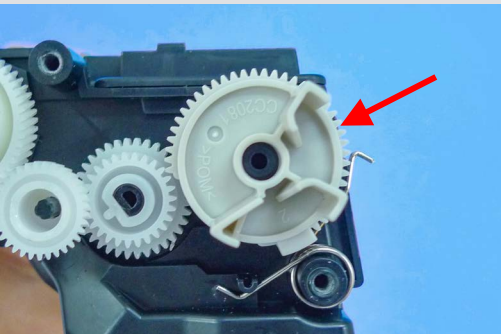

Install the Ultra High Yield Flag Gear from STATIC CONTROL B9310UHYFGR-10 on the boss of the cartridge. Make sure the flag gear is placed at the correct angle as shown in the photo.

STEP 4

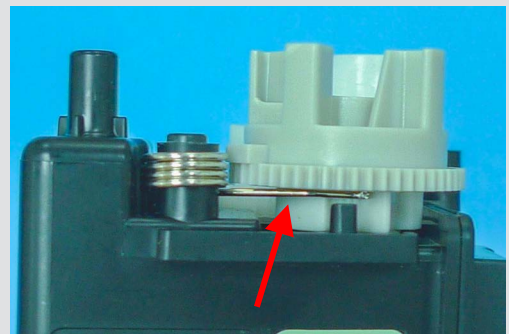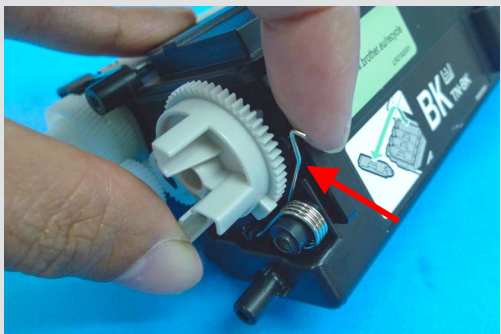


Keep the flag gear in the correct position and then release the back end of the spring from the rib onto the back of the flag gear as shown in the photo.



How to Install The Static Control B9310UHYFGR-10

Applicable Printers: Brother HL-L8360/MFC-L8900/ HL-L9310/MFC-L9570
TN426BK/ /TN910BK/C/M/Y ULTRA HIGH YIELD FLAG GEAR AND SPRING

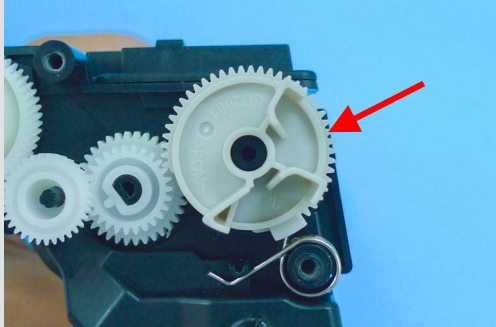

****It is important that after the spring has released, the flag gear is positioned exactly as shown in the photo.**

STEP 5



Install the OEM End Cap and install the three screws, making sure the position of the flag gear does not move. If the lever does move, steps 2 to 5 must be repeated. If the flag gear is not in the correct position, inserting the cartridge will not reset the printer.



Static Control®

www.scc-inc.com

Static Control Components (USA - World Headquarters)
3010 Lee Avenue PO Box 152 Sanford, NC 27331
US/Canada Tel: +1 800.488.2426 • Fax: +1 800.488.2452
Int'l Tel: +1 919.774.3808 • Fax: +1 919.774.1287
Email: info@scc-inc.com

Static Control Components (Europe) Limited
Unit 30, Worton Grange
Reading, Berkshire RG2 0TG, United Kingdom
Tel: +44 (0) 118.923.8800 Fax: +44 (0) 118.923.8811
Email: info@scceurope.co.uk