





How to Install The Static Control B8260FGR-10

Applicable Printers: Brother HL-L8260/L8360/DCP-L8410/MFC-L8690/L8900
TN421BK/C/M/Y STANDARD YIELD FLAG GEAR AND SPRING

Brother Starter Toner Cartridge

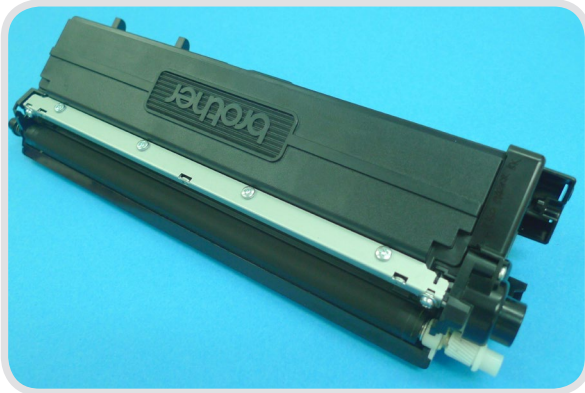


B8260FGR-10
STANDARD YIELD FLAG GEAR AND SPRING

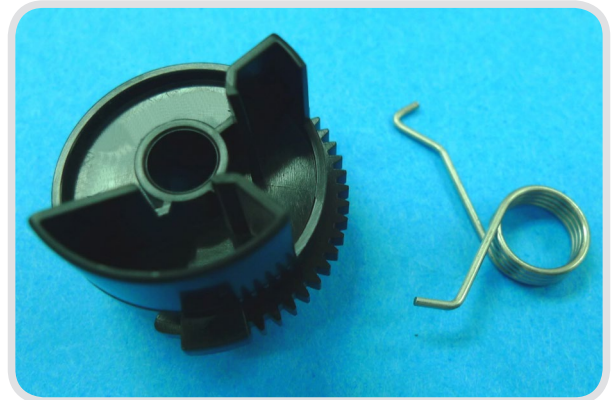


Procedures to convert a Starter Cartridge into a TN421BK/C/M/Y Standard Yield Cartridge

STEP 1

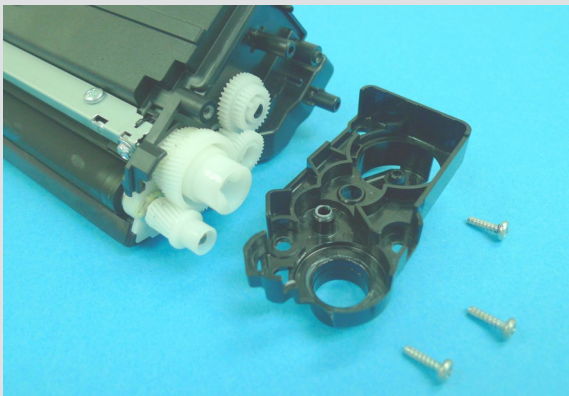

Unscrew the OEM Left End Cap from the Starter Toner Cartridge. Keep the end cap and small screws for reuse.

STEP 2

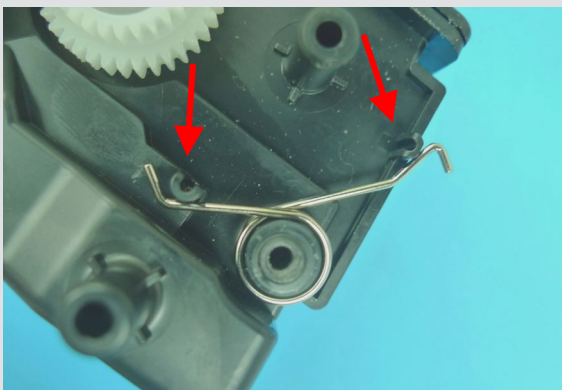


Place the Spring from STATIC CONTROL B8260FGR-10 onto the boss on the cartridge and position the front end and back end of the spring hooked to the two ribs of the cartridge respectively as shown in the photo.



How to Install The Static Control B8260FGR-10



Applicable Printers: Brother HL-L8260/L8360/DCP-L8410/MFC-L8690/L8900
TN421BK/C/M/Y STANDARD YIELD FLAG GEAR AND SPRING

STEP 3

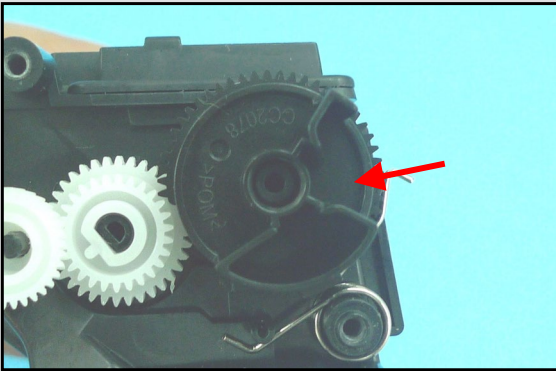

Install the Standard Yield Flag Gear from STATIC CONTROL B8260FGR-10 on the boss of the cartridge. Making sure the flag gear to be placed with the correct angle as shown in the photo.

STEP 4

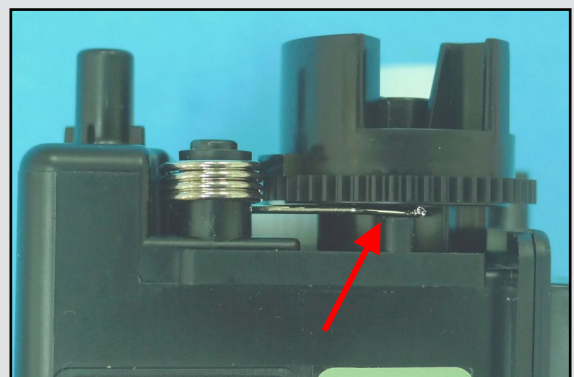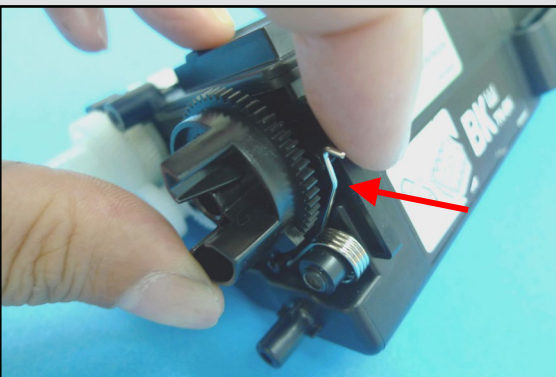


Keep the flag gear in the correct position and then release the back end of the spring from the rib onto the back of the flag gear as shown in the photo.



How to Install The Static Control B8260FGR-10

Applicable Printers: Brother HL-L8260/L8360/DCP-L8410/MFC-L8690/L8900
TN421BK/C/M/Y STANDARD YIELD FLAG GEAR AND SPRING

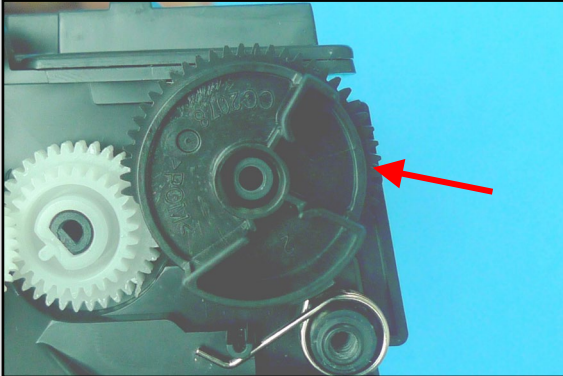

****It is important that after the spring has released, the flag gear is positioned exactly as shown in the photo.**

STEP 5



Install the OEM End Cap and install the three screws, making sure the position of the flag gear does not move. If the lever does move, steps 2 through 5 must be repeated. If the flag gear is not in the correct position, inserting the cartridge will not reset the printer.



Static Control®

www.scc-inc.com

Static Control Components (USA - World Headquarters)
3010 Lee Avenue PO Box 152 Sanford, NC 27331
US/Canada Tel: +1 800.488.2426 • Fax: +1 800.488.2452
Int'l Tel: +1 919.774.3808 • Fax: +1 919.774.1287
Email: info@scc-inc.com

Static Control Components (Europe) Limited
Unit 30, Worton Grange
Reading, Berkshire RG2 0TG, United Kingdom
Tel: +44 (0) 118.923.8800 Fax: +44 (0) 118.923.8811
Email: info@scceurope.co.uk