



Pos. No.	Parts	Sparepart no.
1	COVER OF DRIVER	FTP38E301
2		
3	CORD WITH BALL AND SPRING	FTP38E302
4		
5	PRIMARY ARM	FTP38E305-1
6	REVERSE FLIP	FTP38E306
7	CAM	FTP38E307
8	CONICAL SPRING	FTP38E308
9	ACTING BLOCK(L)	FTP38E309
10	ACTING BLOCK(R)	FTP38E310
11	FLAT HEAD CAP SCREW	FTP38E311
12	BALLS OF ARM	FTP14E012
13	DOWEL PIN	FTP14E013
14	ADJUSTABLE SCREW	FTP14E014
15	NECK PIN	FTP14E015
16	E-SNAP RING	FTP14E016
17	LEVEL OF TUBE	FTP38E317-3
18	SCREW PLUG	FTP14E018
19	ADJUSTABLE HANDLE	FTP38E319-3
20		
21	ROLLER AND FITTINGS	FTP14E020
22		
23		
24	COMPRESSION SPRING	FTP38E324-1
25	GUIDE PIN	FTP14E025
26	PROPULSIVE POST	FTP38E326-1
27	M4 HEX SOCKET SCREW	FTP14E027
28	ADJUSTABLE STUD	FTP38E028
29	NEEDLE PIN	FTP14E029
30	FLAT WASHER	FTP14E030
31	LOCK SCREW	FTP14E031
32	CAP NUT	FTP14E032
33	O-RING	FTP38E333