



Pos. No.	Parts	Sparepart no.
1	bution	1292Q200RK
2	spring	
3	square driver	
4	spring	
5	pin	
6	pin	
7	cam	
8	ball of driver	
9	primary arm	FTP12D20009
10	snap ring	1292Q200RK
11	spring	FTP12D20009
12	pin	
13	strip gauge	FTP12D20013-1
14	long tube	N/V
15	handle	N/V
16	Fixed stand	DTQ200RK
17	cover	
18	battery place	N/V
19	spring	
20	ring	
21	cover	FTP12D20020
22	spring	
23	Electronic board	DTQ200RK
24	strain gauge	FTP12D20013-1
25	button	DTQ200RK
26	M5 screw	FTP12D20026
27	M5 screw	FTP12D20027
28	M1.6 screw	DTQ200RK
29	ic board	N/V
30	M3 nut	FTP12D20030
31	M3 screw	N/V
32	nut	FTP12D20032