



Pos. No.	Parts	Sparepart no.
1	bution	3892Q060RK
2	spring	
3	square driver	
4	spring	
5	pin	
6	pin	
7	cam	
8	ball of driver	
9	primary arm	FTP38D10009
10	snap ring	3892Q060RK
11	spring	FTP38D10009
12	pin	FTP38D10013-1
13	strip gauge	FTP38D10013-1
14	long tube	N/V
15	handle	N/V
16	Fixed stand	DTQ100RK
17	cover	DTQ100RK
18	battery place	N/V
19	spring	N/V
20	ring	FTP12D20020
21	cover	
22	spring	FTP12D20020
23	Electronic board	DTQ100RK
24	strain gauge	FTP38D10013-1
25	button	DTQ100RK
26	M5 screw	FTP12D20026
27	M5 screw	FTP12D20027
28	M1.6 screw	DTQ100RK
29	ic board	N/V
30	M3 nut	FTP12D20030
31	M3 screw	N/V
32	nut	FTP12D20032