



Pos. No.	Parts	Sparepart no.
1	COVER OF DRIVER	FTP34E001
2		
3	CORD WITH BALL AND SPRING	FTP34E102
4		
5	PRIMARY ARM	FTP34E105
6	REVERSE FLIP	FTP34E106
7	CAM	FTP34E007
8	CONICAL SPRING	FTP34E008
9	ACTING BLOCK(L)	FTP34E009
10	ACTING BLOCK(R)	FTP34E010
11	FLAT HEAD CAP SCREW	FTP34E011
12	BALLS OF ARM	FTP14E012
13	DOWEL PIN	FTP34E113
14	ADJUSTABLE SCREW	FTP14E014
15	NECK PIN	FTP12E4015
16	E-SNAP RING	FTP34E116
17	LEVEL OF TUBE	FTP34E017
18	SCREW PLUG	FTP14E018
19	ADJUSTABLE HANDLE	FTP34E119
20		
21	ROLLER AND FITTINGS	FTP34E120
22		
23		
24	COMPRESSION SPRING	FTP34E024
25	GUIDE PIN	FTP12ER13
26	PROPULSIVE POST	FTP34E126
27	M4 HEX SOCKET SCREW	FTP14E027
28	ADJUSTABLE STUD	FTP34E128
29	NEEDLE PIN	FTP14E029
30	FLAT WASHER	FTP34E130
31	LOCK SCREW	FTP34E131
32	CAP NUT	FTP12E4032
33	O-RING	FTP34E133