



Pos. No.	Parts	Sparepart no.
1	COVER OF DRIVER	FTP12E001
2	CORD WITH BALL AND SPRING	FTP12E002
3		
4		
5	PRIMARY ARM	FTP12E005
6	REVERSE FLIP	FTP12E006
7	CAM	FTP12E007
8	CONICAL SPRING	FTP12E008
9	ACTING BLOCK(L)	FTP12E009
10	ACTING BLOCK(R)	FTP12E010
11	FLAT HEAD CAP SCREW	FTP12E011
12	BALLS OF ARM	FTP14E012
13	DOWEL PIN	FTP12E013
14	ADJUSTABLE SCREW	FTP14E014
15	NECK PIN	FTP12E015
16	E-SNAP RING	FTP12E016
17	LEVEL OF TUBE	FTP12E017
18	SCREW PLUG	FTP14E018
19	ADJUSTABLE HANDLE	FTP12E019
20	ROLLER AND FITTINGS	FTP12E020
21		
22		
23		
24	COMPRESSION SPRING	FTP12E024
25	GUIDE PIN	FTP12E025
26	PROPULSIVE POST	FTP12E026
27	M4 HEX SOCKET SCREW	FTP12E027
28	ADJUSTABLE STUD	FTP12E028
29	NEEDLE PIN	FTP14E029
30	FLAT WASHER	FTP12E030
31	LOCK SCREW	FTP14E031
32	CAP NUT	FTP12E032
33	O-RING	FTP12E033