



Pos. No.	Parts	Sparepart no.
1	COVER OF DRIVER	FTP34E001
2		
3	CORD WITH BALL AND SPRING	FTP34E002
4		
5	PRIMARY ARM	FTP34E005
6	REVERSE FLIP	FTP34E006
7	CAM	FTP34E007
8	CONICAL SPRING	FTP34E008
9	ACTING BLOCK(L)	FTP34E009
10	ACTING BLOCK(R)	FTP34E010
11	FLAT HEAD CAP SCREW	FTP34E011
12	BALLS OF ARM	FTP14E012
13	DOWEL PIN	FTP12E013
14	ADJUSTABLE SCREW	FTP14E014
15	NECK PIN	FTP12E4015
16	E-SNAP RING	FTP12E4016
17	LEVEL OF TUBE	FTP34E017
18	SCREW PLUG	FTP14E018
19	ADJUSTABLE HANDLE	FTP12E019
20		
21		
22	ROLLER AND FITTINGS	FTP12E4020
23		
24	COMPRESSION SPRING	FTP34E024
25	GUIDE PIN	FTP12E025
26	PROPULSIVE POST	FTP12E4026
27	M4 HEX SOCKET SCREW	FTP12E4027
28	ADJUSTABLE STUD	FTP12E028
29	NEEDLE PIN	FTP14E029
30	FLAT WASHER	FTP12E4030
31	LOCK SCREW	FTP14E031
32	CAP NUT	FTP12E4032
33	O-RING	FTP12E4033
34	INSIDE TUBE	FTP34E034