



Pos. No.	Parts	Sparepart no.
1	COVER OF DRIVER	FTP14E001
2		
3	CORD WITH BALL AND SPRING	FTP14E002
4		
5	PRIMARY ARM	FTP14E005
6	REVERSE FLIP	FTP14E006
7	CAM	FTP14E007
8	CONICAL SPRING	FTP14E008
9	ACTING BLOCK(L)	FTP14E009
10	ACTING BLOCK(R)	FTP14E010
11	FLAT HEAD CAP SCREW	FTP14E011
12	BALLS OF ARM	FTP14E012
13	DOWEL PIN	FTP14E013
14	ADJUSTABLE SCREW	FTP14E014
15	NECK PIN	FTP14E015
16	E-SNAP RING	FTP14E016
17	LEVEL OF TUBE	FTP14E017
18	SCREW PLUG	FTP14E018
19	ADJUSTABLE HANDLE	FTP14E019
20		
21		
22	ROLLER AND FITTINGS	FTP14E020
23		
24	COMPRESSION SPRING	FTP14E024
25	GUIDE PIN	FTP14E025
26	PROPULSIVE POST	FTP14E026
27	M4 HEX SOCKET SCREW	FTP14E027
28	ADJUSTABLE STUD	FTP14E028
29	NEEDLE PIN	FTP14E029
30	FLAT WASHER	FTP14E030
31	LOCK SCREW	FTP14E031
32	CAP NUT	FTP14E032
33	O-RING	FTP14E033