


Haier

User Manual Washer Dryer

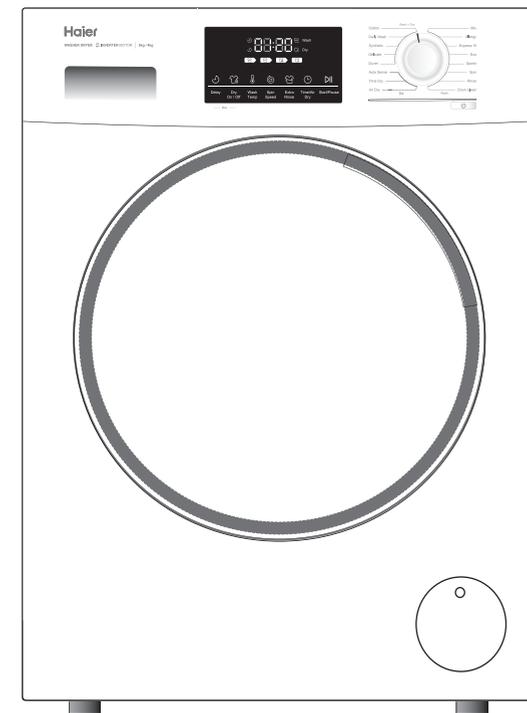

HWD8040BW1



0020508374AH

Thank you for purchasing a Haier product

Please read these instructions carefully before using this appliance. It contains important information which will help you get the best out of your appliance and ensure safe and proper installation, use, care and cleaning. Keep this manual in a convenient place so you can always refer to it for safe and proper use.

If you sell the appliance, give it away, or leave it behind when you move, make sure you also pass on this manual so that the new owner can become familiar with all features and safety warnings.

Legend



Yes



No



General information and tips




Warning! Important safety information!



Environmental information

Disposal

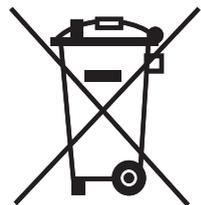

The presence of this symbol on the product, accessories or materials that goes with this information indicates that at the end of its useful life the product or its electronic accessories (e.g. cable, inlet hose-assembly) should not be disposed with other household waste. To prevent possible damage to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them. This will promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased the product or relevant local authorities to find out how they can take this item for environmentally safe recycling and safety. Business users should contact their supplier and check the conditions of the purchase. This product and its electronic accessories should not be mixed with other commercial waste.

Safety and warnings.....	4-7
Installation.....	8-9
Product description.....	10
Control panel.....	11-13
Programmes.....	14
Consumption.....	15
Daily use.....	16-19
Care and cleaning.....	20-22
Troubleshooting.....	23-25
Technical data.....	26



Caution, risk of fire-this is a safety symbol. Failure to follow the warnings outlined in these user instructions can cause a fire hazard.

⚠ WARNING!



Fire Hazard

- Only dry fabrics that have been washed with water.
- Do not use heat to dry items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads, dry on "Time/Air Dry"
- Do not stop a washer dryer before the end of the drying cycle unless all items are removed and spread out in order to dissipate the heat.
- A washer dryer produces combustible lint; clean pump filter regularly.
- Failure to follow these instructions can result in death or personal injury.

⚠ WARNING!



Electric Shock Hazard

If you are using an extension cord or a portable electrical outlet device (eg multi-socket outlet box), ensure that it is positioned so that it does not come into contact with water or moisture. Failure to do so may result in death or electrical shock.



Read the instructions

IMPORTANT SAFETY INSTRUCTIONS

WARNING!

When using your washer dryer, follow basic precautions, including the following:

- **CAUTION:** In order to avoid a hazard due to inadvertent resetting of thermal cut-out, the appliance must not be supplied through an external switching device, such as a timer, or connected to circuit that is regularly switched on and off by the utility.
- This washer dryer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or given instructions on how to use the washer dryer by someone responsible for their safety.
- The washer dryer should only be used for washing, rinsing and drying of textiles where this is indicated on the care label.
- The door will be locked from the start of the cycle until the cycle is completed for safety reasons. It is possible to open the door during the cycle under certain conditions .
- Never force the door to open.
- Keep children away from the washer dryer while it is in operation.
- Supervise children to ensure that they do not play with the washer dryer or climb inside the drum.
- Do not touch the door during a drying cycle, as the door can become hot.
- Do not open the detergent dispenser during the cycle.
- The only user-removable parts of the washer dryer are the inlet hose, detergent dispenser and the pump filter. No other parts are designed to be removed by anyone other than a Haier trained and supported service technician.
- When disposing of the washer dryer, it is recommended that the door is removed to avoid children getting trapped inside, and that the electrical cable is cut off close to the washer dryer.
- Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode.
- Do not wash or dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapours that could ignite or explode.


- Undergarments that contain metal reinforcements should not be placed in the washer dryer. Damage to the machine can result if the metal reinforcements come loose during washing or drying.
- Check and remove all objects from pockets, e.g. lighters and matches.
- The maximum mass of dry and wash materials are respectively 4 and 8 kilograms (HWD8040BW1 models)
- Do not overload your washer dryer.
- Never wash or dry rubber articles, fibreglass, or any plastic items or film, e.g. plastic lined tablecloths and baby bibs.
- Clothes must go through the cool down/airing phase in the final part of the drying cycle. This ensures items are left at a temperature where they will not be damaged. If for any reason the washer dryer is stopped before the cycle finished, dry clothes should be removed immediately and not left in the dryer. Clothes should be quickly spread out flat to cool so heat can dissipate, not left bunched up, eg in a clothes basket.
- This product has been designed for use in a normal domestic (residential) environment. This product is not designed for any commercial use (whatsoever). Any commercial use by a customer will affect this product's Manufacturer's Warranty.
- Do not operate this product if there is an accumulation of lint in or around the washer dryer.
- Children should be supervised to ensure they do not play with the washer dryer.
- Unplug the machine from the power supply when it is not in use.
- Do not swing or put weight on the door.
- Your washer dryer is designed to stop operating in the event of power outage. When power is resumed, the machine will remain off until the 'POWER' button is pressed. To restart the washer dryer, touch 'POWER', select your wash or drying cycle and touch '▶||'.
- Never attempt to repair the washer dryer yourself.
- For problems that cannot be solved from information in this user guide, turn off and unplug your washer dryer and contact a Haier trained and supported service technician.

Spontaneous combustion

IMPORTANT!

To reduce the risk of fire in a washer dryer the following should be observed:

- Items that have been spotted or soaked with vegetable oil or cooking oil are a fire hazard and should not be placed in a tumble washer dryer.
- Items that have previously been cleaned in, washed in, soaked in or spotted sources such as a washer dryer. The items become warm causing an oxidation reaction in the oil. This oxidation creates heat. If the heat cannot escape the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping creating a fire hazard.
- Fabrics that contain vegetable oil, cooking oil or have been contaminated by hair care products should not be washed or dried. If unavoidable, these fabrics should be washed in a hot water wash with extra detergent-this will reduce, but not eliminate the fire hazard. The cool down cycle of the washer dryer should be used to reduce the temperature of these items. They must not be removed from the washer dryer and piled or stacked while hot.
- Items that have previously been cleaned in, washed in, soaked in or spotted with flammable liquids or solids, eg petrol/gasoline, kerosene, dry cleaning solvents, vegetable or cooking oil, acetone, denatured alcohol, some brands of spot removers, turpentine, waxes and wax removers or other flammable or explosive substances should not be placed in a washer dryer.
- Do not dry unwashed items in the washer dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Washer dryer must not be used if industrial chemicals used for cleaning.
- Carpet does not obstruct the openings for washing machines with ventilation openings in the base.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

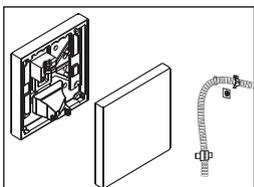


Preparation

Remove all packaging material including polystyrene base. While opening the package, water drops may be seen on plastic bag and porthole. This is normal as a result from water tests and quality control in the factory.

Note: Packaging disposal:



Keep all packaging material out of children's reach and dispose them in an environmentally friendly manner.

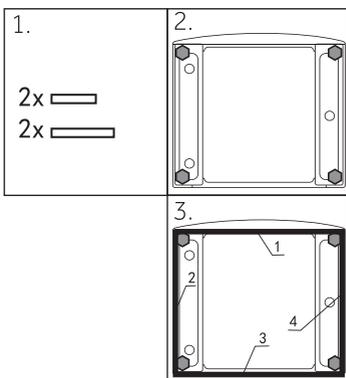

OPTIONAL: Install noise reduction pads

1. When opening the shrink package, you will find four noise reduction pads. These are used for reducing noise. (Fig. 1)
2. Lay the washing machine down to its side, porthole pointing upwards, bottom side towards operator. (Fig. 2)
3. Take out the noise reduction pads and remove the double-sided adhesive protective film; Paste around the bottom; The noise reduction pads under the washing machine cabinet as shown in Fig. 3. (two longer pads in position 1 and 3, two shorter pads in position 2 and 4). Finally set the machine upright again.

Removing the transportation bolts

The transportation bolts are designed for clamping antivibration components inside the appliance during transportation.

1. Remove all 4 bolts.

General information and tips:

Keep the transportation bolts in a safe place for later use. If the machine is to be moved to another location, replace transportation bolts to prevent damage.

2. Fill the transportation bolt holes with blanking plugs.

3. Adjust all feet to achieve a complete level position. This will minimize vibrations and noise during use. It will also reduce wear and tear. We recommend to use a spirit level for adjustment. Floor should be as stable and flat as possible.

Inlet hose

1. Connect inlet hose to the machine of water inlet valve.
2. Connect inlet hose to a water tap.
3. Tighten inlet hose connections and turn on water supply. Check for any water leaks. Stop all water leaks before continuing with installation.

Warning!



Appliance is only qualified for cold water supply!

Drain hose

Drainage could be installed in different ways. Regardless of drain hose has to reach between 80-100 cm. If possible always keep drain hose fixed to the clip at the back of the appliance.

1. Drain hose to sink

Use the drain hose bracket to keep drain hose end retained and out of any water level. Fix the bracket securely to avoid dropping due to operational movements.






2. Drain hose to sink siphon


Connection has to be securely sealed and fixed to corresponding adapter above the siphoning part!

Warning!



The drain hose should not be submerged in water and should be securely fixed and leak-free. If the drain hose is placed on the ground or if the pipe is at a height of less than 80 cm, the washing machine will continuously drain while being filled (self-siphoning).

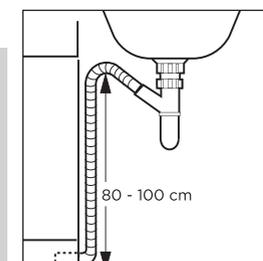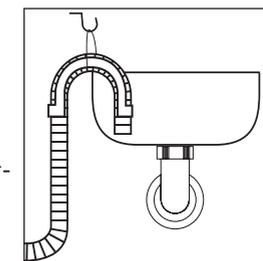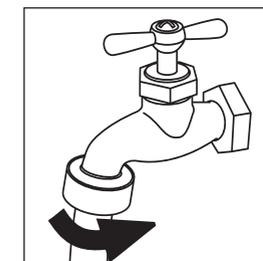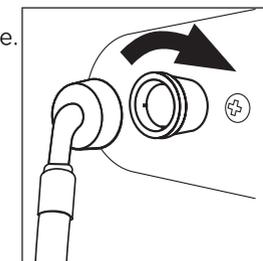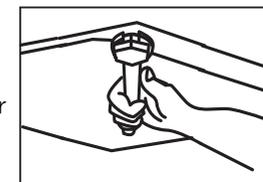

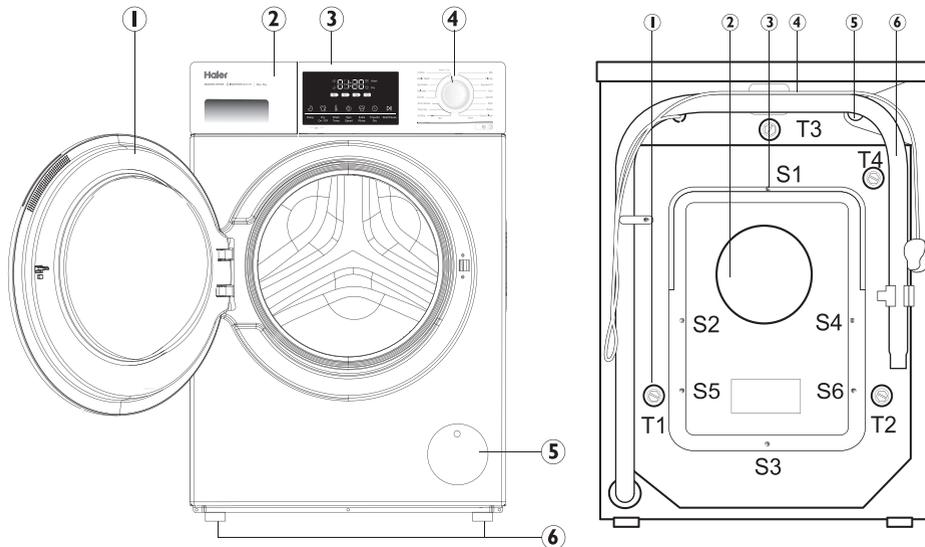

This drawing may be slightly different from the layout of the washing machine you have just purchased.

- | | |
|------------------------------|---------------------------------|
| 1. Door | 1. Transportation bolts (T1-T4) |
| 2. Detergent/Softener drawer | 2. Back cover |
| 3. Worktop | 3. Back cover screws(S1-S6) |
| 4. Control panel | 4. Power cord |
| 5. Service flap | 5. Water inlet valve |
| 6. Adjustable feet | 6. Drain hose |

Accessories

Check the accessories and literature in a cordance with this list.



Inlet hose assembly



5 blanking plugs



Drain hose bracket




Warranty-card



User manual



Noise reduction pads

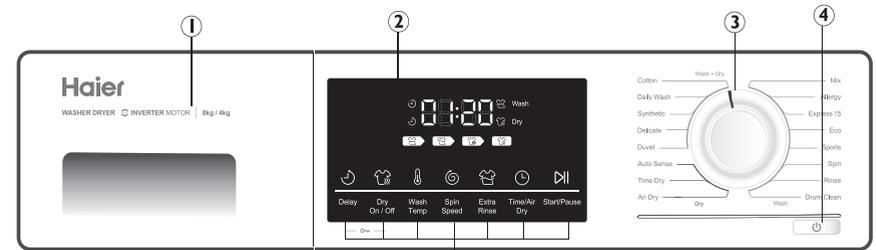


5 (a-g)

- | | |
|------------------------------|-----------------|
| 1. Detergent/Softener drawer | a. Delay |
| 2. Display | b. Dry On/Off |
| 3. programme selector | c. Wash Temp |
| 4. Power button | d. Spin Speed |
| 5. Function buttons (a-g) | e. Extra Rinse |
| | f. Time/Air Dry |
| | g. Start/Pause |

1.1 Detergent drawer

Open the drawer, three compartments can be seen :

- 1 Compartment : Liquid detergent for programme
- 2 Compartment : Softener, Conditioning agent etc.
- 3 Compartment : Powder detergent for programme

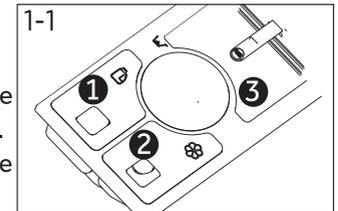


1.2 Programme selector

By turning the knob, one of 16 programmes can be selected, its default settings will be displayed.

1.3 Power button

Touch this button gently to switch on, the display is shining. Touch it again for about 2 seconds to switch off. If no panel element or programme is activated after a while, the machine will shut down automatically.

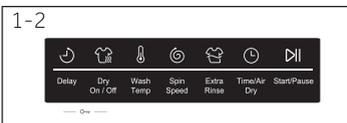

1.4 Function buttons

The function buttons (Fig. 1-2) enable additional options in the selected programme before programme start. The related indicators are displayed.


By switching off the appliance, all options are disabled.

If a button has multiple options, the desired option can be selected by touching the button sequentially.

To delete the setting or to cancel the setting process, press the function button, the LED switches off. Not all functions are available for all programmes.

Note: Factory settings

To get best results in each programme Haier has well defined specific default settings. If there is no special requirement default settings are recommended.

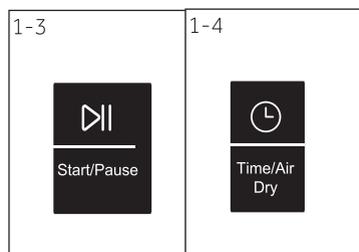

1.4.1 "Start/Pause" button

Touch this button (Fig. 1-3) gently to start or interrupt the currently displayed programme. During operation, the displayed washing time is blinking. During a pause also the time display is blinking.

1.4.2 Function "Time/Air Dry"

Touch this button (Fig. 1-4) in order to activate /de-activate the "Time/Air Dry" function.

By touching button sequentially, drying time can be seen. In combination with programme "Time/Air Dry", this function sets the drying time.


1.4.3 Function button "Extra rinse"

Touch this button (Fig. 1-5) to rinse the laundry more intense with fresh water. This is recommended for people with sensitive skin.

By touching the button several times one to three additional cycles can be selected. They appear in the display with P--0/P--1 /P--2/P--3.

1.4.4 Function "Spin Speed"

Touch this button (Fig. 1-6) to change or deselect the Spin Speed of the programme. If 0 is chosen, then the laundry will not spin.

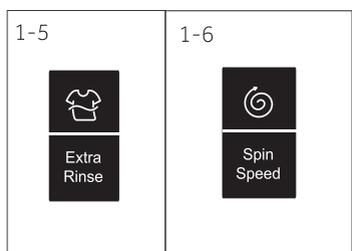

Note: Liquid detergent

If using liquid detergent, it is not recommended to activate the end time delay.


1.4.5 Function "Wash Temp"

Touch this button (Fig. 1-7) to change the washing temperature of the programme.

1.4.6 Function "Dry On/Off"

Knob is in the "Dry+Wash" area, Perform default settings; Touch "Dry On/Off" button (Fig. 1-8), dry function will be switched off and only perform wash function.

In conjunction with the "Delay" button, the child lock function can be switched on/off (see child lock).

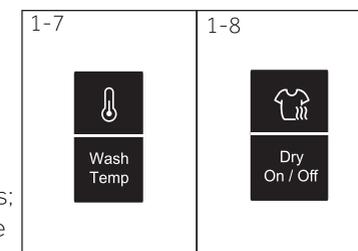

1.4.7 Function "Delay"

Touch this button (Fig. 1-9) to start the programme with a delay. End time delay could be increased in steps of 30 minutes from 0.5-24h. For example display off **6:30** means the cycle will finish in 6 hours and 30 minutes. Touch "Start/Pause" button to activate the time delay.

The time delay must be longer than the programme run time. Otherwise the programme will start immediately. For deactivating the time delay; rotate programme selector.


In conjunction with the "Dry On/Off" button, the child lock function can be switched on/off (see child lock).

1.4.8 Function "child lock"

This option blocks all panel elements against activation. After programme start press button "Delay" and "Dry On/Off" (Fig. 1-10) for 3 seconds simultaneously; "cLok" is displayed. For unlocking press again the two buttons.


1.5 Display

If the appliance is on display will light up the actual status on different sections. The information include washing time, spin speed, temperature, etc will appear (Fig. 1-11).

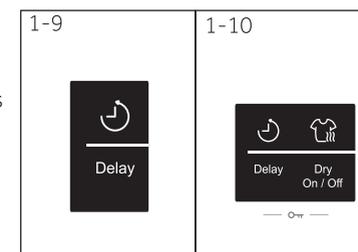

Programmes

14

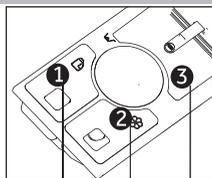

Detergent compartment for:

- ① Liquid detergent
- ② Softener, Conditioning agent etc.
- ③ Powder detergent

Programme	Wash Temp. °C	Preset °C	Detergent compartment			Fibre Type	Spin Speed	
			1	2	3		Preset rpm	Max rpm
1. Cotton	0-90	30	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Cotton/Synth.	1400	1400
2. Daily Wash	0-60	30	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Cotton fabrics	1400	1400
3. Synthetic	0-60	30	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Chemical fibre fabrics	1400	1400
4. Delicate	0-30	30	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Cotton fabrics	600	600
5. Duvet	0-40	40	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Duvet	800	800
6. Auto Sense	/	/	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Cotton/Synth/Underwear/Jeans	/	/
7. Time Dry	/	/	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Cotton/Synth/Underwear/Jeans	/	/
8. Air Dry	/	/	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Cotton/Synth/Underwear/Jeans	/	/
9. Mix	0-60	30	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Cotton/Synth.	1400	1400
10. Allergy	0-90	60	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Cotton	1000	1400
11. Express 15	0-40	0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Cotton/Synth.	1000	1400
12. Eco	0-90	30	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Cotton	1000	1400
13. Sports	0-40	30	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Sports Wear	1000	1400
14. Spin	/	/	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	All fabrics	1000	1400
15. Rinse	/	/	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	All fabrics	1000	1400
16. Drum Clean	90	90	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	---	600	600

Yes Optional No

15

Consumption

The indicated consumption values may differ in local conditions.

Programme	Wash Max load kg	Dry Max load kg	Extra Rinse Times	Wash Temp °C	Duration time h:min	Preset
1. Cotton	8	4	0-3	30	Auto	Wash+Dry
2. Daily Wash	4	4	0-1	30	3:18	Wash+Dry
3. Synthetic	8	2	0-3	30	Auto	Wash+Dry
4. Delicate	2	2	0-1	30	2:25	Wash+Dry
5. Duvet	2	1	0-3	40	2:47	Wash+Dry
6. Auto Sense	/	4	/	/	Auto	Dry
7. Time Dry	/	1	/	/	0:30	Dry
8. Air Dry	/	1	/	/	0:20	Dry
9. Mix	8	/	0-3	30	Auto	Wash
10. Allergy	8	/	0-2	60	1:46	Wash
11. Express 15	2	/	0-2	0	0:15	Wash
12. Eco	8	/	0-3	30	Auto	Wash
13. Sports	2	/	0-1	30	0:56	Wash
14. Spin	8	/	/	/	0:07	Wash
15. Rinse	8	/	0-3	/	0:26	Wash
16. Drum Clean	0	/	/	90	1:00	Wash

General information and tips:




Eco, 40 °C, 1400rpm is the program recommended for a normally soiled cotton load. Auto Sense, Dry ON is the program recommended for cotton loads.



IMPORTANT!

Over loading the washer dryer with a dry load above this line on any drying cycle can lead to poor drying performance.

This appliance is only for domestic use inside the house. If it is used for commercial, industrial or not intended purposes any Haier guarantee will not be valid anymore. Consider instructions on each garment label and wash only machine-washable laundry.

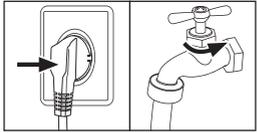

Power supply


Connect the washing machine to the power supply (220V to 240V/50Hz).

Water connection

Turn on the tap. The water must be clean and clear.


Warning!

Before use, check for leakage in the joints between the tap and the inlet hose by turning on the tap.

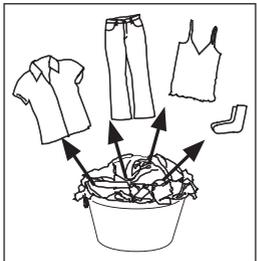

Preparing laundry

- Sort out clothes according to fabric (cotton, synthetics, wool or silk) and to how dirty they are. Pay attention to the care labelling of washing labels.
- Separate white clothes from coloured ones. Wash coloured textiles first by hand to check if they fade or run.
- Empty pockets (keys, coins, etc.) and remove harder decorative objects (e.g. brooches).
- Garments without hems, delicate and finely woven textile such as fine curtains are to be put into a wash bag (hand or dry cleaning would be better).
- Close zippers and hooks, make sure the buttons are sewn on tightly and place small items such as socks, belts, bras, etc. in a wash bag.
- Unfold large pieces of fabric such as bed sheets, bedspreads etc.
- Turn jeans and printed, decorated or color-intensive textiles inside out; If possible, wash them separately.

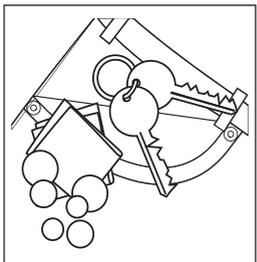

Warning!

Non-textile, as well as small, loose or sharp-edged items may cause malfunctions and damage of clothes and appliance.

Loading the appliance

Open the door and put clothes in the washing machine piece by piece. Close the door carefully.


Don't overload. Check if you can put a hand upright on top of load.

General information and tips:

After installation or long down time, run programme "Drum Clean" with no load and add detergent in washing agent compartment to remove possibly corruptive residues.

Selecting detergent

Washing efficiency and performance will vary, depending on detergent quality. Use only machine wash approved detergent and if needed specific detergents, e.g. for synthetic and woolen fabric. Pay attention to the using suggestion of detergent manufacturer.

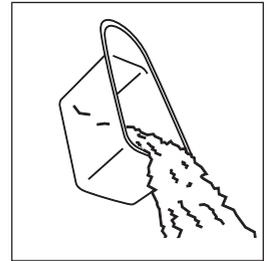


General information and tips:

Remove detergent residues before next wash cycle. Please follow given detergent dosage recommendation.


Adding detergent

Slide out the detergent drawer and put the required chemicals into corresponding compartments. Push back the drawer gently.

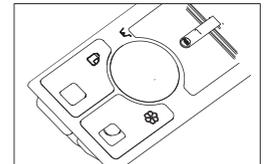

Select a programme

To get the best washing results, select the program that is most suitable to the laundry type loaded. Select program by turning the program selector dial.

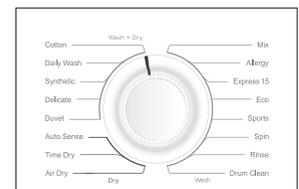



Add individual selections

Select required options and settings refer to “Control panel”.


Start wash programme

Touch “Start/Pause” button to start. Appliance operates according to selected settings. Changes are only possible by cancelling wash programme.

General information and tips:



1. For safety reasons the door is locked during the running cycle. It is only possible to open the door at the end of the programme or after the programme was cancelled correctly (see description below).
2. In case of high water level, high water temperature and drum spinning, the door will be locked and 'cLok' will be displayed.

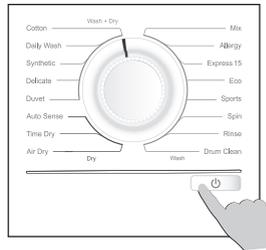

Interrupt cancel wash programme


To interrupt a running programme touch gently “Start /Pause” button. Touch it again to resume operation.

To cancel a running programme and all its individual settings, touch “Start/Pause” and then hold the power button for about 3 seconds.

General information and tips:



Choose programme settings carefully referring to icons on each laundry label and “Care chart”. Removing laundry promptly at the end of cycle will minimise wrinkling.

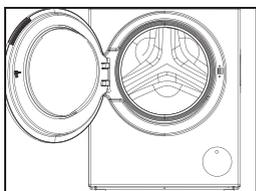

After washing

Turn off the water supply and unplug the power cord. Open the door to prevent formation of moisture and odours. Leave it open while not used.

Care chart

Washing Process

Maximum washing temperature 90°C normal process	Maximum washing temperature 60°C normal process	Maximum washing temperature 60°C mild process
Maximum washing temperature 40°C normal process	Maximum washing temperature 40°C mild process	Maximum washing temperature 40°C very mild process
Maximum washing temperature 30°C normal process	Maximum washing temperature 30°C mild process	Maximum washing temperature 30°C very mild process
Wash by hand max. temp. 40° C	Do not wash	

Bleaching Process

Any bleaching agent allowed bleach allowed	Only oxygen / non-chlorine	Do not bleach
--	----------------------------	---------------

Tumble Drying Process


Tumble drying possible normal temperature	Tumble drying possible lower temperature	Do not tumble dry
Line drying	Flat drying	

Ironing Process

Iron at a maximum sole-plate temperature of 200°C	Iron at a maximum sole-plate temperature of 150°C	Iron at a maximum sole-plate temperature of 110°C without steam (steam ironing may cause irreversible damage)
Do not iron		

Professional Textile Care Process

Professional dry cleaning in tetrachloroethene	Professional dry cleaning in hydrocarbons	Do not dry clean
Professional wet clean	Do not professional wet clean	

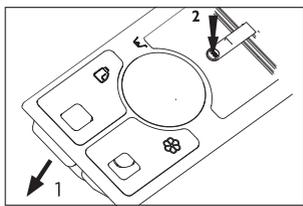

Cleaning the detergent drawer


Clean the drawer from detergent residues regularly. Pull out the drawer until it stops (1) and press the release button (2) to remove the drawer. Then flush the drawer with water until it is clean and insert the drawer back in the appliance.

Cleaning the machine

Unplug the machine during cleaning and maintenance. Use a soft cloth with soap liquid to clean the machine case and rubber components. Do not use organic chemicals or corrosive solvents.

Cleaning the drum

Remove accidentally washed metal parts, such as pins, coins, etc. from the drum because they cause rust stains and damage. Use a non-chloride cleaner for removing rust stains. Observe the warning hints of the cleaning agent manufacturer. Do not use any hard objects or steel wool for cleaning.

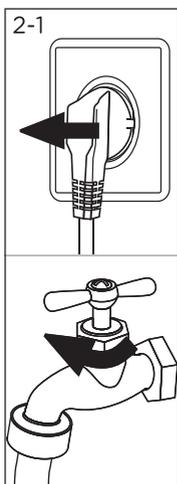

Cleaning the machine

If the appliance is left idle for a long period:

1. Pull out the power plug.
2. Unplug water supply.
3. Open the door to prevent formation of moisture and odours.
4. Do not leave the dispenser lids open for a long period of time, to prevent drying out.
5. Empty, clean and dry the detergent drawer.

Before next usage check carefully power cord, water inlet and drain hose. Make sure everything is properly installed and no leakage.

Pump filter

Clean the filter once a month and check the pump filter immediately if the appliance:






- doesn't drain the water.
- doesn't spin.
- does unmanual noise while running.



Warning!


Scalding Risk! Water in the pump filter can be very hot! Before any action please ensure water has cooled down.

1. Turn off and unplug the machine (Fig.2-1).
2. Open service flap at the right corner of appliance front.
3. Provide a flat container to catch leach water (Fig.2-2).
4. Pull the drain hose out and hold its end above the container(Fig.2-2).
5. Take the sealing plug out of the drain hose (Fig.2-2).
6. After complete drainage close drainhose and push it back into the machine (Fig.2-3).
7. Unscrew and remove counter clockwise the pump filter (Fig.2-4).
8. Remove contaminants and dirt (Fig.2-5).
9. Clean pump filter carefully (Fig.2-6).
10. Refix it thoroughly (Fig.2-7).
11. Close service flap.

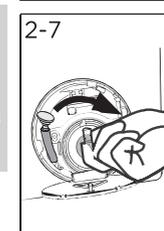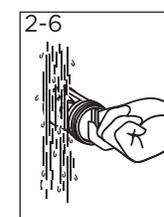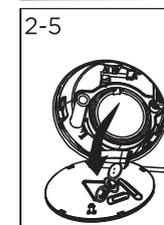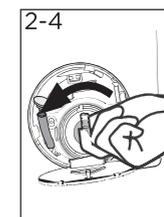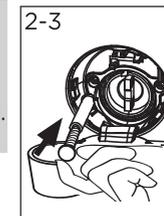

General information and tips:


Pump filter sealing has to be clean and undamaged. If lid is not full totally tightened, water will escape. The filter must be in place, or it may lead to leakage.

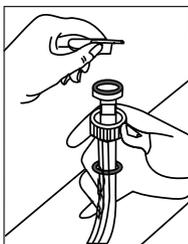

Water inlet valve and inlet valve filter

To prevent blockage of water supply by solid substance like lime clean regularly the inlet valve filter.

- Unplug the power cord and turn off the water supply.
- Unscrew the water inlet hose at the back of the appliance as well as on the tap.
- Remove the filters and flush them with water and a brush.
- Insert the filter and install the inlet hose.

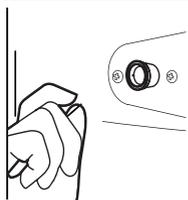

Choose the best detergent

Programme	Kind of detergent				
	Universal	Colour	Delicate	Special	Softener
Cotton	L/P	L/P	-	-	L/P
Daily Wash	L/P	L/P	-	-	L/P
Synthetic	-	L/P	-	-	L/P
Delicate	-	-	L/P	L/P	L/P
Duvet	-	-	L/P	L/P	-
Auto Sense	-	-	-	-	-
Time Dry	-	-	-	-	-
Air Dry	-	-	-	-	-
Mix	L/P	L/P	-	-	L/P
Allergy	L/P	L/P	-	-	L/P
Express 15	L/P	L/P	-	-	L/P
Eco	L/P	L/P	-	-	L/P
Sports	-	-	L/P	L/P	L/P
Spin	-	-	-	-	-
Rinse	-	-	-	-	L/P
Drum Clean	-	-	-	L/P	-

L = gel-/liquid detergent P = powder detergent O = optional - = no
 If using liquid detergent, it is not recommended to activate the time delay.


We recommend by using:

- ▶ Laundry powder: 20°C to 90°C* (best use: 40-60°C)
- ▶ Color detergent: 20°C to 60°C (best use: 30-60°C)
- ▶ Wool/delicate detergent: 20°C to 30°C (= best use)

* Choose 90 °C wash temperature only for special hygienic requirements.

Display code

Code	Cause	Solution
Auto	Automatic load detection	Laundry weight detection in process. please wait until program cycle time is displayed.
i: 25	Remaining wash cycle time.	
i9: 30	Remaining delay end time	Likely showing the delay end operation.
Loc i-	Door cannot be opened due to water level or hot water in the drum, or if the drum is still moving, wait for it to stop before attempting to open the door.	Wait for the program to end or cancel, and select "Spin" programme, in case that there is still hot water in the drum to avoid scalding; select the "Rinse" programme and leave it to wash, or several minutes later, do "Spin" programme. This should allow the drum to cool down.
End	End of cycle.	
Err Fltr	Drainage error, water not emptied.	Clean pump filter. Check drain hose for blockage, and ensure it is installed properly.
E2	Lock - error with door.	Shut the door properly.
E4	Water level not reached the set level in 8 minutes.	Check if water supply and water pressure is normal. Drain hose is self-syphoning.
E8	Water protective level-error.	Contact the after sales service.
F3	Temperature sensor-error.	Contact the after sales service.
F4	Heating error (Appears at the end of a cycle).	Contact the after sales service.
F7	Motor - error.	Contact the after sales service.
FR	Water level sensor error.	Contact the after sales service.
FEx (X=1,2,3)	Electronic control - error.	Contact the after sales service.
Unb	Unbalanced load and not able to spin.	Check and balance the laundry load in the drum. Also reduce the load if too heavy. Restart with a spin program.
H	Temperature in drum is higher than 80 °C.	Temperature in the drum is over 60 °C therefore it is not safe to open door. Wait until it drops below 60 °C then the machine will open door.
F9	Dry temperature sensor error.	Contact the After sales services.
Fd	Dry heating element error.	Contact the After sales services.
FE	Dry motor error.	Contact the After sales services.

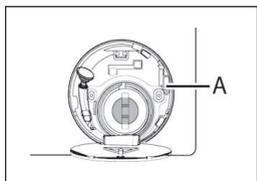

In case of power failure

The current programme and its setting will be saved. When power supply is restored, operation will be resumed.

If a power failure cuts an operating wash programme, door opening is mechanically blocked. To get out any laundry, water level should not be seen in the glassy porthole of the door. Danger of burns! Water level has to be lowered as described in "Pump filter". Not till then pull level(A) beneath service flap until door as unlocked by a gentle click. Afterwards refix all parts.

Troubleshooting without display code

Problem	Cause	Solution
Washing machine fails to operate	<ol style="list-style-type: none"> 1. Power failure 2. Machine hasn't been switched on. 3. Door is not properly closed. 4. Programme is not started yet. 	<ol style="list-style-type: none"> 1. Check power supply. 2. Switch the machine on. 3. Close the door properly. 4. Touch " Start /Pause" button.
Washing machine will not fill with water.	<ol style="list-style-type: none"> 1. No water inlet. 2. Inlet hose is kinked. 3. Inlet hose filter is blocked. 4. Water pressure is less than 0.03MPa. 5. Door is not properly closed. 6. Water supply failure. 	<ol style="list-style-type: none"> 1. Check water tap. 2. Check inlet hose. 3. Unblock inlet hose filter. 4. Check water pressure. 5. Close the door properly. 6. Ensure the water supply.
Machine is draining while being filled.	<ol style="list-style-type: none"> 1. Height of drain hose is below 80cm. 2. Drain hose end is submerged in water? 	<ol style="list-style-type: none"> 1. Make sure that drain hose is properly installed. 2. Make sure the drain hose is not in water.
Drainage failure.	<ol style="list-style-type: none"> 1. Drain hose is blocked. 2. Pump filter is blocked. 3. Drain hose end is higher than 100cm above floor level. 	<ol style="list-style-type: none"> 1. Unblock drain hose. 2. Clean pump filter. 3. Make sure that drain hose is properly installed.

Problem	Cause	Solution
Strong vibration while spinning.	<ol style="list-style-type: none"> 1. Not all transportation bolts have been removed. 2. Appliance has no solid position. 3. Machine load is not balanced. 	<ol style="list-style-type: none"> 1. Remove all transportation bolts. 2. Ensure solid ground and a levelled position. 3. Check load weight and balance.
Operation stops for a period of time.	<ol style="list-style-type: none"> 1. Appliance displays error code. 2. Problem due to load pattern. 	<ol style="list-style-type: none"> 1. Consider display codes. 2. Reduce or adjust load. 3. Cancel programme and restart.
Operation stops before completing wash cycle.	Water or electric failure.	Check power and water supply.
Excessive foam floats drum and/or detergent drawer.	<ol style="list-style-type: none"> 1. Detergent is not a appropriate. 2. Excessive use of detergent in manually dosage. 	<ol style="list-style-type: none"> 1. Check detergent recommendations. 2. Reduce amount of detergent.
Automatic adjustment of washing time	Washing programme duration will be adjusted.	This is normal and doesn't affect functionality.
Spinning fails	Unbalance of laundry.	Check machine load.Run the Spin programme again.

General information and tips:



If too much foam is visible during spin cycle, the motor will stop and drain pump will activate for 90 seconds. If that elimination of foam fails up to 3 times, programme ends without spinning.

Technical data


26

Basic technical information regarding the appliance

Power source	220-240V/50Hz
Max working current (A)	10
Water pressure (MPa)	$0.03 \leq P \leq 1$
Nominal load (kg)-Wash	8
Nominal load (kg)-Dry	4
Max spinning speed (rpm)	1400
Washing programmes	16
Max power (W)-Wash	1850
Max power (W)-Dry	1900
Dimensions (HxDxW mm)	850*636*595
Net weight (kg)	76

27

Technical data

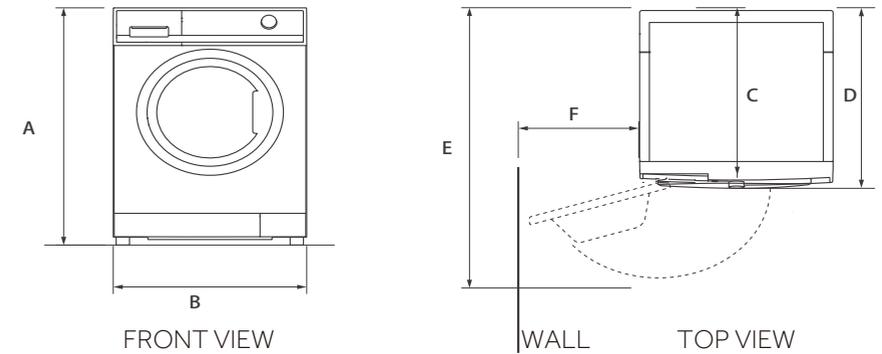

PRODUCT DIMENSIONS	HWD8040BW1
A Overall height of product mm	850
B Overall width of product mm	595
C Overall depth of product (To main control board size) mm	566
D Overall depth of product mm	636
E Depth of door open mm	1110
F Minimum door clearance to adjacent wall mm	390

Note: The exact height of your washer is dependent on how far the feet are extended from the base of the machine. The space where you install your washer needs to be at least 40mm wider higher 20mm and 20mm deeper than its dimensions.