

Model no:  
**CMO24SS2** (refer page 2 for metric measurements)


 


| Product Dimensions                                   | in      |
|--|---------|
| Ⓐ Overall height of microwave                        | 14 7/8" |
| Ⓑ Overall width of microwave                         | 24 5/8" |
| Ⓒ Overall depth of microwave                         | 19"     |
| Ⓓ Depth of front panel                               | 1"      |
| Ⓔ Depth of chassis                                   | 16 3/4" |
| Ⓕ Width of door                                      | 19 7/8" |
| Ⓖ Width of control panel                             | 4 5/8"  |
| Ⓜ Height of chassis                                  | 14 1/4" |
| Ⓨ Height from bottom of chassis to bottom of product | 5/8"    |

| Cavity Dimensions        | in       |
|--------------------------|----------|
| Overall height of cavity | 19 3/16" |
| Overall width of cavity  | 25 3/4"  |
| Overall depth of cavity  | min 20"  |

INDICATES PRODUCT / CABINETRY DATUM -----

DATE: **06.09.2024** 90001511B

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. [www.fisherpaykel.com](http://www.fisherpaykel.com)

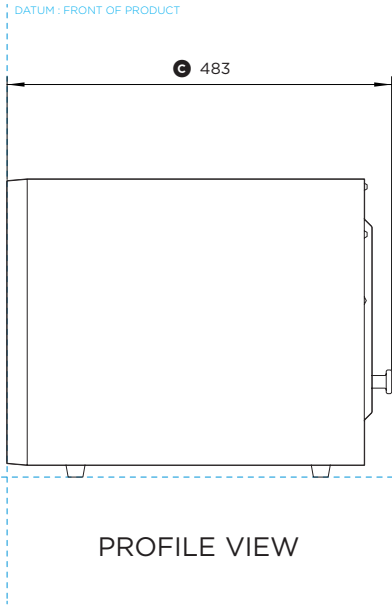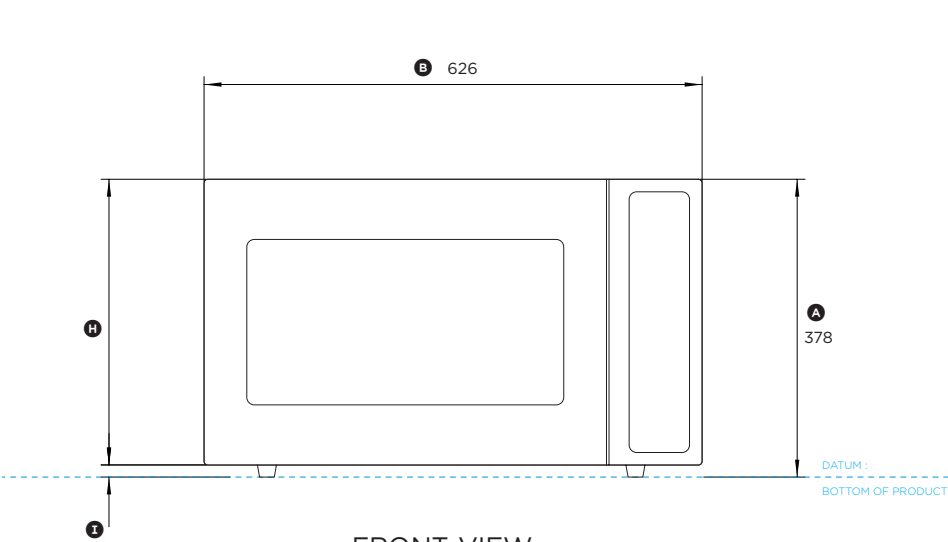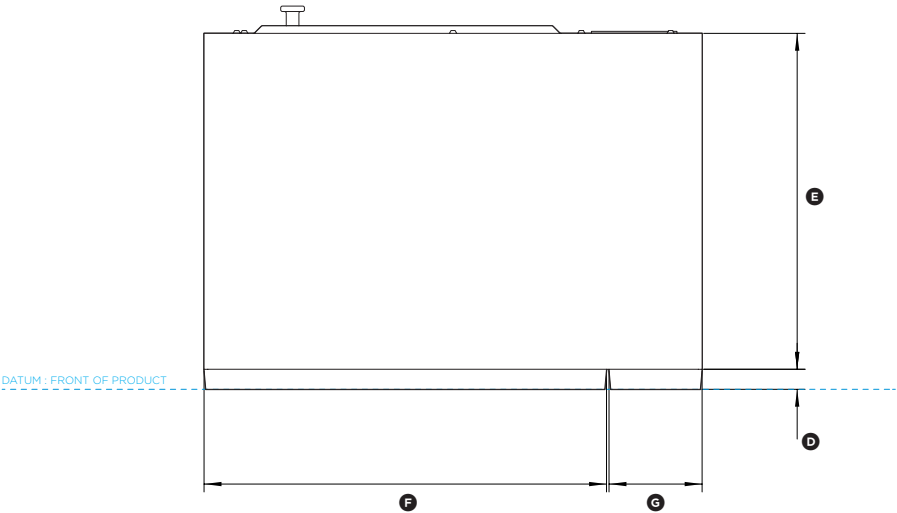

Model no:  
**CMO24SS2** (refer page 1 for imperial measurements)




| Product Dimensions                                   | mm  |
|--|-----|
| Ⓐ Overall height of microwave                        | 378 |
| Ⓑ Overall width of microwave                         | 626 |
| Ⓒ Overall depth of microwave                         | 483 |
| Ⓓ Depth of front panel                               | 25  |
| Ⓔ Depth of chassis                                   | 425 |
| Ⓕ Width of door                                      | 507 |
| Ⓖ Width of control panel                             | 116 |
| Ⓜ Height of chassis                                  | 362 |
| Ⓣ Height from bottom of chassis to bottom of product | 16  |

| Cavity Dimensions        | mm  |
|--------------------------|-----|
| Overall height of cavity | 487 |
| Overall width of cavity  | 654 |
| Overall depth of cavity  | 508 |

INDICATES PRODUCT / CABINETY DATUM -----

DATE: **06.09.2024** 90001511B

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. [www.fisherpaykel.com](http://www.fisherpaykel.com)

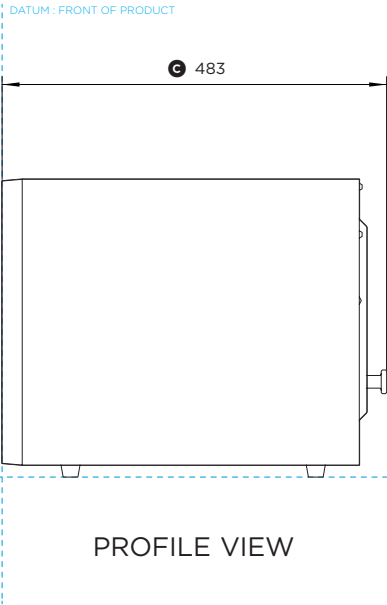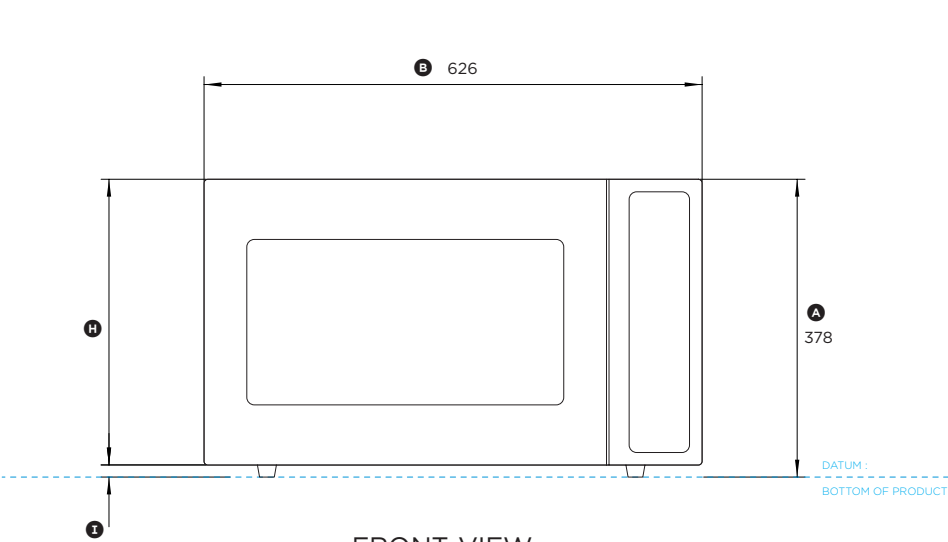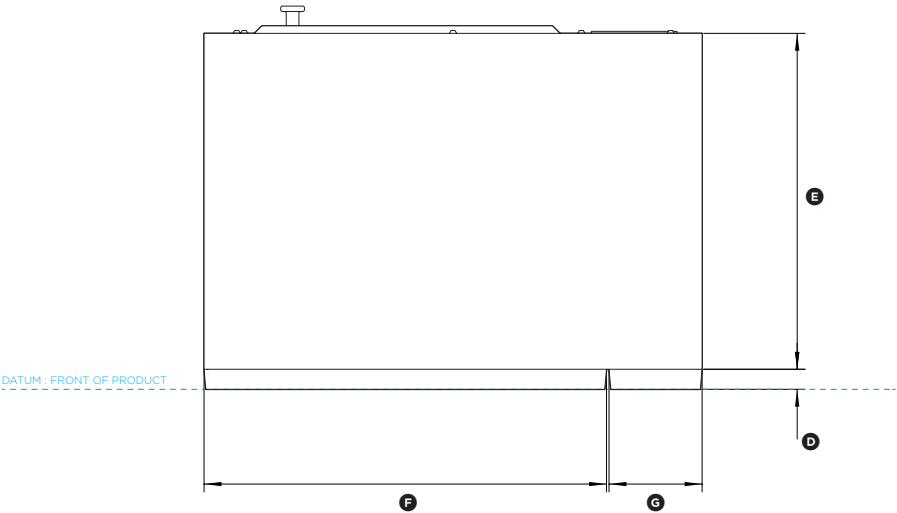

Model no:  
**CMO24SS2** (refer page 1 for imperial measurements)

| Product Dimensions                                   | mm  |
|--|-----|
| Ⓐ Overall height of microwave                        | 378 |
| Ⓑ Overall width of microwave                         | 626 |
| Ⓒ Overall depth of microwave                         | 483 |
| Ⓓ Depth of front panel                               | 25  |
| Ⓔ Depth of chassis                                   | 425 |
| Ⓕ Width of door                                      | 507 |
| Ⓖ Width of control panel                             | 116 |
| Ⓜ Height of chassis                                  | 362 |
| Ⓣ Height from bottom of chassis to bottom of product | 16  |

| Cavity Dimensions        | mm  |
|--------------------------|-----|
| Overall height of cavity | 487 |
| Overall width of cavity  | 654 |
| Overall depth of cavity  | 508 |

INDICATES PRODUCT / CABINETRY DATUM -----

DATE: **06.09.2024** 90001511B

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. [www.fisherpaykel.com](http://www.fisherpaykel.com)