

# **FISHER & PAYKEL**

## **TOP LOAD WASHING MACHINE**

---

WL8058G1, WL9058G1, WL1064G1, WL1064P1, WL1264P1 models

**INSTALLATION GUIDE**

**NZ AU**



**⚠ WARNING!**



**Electrical Shock Hazard**

Failure to follow this advice may result in electrical shock or death.

- If you are using an extension cord or a portable electrical outlet device (eg multi-socket outlet box), ensure that it is positioned so that it does not come into contact with water or moisture.

**READ AND SAVE THIS GUIDE**

When using your clothes washer, follow basic precautions, including the following:

**General**

- This product has been designed for personal, family or household use. This product is not designed for any commercial use. Any commercial use will terminate this products manufacturer’s warranty.
- A damaged power cord must be replaced by a Fisher & Paykel trained and supported service technician or similarly qualified person in order to avoid a hazard. Do not use the appliance until it has been repaired to avoid a risk of electric shock.
- Do not operate this machine if it has been damaged during transport. Contact your Fisher & Paykel dealer or Fisher & Paykel trained and supported service technician.
- This clothes washer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or given instructions on how to use the washer by someone responsible for their safety.
- Keep children away from the washer while it is in operation.
- Supervise children to ensure they do not play with the washer or climb inside the drum.
- The washer should only be used for washing and rinsing of textiles where this is indicated on the care label.
- Do not add petrol, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapours that could ignite or explode.
- The lid will be locked when Start/Pause is pressed at the start of the cycle for safety reasons. To unlock the lid and open it during the cycle (not recommended), press Start/Pause. Never force the lid open.
- Do not touch or operate the machine with wet hands or with bare-feet.
- Ensure the installation provides accessibility to the plug or incorporate a switch in the fixed wiring in accordance with the wiring rules to allow disconnection of the appliance from the supply after installation.
- Read and follow the detergent manufacturers’ instructions carefully. Instructions on how to use the detergent will be clearly indicated on the pack. Remember to store your detergents out of the reach of children.

MODEL CODE	MAX CAPACITY* (KG)
WL8058G1	8
WL9058G1	9
WL1064G1, WL1064P1	10
WL1264P1	12

\*Capacity refers to the maximum dry weight of items the washer can wash at any one time.

- Do not overload your washing machine beyond its rated capacity.
- Do not wash an electric blanket in your washer unless the care label specifically states it is safe to do so.
- Do not wash curtains in this washer, as sunlight makes them brittle and they may disintegrate during washing.
- The only user-removable parts of the washer are the inlet hose(s), the dispenser funnels (tops) and lint filters. No other parts are designed to be removed by anyone other than a Fisher & Paykel trained and supported service technician.

**Installation**

- For guidance on how to install your product, please refer to installation instructions contained in this document.

**Water supply requirements:**

- Inlet water static pressure: Max. 1MPa (145psi), 50kPa (7.3psi)
- Inlet water flow rate at tap: Min. 8 litres/min.
- A pressure-reducing valve must be installed if pressure is higher than 1MPa.
- For optimum wash performance check the supply pressure is within the recommended range.
- New hose sets provided with the washer should be used to connect the washer to the water mains. Old hose sets should not be re-used.
- We recommend the inlet hose(s) are changed every 5 years. WARNING: Failure to do so may result in a flood and damage to property.
- The hot water temperature should not exceed 65°C and the cold water temperature not exceed 35°C. Temperatures above these may cause the machine to fault or cause damage to the machine.
- Install the machine on a solid and level floor surface ensuring it has at least 20 mm clearance on each side. The washer must not be installed on any textured floor coverings (eg carpet, rugs).

**Disposal**


- When disposing of the washer, it is recommended that the lid is removed to avoid children getting trapped inside, and that the electrical cable is cut off close to the washer.

**SAVE THESE INSTRUCTIONS**


The models shown in this installation guide may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, please go to our website [www.fisherpaykel.com](http://www.fisherpaykel.com) or contact your local Fisher & Paykel dealer.

## SUPPLIED PARTS


- Keep all packing materials until the unit has been inspected.
- Inspect the product to ensure there is no shipping damage. If any damage is detected contact the dealer or retailer you bought the product from to report the damage.
- Fisher & Paykel is not responsible for shipping damage.

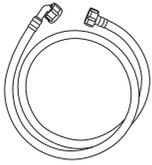


Inlet hose cold (1)

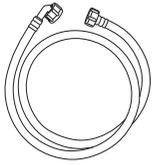

Inlet hose hot (1)

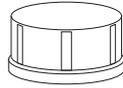


Inlet valve cap (1)

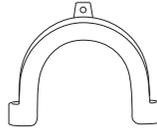


Drain hose guide (1)




User guide (1)

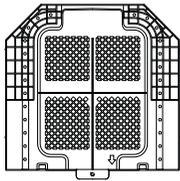

Bottom plate (1)

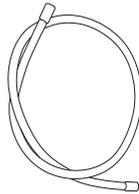

Drain hose (1)

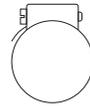

Drain clamp (1)


## SPARE PARTS

SPARE PARTS*	PART NO.
Hose(s) inlet long (1.5 m)	422680P
Hose(s) inlet large bore	426123P


\*Available from your Fisher & Paykel dealer or a Fisher & Paykel trained and supported service technician

**PRODUCT DIMENSIONS**

WL8058G1 & WL9058G1 models

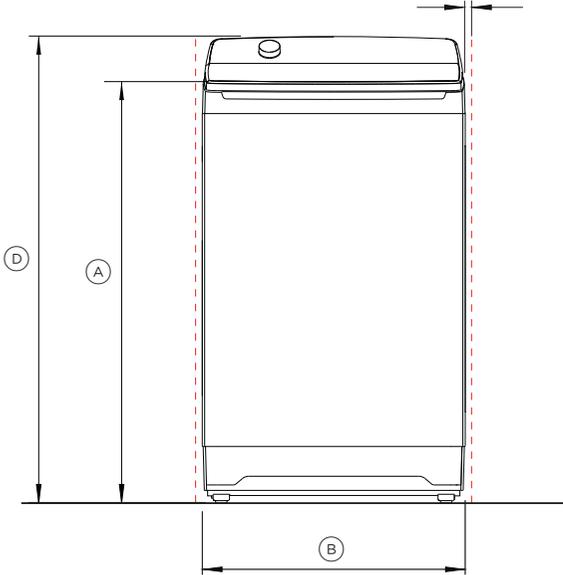

**FRONT**

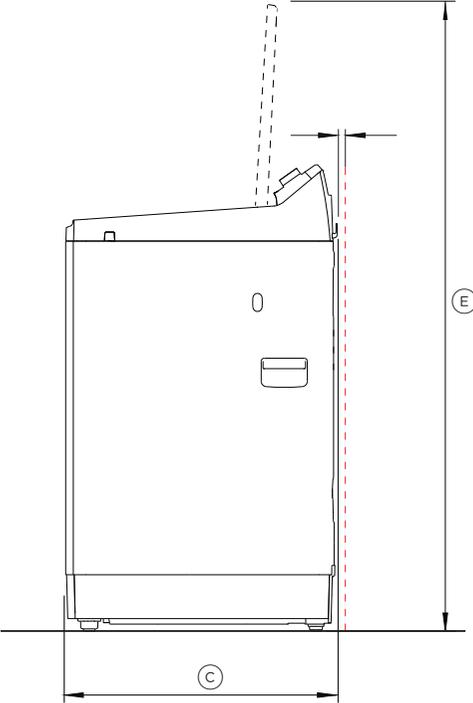

**PROFILE**


<b>PRODUCT DIMENSIONS</b>	<b>MM</b>
Ⓐ Overall height of product (to highest point on lid)	995 - 975
Ⓑ Overall width	580
Ⓒ Overall depth*	600
Ⓓ Height of product lid closed (to highest point of console)	1020 - 1040
Ⓔ Height of product lid open	1380 - 1400

\* Exact height is dependent on foot adjustment


Actual product dimensions may vary by ± 2mm.

**PRODUCT DIMENSIONS**

WL1064G1, WL1064P1 & WL1264P1 models

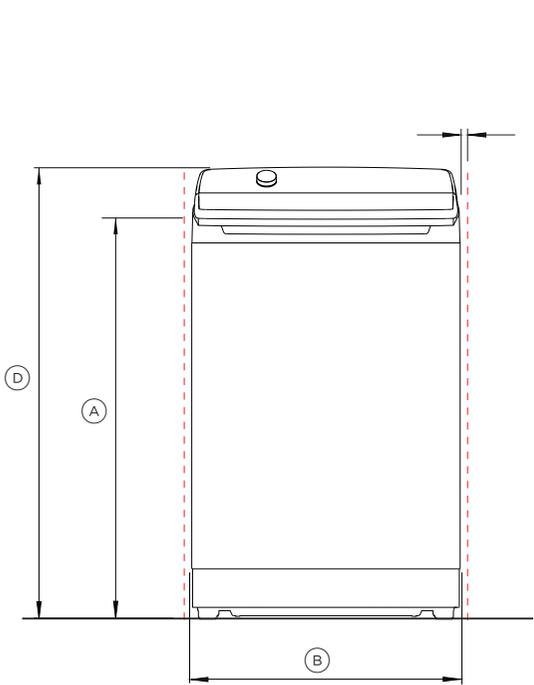

**FRONT**

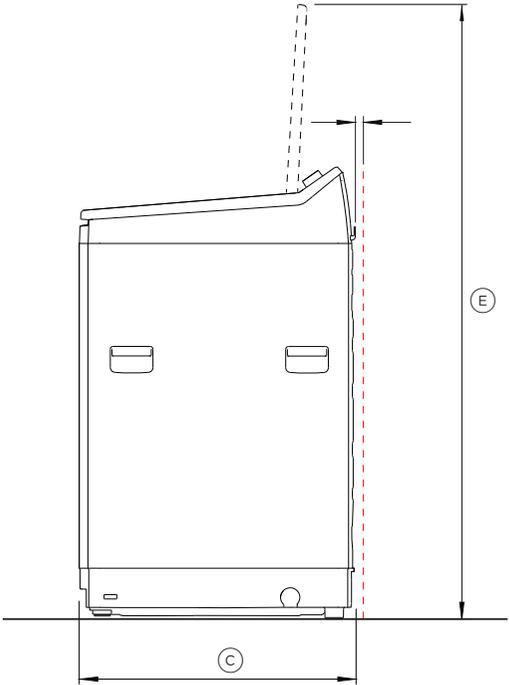


**PROFILE**

<b>PRODUCT DIMENSIONS</b>	<b>MM</b>
Ⓐ Overall height of product (to highest point on lid)	1025 - 1045
Ⓑ Overall width	640
Ⓒ Overall depth*	650
Ⓓ Height of product lid closed (to highest point on console)	1085 - 1105
Ⓔ Height of product lid open	1500 - 1520


\* Exact height is dependent on foot adjustment

Actual product dimensions may vary by ± 2mm.


## CAVITY & CLEARANCE DIMENSIONS

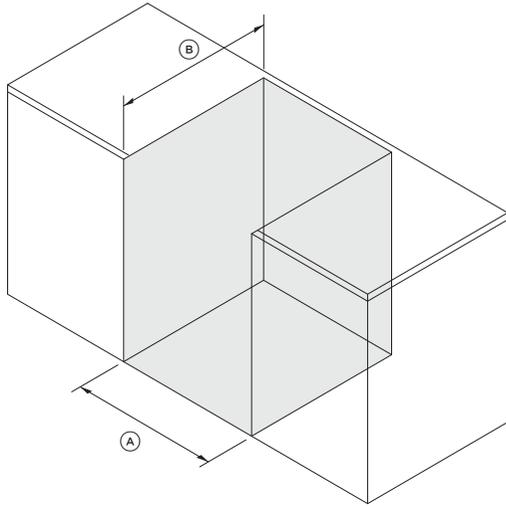

**ISOMETRIC**

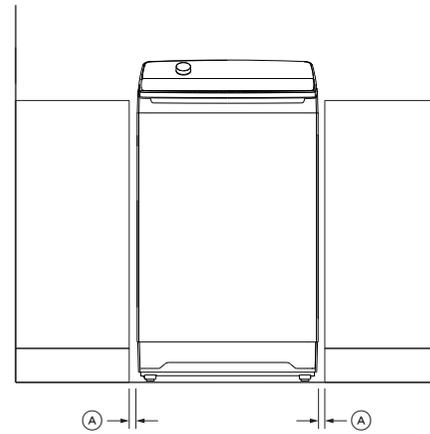

**FRONT**

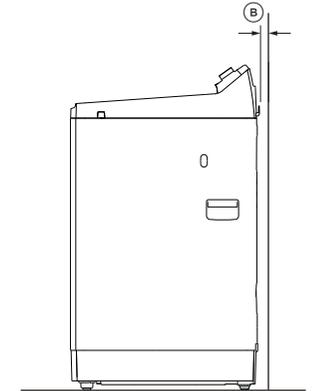

**PROFILE**


CAVITY DIMENSIONS	580 MODELS	640 MODELS
Ⓐ Minimum cavity width	620	680
Ⓑ Minimum cavity depth	665	715

CLEARANCE DIMENSIONS	MM
Ⓐ Minimum clearance to either side, wall or adjacent product	20
Ⓑ Minimum gap clearance at the rear of the product	50


Actual dimensions may vary by  $\pm 2$ mm.  
For paired installation dimensions please visit [fisherpaykel.com](http://fisherpaykel.com)

# ELECTRICAL & PLUMBING CONNECTION

## CONNECTION LOCATIONS / LENGTHS

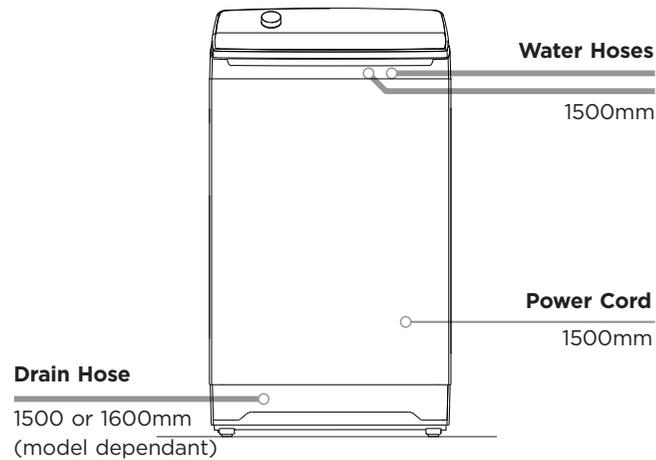


580 models only

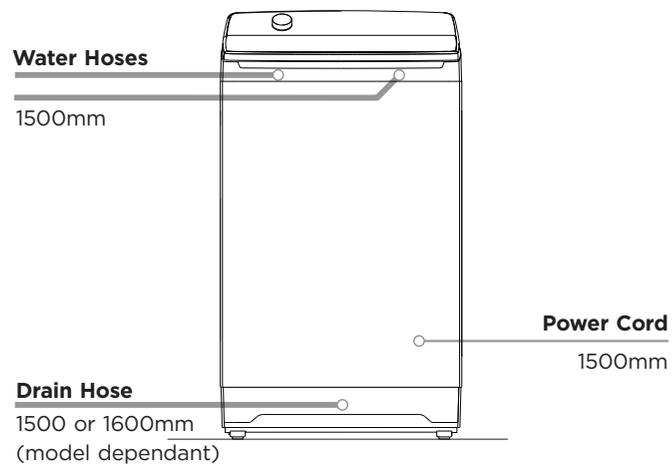

640 models only

## DRAINAGE HEIGHTS

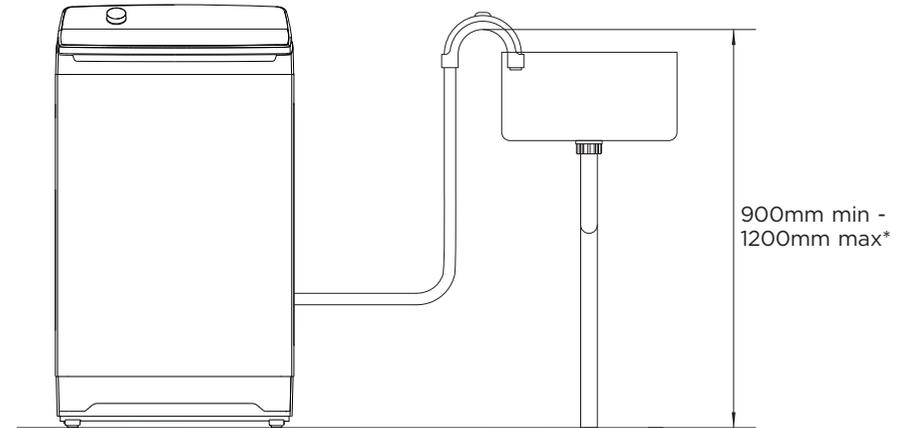

\* Recommended standpipe height is 1000mm

## SPECIFICATIONS

### ELECTRICAL

Supply	220 - 240 V, 50 Hz
Service	10 amp circuit


### PLUMBING

Pressure	max 1 MPa (145psi) min 50kPa (7.3psi)
Flow rate at tap	Min. 8 litres/minute
Cold water temp	max 35°C
Hot water temp	max 65°C

## UNPACKING

### Unpacking

To ensure the best performance from your new washer please follow the instructions below.

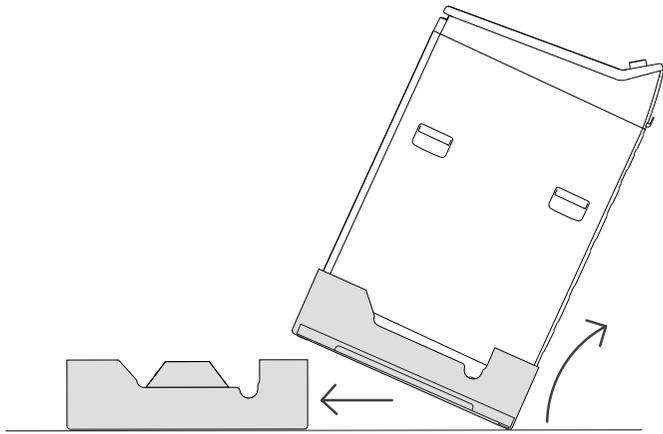

**Your washer is heavy, we recommend two persons to move and install.**

- ① Remove the outer packaging.
- ② Using two people, lift the washer up and away from the base packer. Hold the base packer down while lifting the washer up. Move base packer to side and place the machine gently on floor.
- ③ Lift the lid and remove the drum packer from the drum.
- ④ Remove the hoses and accessories.
- ⑤ Keep the base packer and drum packer in case they are required for future transit.

**Ensure that the base packer has been removed before operating your machine.**

### Installing the bottom plate

The bottom plate is installed to reduce noise from the washing machine during use.

- ① Tilt the machine backwards against a supported wall.
- ② Place the plate onto the bottom of the machine.
- ③ Clip and screw the bottom plate to the washer.
- ④ Once the screw is tight and the bottom plate is secure, return the washer to its standing position.


## WATER SUPPLY

### Water supply requirements

If you have an uncontrolled water heating source (eg a wet back or solar heating system) you should fit a tempering valve. This will ensure the hot water temperature remains within safe limits. Contact your registered plumber to select and install the tempering valve.

Your cold water should not exceed 35°C and your hot water should not exceed 65°C. Temperatures above these may cause the washer to fault or cause damage to the washer.

### Inlet hose(s)

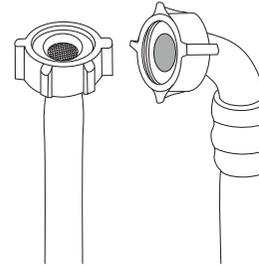

**Failure to adhere to the following guidance may result in a flood and damage to property. Only use the new hose set(s) provided with your washer.**

- ① Connect the straight ends of the inlet hose(s) to the tap(s), there are washers fitted in both ends.
- ② Connect the elbow ends to the corresponding washer inlet valves. If present, the hot valve is coloured orange to make this easier.
- ③ Tighten the inlet hose(s) ends by hand until the hose seal just makes contact with the tap-sealing face. Continue to tighten a further half-turn.
- ④ Make sure there are no kinks in the hose(s).
- ⑤ Turn the tap(s) on and check for leaks. Check for leaks again after 24 hours.

### Cold supply only

If you only have a cold water supply, you must connect the inlet valve cap (blanking cap) provided with your washer to the hot inlet valve. The cap prevents water leaking out of the hot valve. This appliance incorporates backflow protection complying with AS3500.1/IEC61770. No further backflow protection is required for connection to the water supply.

## DRAINING


In multi-storey apartments or any upper floor, the washer should be installed on a floor equipped with a drain. Draining must comply with local by-laws.

### Installing Drain hose

- ① Remove the cap of the drain hose outlet. Note: A small amount of water may come out when the cap is removed. This is normal as there maybe some water left in the pump as the machine is tested during manufacture.
- ② Connect the drain hose to the connection point on the lower right side of the cabinet rear, and fasten with drain hose clamp (provided).

### Place the drain hose in a tub or standpipe

The hose guide is used to hold the drain hose over the tub or standpipe.

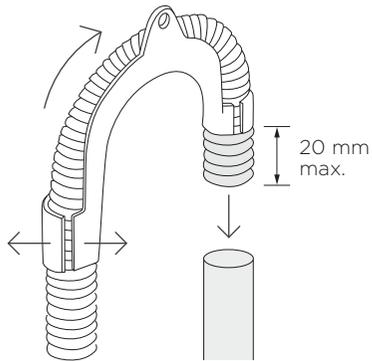

- ① Flex the guide apart and pull the hose through the guide.
- ② Ensure a maximum of 20mm of the hose is left exposed at the end.
- ③ Secure the hose guide to prevent it dislodging from the standpipe or tub.
- ④ Do not fit the hose to a drain spigot. Drainage must not be airtight in order to prevent siphoning.

If the drain hose is placed on the ground or if the tub or standpipe is less than 900mm high, the washer will continuously drain (siphon) while being filled.

Tub or standpipe height should be a minimum of 900mm.

Regularly check that your tub or standpipe is free from lint or other obstructions. This may affect operation or cause flooding.

If in future the product needs to be moved, disconnect the drain hose to prevent damage. Have a towel handy to absorb residual water, then refit the drain cap. Place the drain hose inside the drum during transportation, and storage.

The pump filter cap on the lower rear of the machine is not to be removed by anyone other than a trained service technician.

## LEVELLING THE WASHER


### Levelling instructions

**It is IMPORTANT to level the washer to ensure good spin performance.**

Your washer is equipped with adjustable feet at the front. Ensure they do not move once you have levelled your washer by hand-tightening the locknuts on each of the feet.


After levelling, the corners of the washer should be clear of the floor and the washer must not rock in any direction.

Move the washer to its final position allowing for required clearances.

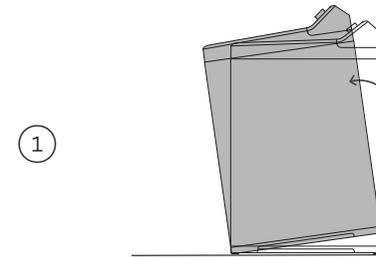


Release the rear feet:

- Close the lid and tilt washer forward away from the wall. Gently lower washer down.

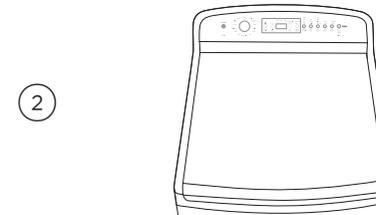

Level the washer side to side:

- Check whether washer rocks from side to side. Wind the front feet up or down to correct any rocking. Open the lid and check the drum is in a central position.

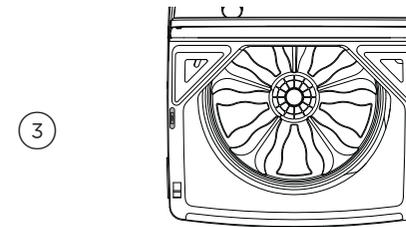

Level the washer front to back:

- Open the lid, check the drum is still in a central position.
- Wind the front left or right foot up or down, to adjust. There should be equal weight on both front feet. There must be no rocking in any direction, and the bowl must be in a central position.
- If the washer is not level repeat the above steps.
- Once level, hand tighten the locknuts on the front feet.

**If moving or transporting your washer in the future, ensure you tape the lid down.**


## COMPLETE INSTALLATION

### Completing the installation

- Turn on the water and check all hose connections for leaks. Ensure there are no kinks in the hoses. Check the hose connections for leaks again after 24 hours.
- Uncoil power cord, remove and discard the plastic pin cover, and plug into wall socket.
- Connect the appliance to an earthed outlet protected by a fuse of suitable capacity.
- Complete a test cycle with an empty drum.

### Test cycle

Your washer must be correctly installed before use. Check the installation and operation of the washer using the following procedure:

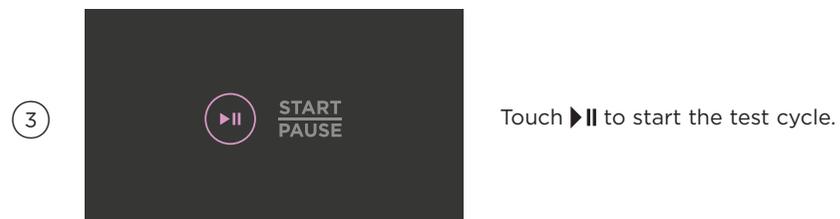

**If there are any problems, you must address these before proceeding with normal use. The washer will automatically turn off at the end of the cycle if there are no problems.**

If you need further assistance, please contact a Fisher & Paykel trained and supported service technician or our Customer Care Centre.

## INSTALLER CHECKLIST

### TO BE COMPLETED BY THE INSTALLER

- Have all packaging been removed?
- Is the washer correctly levelled, feet are extended and cabinet corners are clear of the floor?
- Is the drain hose connected and clamped to the drain outlet at the rear of the machine?
- Is the drain hose threaded through the hose guide 'U bend' (with no more than 20mm extended) and hooked into your standpipe or tub?
- Is the hot hose connected to the hot valve marked 'H', or blanking cap installed?
- Is the cold hose connected to the cold valve marked 'C'?
- Have the taps been turned on?
- Has the power cord been connected to an appropriate power supply and the power turned on?
- Have you performed a test cycle?
- Complete a **HYGIENE** cycle with High water level selected, with a half-load amount of detergent and without a load to remove any residues remaining from the manufacturing process.

### Complete and keep for safe reference:

Model \_\_\_\_\_

Serial no. \_\_\_\_\_

Purchase date \_\_\_\_\_

Purchaser \_\_\_\_\_

Dealer address \_\_\_\_\_

Installer's name \_\_\_\_\_

Installer's signature \_\_\_\_\_

Installation company \_\_\_\_\_

Installation date \_\_\_\_\_

**FISHERPAYKEL.COM**

© Fisher & Paykel Appliances 2023. All rights reserved.

The models shown in this guide may not be available in all markets  
and are subject to change at any time.

The product specifications in this guide apply to the specific products and  
models described at the date of issue. Under our policy of continuous product  
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,  
please go to our website or contact your local Fisher & Paykel dealer.

**431197C 08.23**