

## WASH PROGRAM DATA

Wash program times indicated are approximate. For information on which program to use for your load, refer to your user guide.

### USA and Canada

#### DD24DTXI, DD24DTX6HI models

CYCLE	WASH PROGRAM (CYCLE TIME)							
	AUTO (n/a)	HEAVY (-180min)	MEDIUM (-140min)	LIGHT (-35min)	60 MIN (-60min)	GLASSWARE (-148min)	ECO* (-195min)	RINSE (-15min)
Pre wash	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a
Main wash	118°F - 149°F (48°C - 65°C)	149°F (65°C)	136°F (58°C)	118°F (48°C)	131°F (55°C)	131°F (55°C)	122°F (50°C)	n/a
Post rinse	Yes	Yes	Yes	Yes	Yes	Yes	Yes	n/a
Final rinse	140°F (60°C)	149°F (65°C)	140°F (60°C)	118°F (48°C)	131°F (55°C)	140°F (60°C)	100°F (38°C)	n/a
Drying phase	Yes	Yes	Yes	n/a	n/a	Yes	Yes	n/a

\*Reference program for energy/water label in compliance with 10 CFR part 430 and CAN/CSA-C373 Regulations.

Wash times can vary depending on the incoming water temperature, ambient conditions, type of dish load and whether the drawer has been opened during the wash. Wash times are only APPROXIMATE on the electronic display (where applicable) and based on 120°F (49°C) incoming water.

# STANDARDS TEST

## Double models

The DishDrawer™ Dishwashers are tested to 10 CFR part 430 and CAN/CSA-C373 for energy and water consumption using the parameters detailed below.

### Wash program

Eco

### Water softener setting

2

Note: for water softener models (H), on the above listed cycle and water softener setting, the water softener regenerates every third cycle

### Capacity

14 place settings

### Accessories

Base rack, folding tines, fixed plate rack, cutlery basket with cutlery grid, fold away cup racks and glass supports.


### Height setting of cup racks

Adjust the height to a position clear of other load items.



### Correct orientation of glass supports on side of drawer




### Recommended loading: Top drawer\*

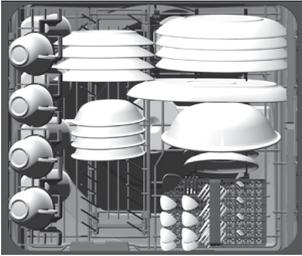

### Cutlery basket

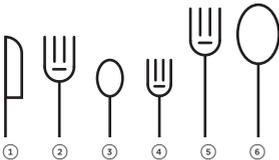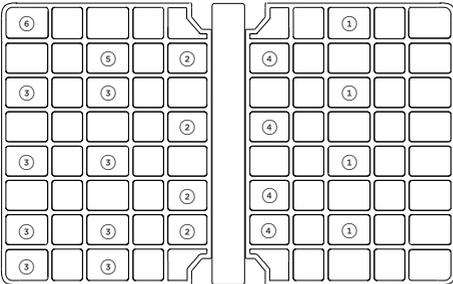

### Recommended loading: Bottom drawer\*

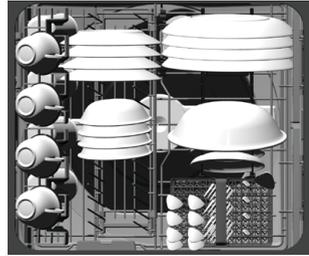

### Cutlery basket

