

FISHER & PAYKEL

WARMING DRAWER

PROFESSIONAL

WB76SPEX1 models

INSTALLATION GUIDE

NZ AU

⚠ WARNING!



Tip Hazard

This product may tip. Keep children away and take care. Failure to follow this advice may result in injury.

- Drawer must be secured in place by supplied screws.
- Ensure there is a fixed shelf directly above the drawer if it is not installed under another product.

⚠ WARNING!



Cut Hazard

Failure to use caution could result in injury.

- Take care: some edges may be sharp.
- Do not put fingers in the drawer when closing.

⚠ WARNING!



Electric Shock Hazard

Failure to follow this advice may result in electrical shock or death.

- If the product is damaged, switch the appliance off and disconnect it from the mains to avoid possible electric shock.

⚠ WARNING!



Weight Hazard

Failure to follow this advice may result in damage or personal injury.

- Ensure the bottom shelf of the cabinetry can fully support the weight of combined appliances.

READ AND SAVE THIS GUIDE

WARNING!

To reduce the risk of fire, injury to persons or damage when using the appliance, follow the important safety guides listed below. Read all the instructions before using the appliance.

Installation

- Please make this information available to the person installing the product.
- The appliance must be installed by a qualified installer, or Fisher & Paykel trained and supported service technician to avoid faulty electrical connection.
- Ensure the installation complies with all clearance requirements and applicable standards and regulations.
- When installed in combination with a companion product, the companion product can be placed directly onto the appliance. A built-in shelf at the base of the cabinetry must be able to support the weight of both products.
- Ensure the cabinetry is square and level and with correct dimensions.
- If installing the appliance directly underneath an oven, ensure you do not damage the oven's lower trim. Fisher & Paykel does not accept any responsibility for any damage resulting from incorrect installation.
- Before installing the appliance, inspect for any signs of damage. Do not install or use damaged appliances.
- Be careful when stacking the appliances on top of each other to avoid damage to the appliances.

Electrical

- All connections for electrical power and earthing must be done by a qualified electrician and must comply with local codes and ordinances.
- Before installation, ensure that the voltage and frequency listed on the data plate corresponds with the household electrical supply.
- When combining with another appliance, ensure each appliance has its own power outlet. Avoid sharing the power point to prevent accidental switching off of the appliance.
- Ensure your appliance is properly grounded (earthed).
- Connect the drawer to a properly rated, protected and sized power supply circuit to avoid electrical overload.
- Do not use an extension cord or a portable electrical outlet device (e.g. multi-outlet outlet box) to connect the drawer to the power supply. Ensure the power supply cord is located so that it will not be stepped on, tripped over or otherwise subject to damage or stress.
- Ensure there is a switched outlet in an easily accessible area within 35 7/16" (900mm) of the centre rear of the product.

Servicing

- Do not repair or replace any part of the appliance unless specifically recommended in the user guide. All other servicing should be done by a Fisher & Paykel trained and supported service technician or qualified person.
- Always disconnect the power supply before doing any installation, maintenance or repair work, and cleaning.
- If the power supply cord is damaged, it must be replaced by a qualified electrician or Fisher & Paykel trained and supported service technician.

PARTS SUPPLIED



Service & Warranty




User guide



Installation guide




T20 star head
countersunk screw 4x20
4 for WB30 models
2 for WB24 models

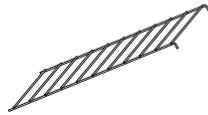

Wire shelf (1)
For WB30 models only



5mm Hex key

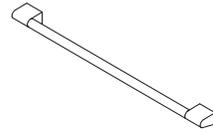


Handle



Socket screw (2)

TOOLS REQUIRED


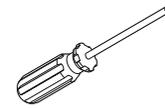


T20 star-head screwdriver

UNPACK YOUR PRODUCT

Remove the warming drawer and accessories box from the packaging. Recycle the materials that can be reused. Dispose packaging materials in accordance with local regulations on waste disposal.

Inspect the warming drawer for any signs of damage. Do not install the warming drawer if it has been damaged. If the product is damaged, contact your local Fisher & Paykel dealer.

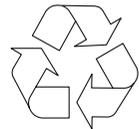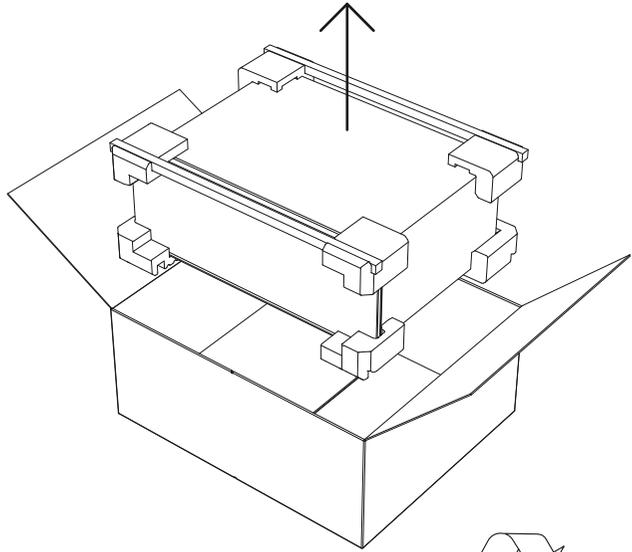

**RECYCLE
RESPONSIBLY**


ELECTRICAL SPECIFICATIONS

All electrical work must be done by a qualified electrician, or a Fisher & Paykel trained and supported service technician.


WB76	
Supply	110 VAC, 60 Hz
Service	10 amp circuit
Maximum Power	810 W
Power outlet*	3-prong grounding-type
Power cord (total length)	1800mm

* The power outlet must be earthed and located within 900mm of the centre rear of the product.


PRODUCT DIMENSIONS

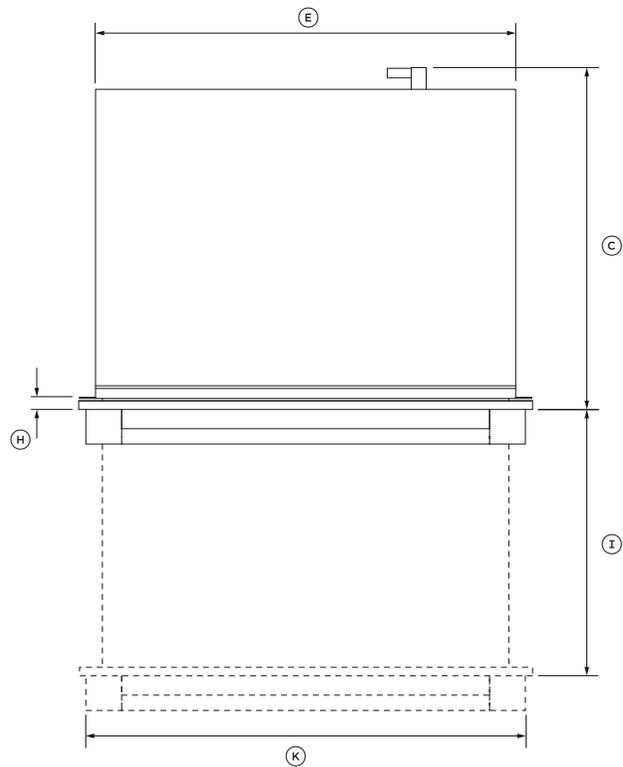


PLAN

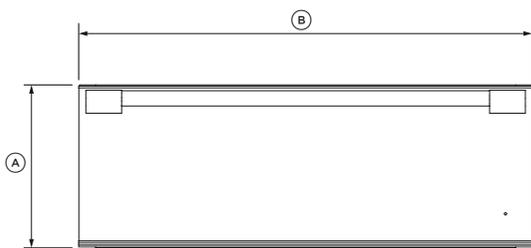

FRONT

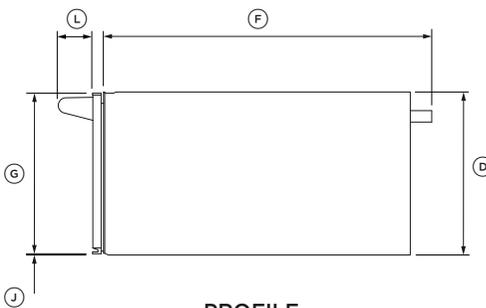

PROFILE

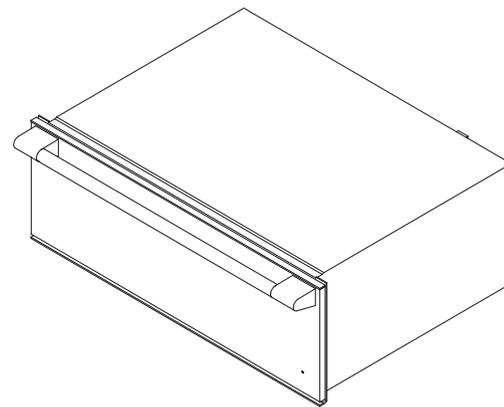

ISOMETRIC

PRODUCT DIMENSIONS	WB76
	MM
Ⓐ Overall height	271
Ⓑ Overall width	761
Ⓒ Overall depth*	567
Ⓓ Height of chassis	271
Ⓔ Width of chassis	707
Ⓕ Depth of chassis**	547
Ⓖ Height of drawer front panel	267
Ⓗ Depth of drawer front panel and attachment flange	20
Ⓘ Depth of open drawer	419
⓵ Height from bottom of chassis to bottom of drawer front panel	2
Ⓚ Width of handle	736
Ⓛ Depth of handle	58


* Including drawer panel and power plug

** Including power plug. Excludes attachment flange.


PRODUCT WEIGHT	WB76
	KG
Total weight of drawer*	34

*including packaging and excluding handle


CABINTRY DIMENSIONS

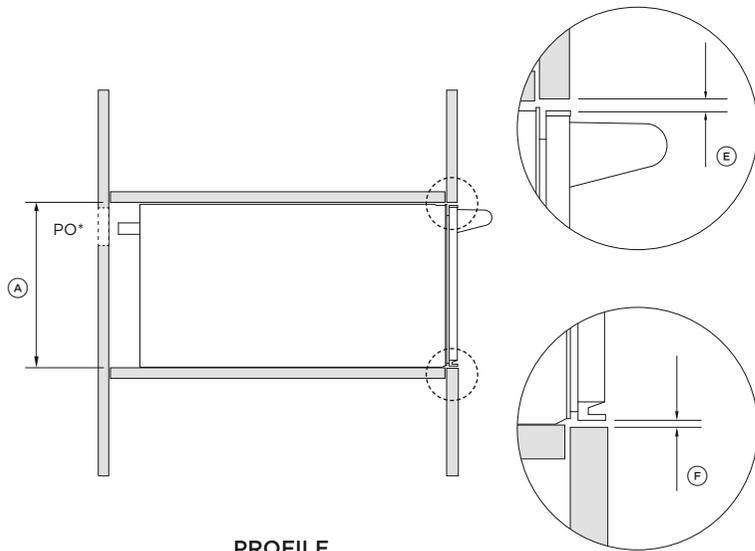


PROFILE

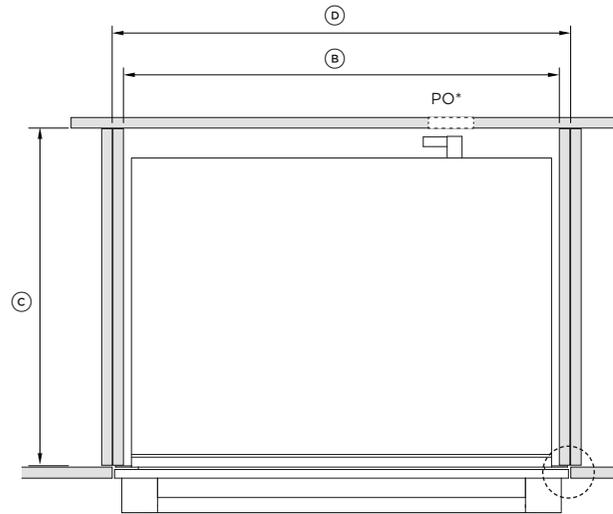

PLAN

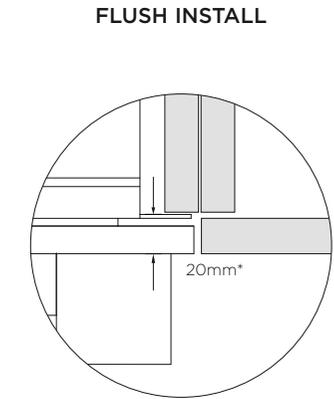

FLUSH INSTALL

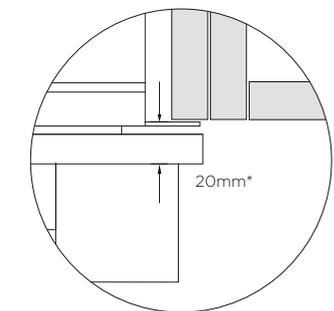

PROUD INSTALL

CABINTRY DIMENSIONS	WB76
	MM
(A) Minimum inside height of cavity	273
(B) Minimum inside width of cavity	720
(C) Minimum inside depth of cavity	560
(D) Overall width of cabinetry	762
(E) Minimum clearance between top of front panel and upper cabinetry panel	3
(F) Minimum clearance between bottom of front panel and lower cabinetry panel	2

* The power outlet (PO) must be earthed and located within 900mm of the centre rear of the product.


Actual product dimension may vary by ± 2 mm.

* Depth of drawer front panel including attachment flange.


INSTALLATION OPTIONS

STANDALONE INSTALLATION

This installation is suitable for Minimal, Contemporary & Professional Warming drawers. A fixed shelf must be installed above the warming drawer.

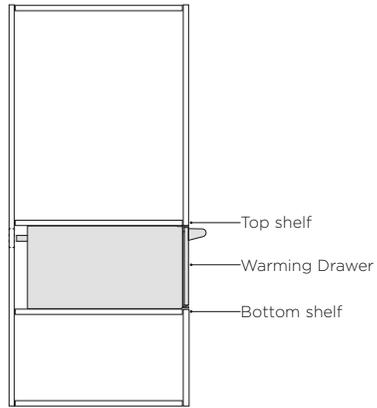


PROFILE

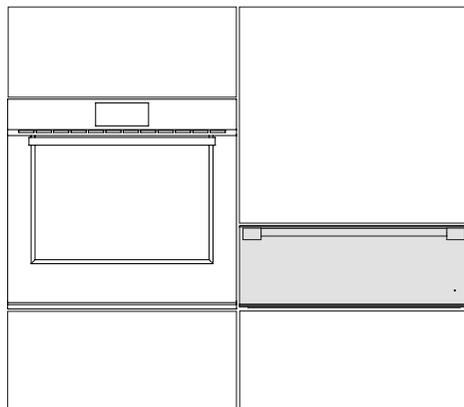


FRONT

COMBINED WITH SINGLE OVEN

This combination is suitable for 76cm Warming Drawers that can fully support 76cm Fisher & Paykel wall ovens.

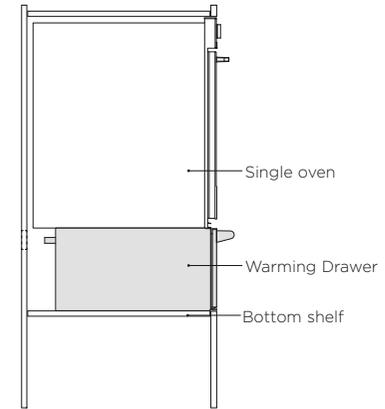

PROFILE

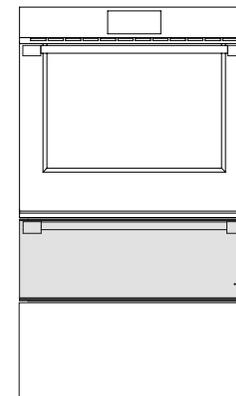


FRONT


INSTALLATION OPTIONS

COMBINED WITH COMPANION PRODUCT

This combination is suitable for 76cm Warming Drawers that can fully support 76cm Fisher & Paykel companion products

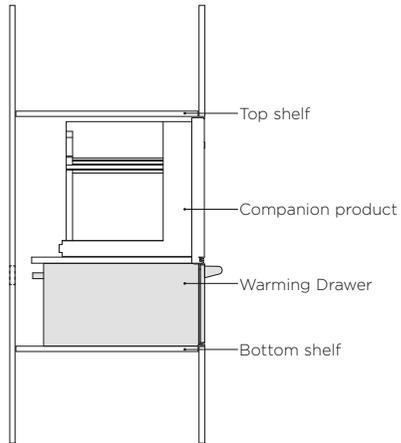


PROFILE

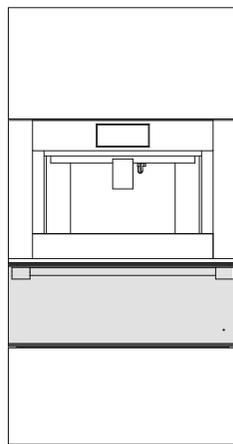


FRONT

COMBINED WITH DOUBLE OVEN

This combination is suitable for 76cm Warming Drawers that can fully support a 76cm Fisher & Paykel double oven.

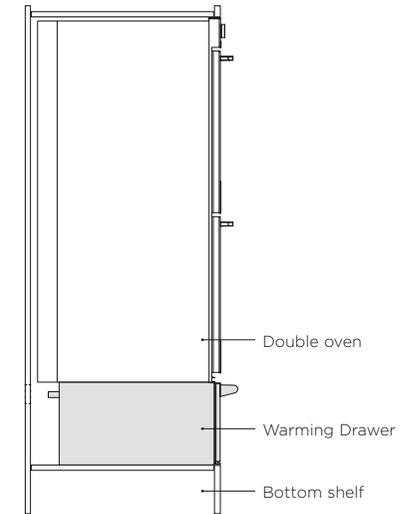

PROFILE

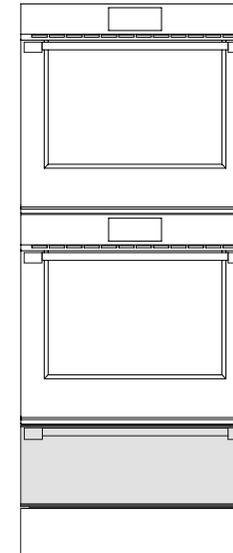


FRONT


INSTALLATION OPTIONS

TRIPLE STACK COMBINATION

This combination is suitable for Minimal, Contemporary & Professional Warming Drawers. The 76cm model can fully support both 76cm Fisher & Paykel single oven and companion product. A shelf is required above the oven to support the companion product. Ensure the bottom shelf can fully support the weight of all appliances.

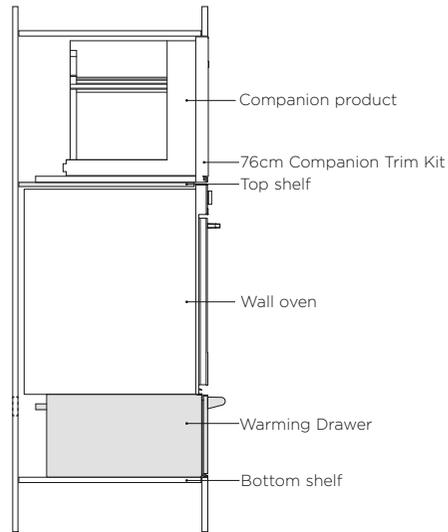


PROFILE

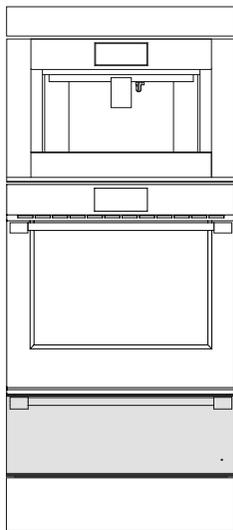


FRONT

INSTALLING THE DRAWER

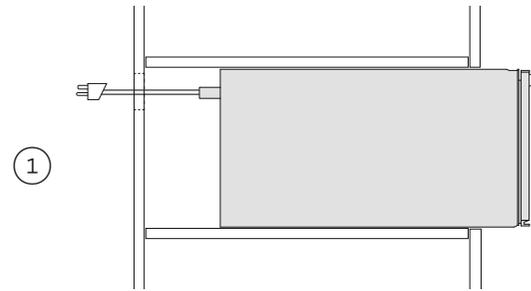


Connect the power plug into the power outlet.
Place the warming drawer carefully inside the cabinetry.

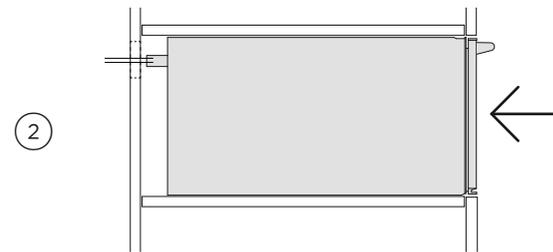

Push the warming drawer back into the cabinetry, and align the front panel with the cabinetry as desired.

PROFILE

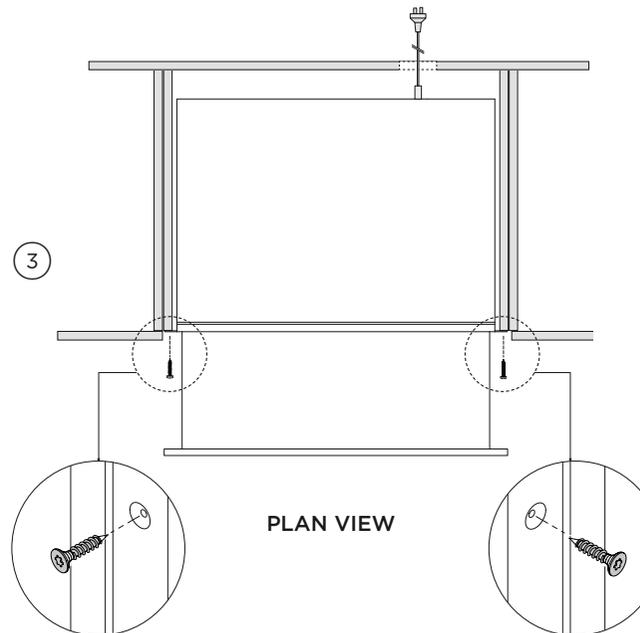


Open the drawer and secure the attachment flanges of the drawer to the side edges of cabinetry with T20 star head machine screws (4x).


PLAN VIEW

ADJUSTING THE DEPTH

The depth of the front panel of the warming drawer can be adjusted to align with the surrounding cabinetry.

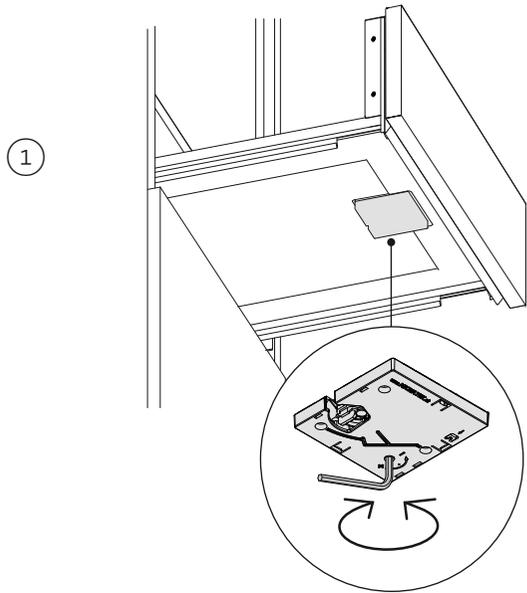


Open the drawer fully.
Using a hex key, turn the adjustment screw to move the front panel forward.
Turn clockwise to move backwards or counterclockwise to move forwards.

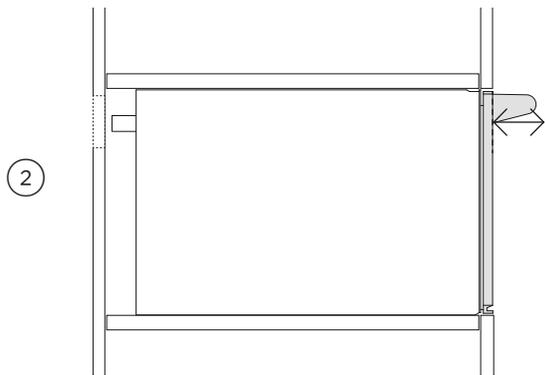


The depth is adjustable within 4mm.

INSTALLING THE HANDLE

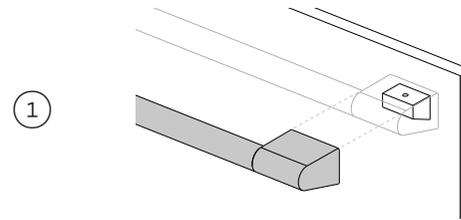


Carefully fit the handle onto the mounts.

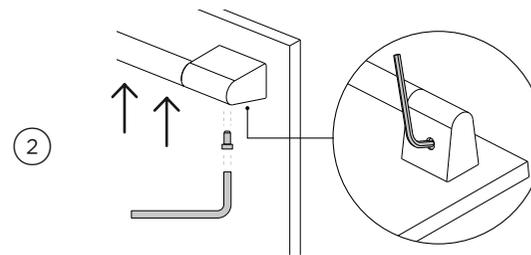


Insert the socket screws and tighten from the base of the handle using the supplied Allen key. Apply upward pressure to the handle while tightening to reduce the risk of damage.

ADJUSTING THE HEIGHT


The front panel of the warming drawer can be adjusted vertically to align with the surrounding cabinetry.

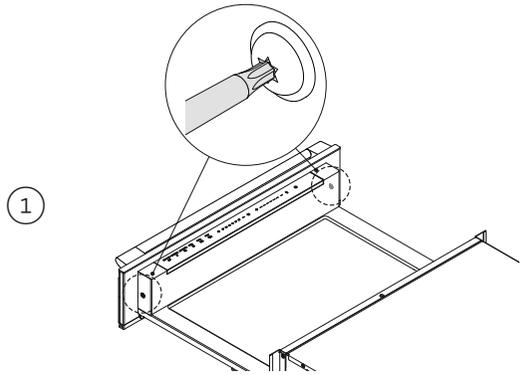

Open the drawer fully, and slightly loosen the screws.

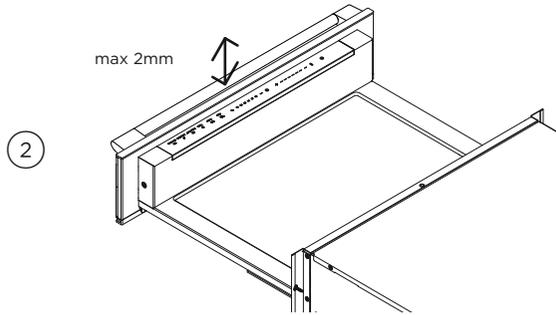

Adjust to the required height and then re-tighten the screws. The height is adjustable within 1/16" (2mm).

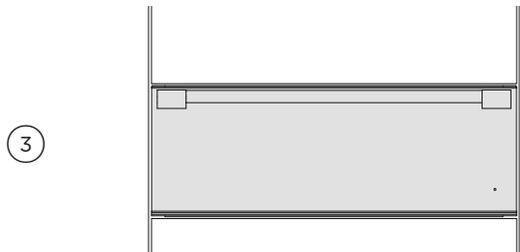

Close the drawer and check the alignment. Adjust again if necessary.

INSTALLER CHECKLIST

IMPORTANT!

Read all installation instructions in this manual to see if the unit has been correctly installed. Ensure that installation has been completed correctly before use.

Test operation:

- Open the drawer.
- Press the ① button to turn the warming drawer on.
- Shut the drawer.
- After 5-10 minutes, open the drawer to feel the internal surfaces of drawer is slightly warmed.
- Press the ① button to turn the warming drawer off and shut the drawer.

Ensure that:

- the warming drawer is level and securely fitted to the cabinetry
- any internal packaging has been removed from the drawer
- the isolating switch is accessible by the customer
- the bottom shelf can fully support the total weight of the combined appliances

Complete and keep for safe reference:

Model _____

Serial No. _____

Purchase Date _____

Purchaser _____

Dealer Address _____

Installer's Name _____

Installer's Signature _____

Installation Company _____

Installation Date _____

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2021. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and
models described at the date of issue. Under our policy of continuous product
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

592842A 12.21