

FISHER & PAYKEL

FABRIC CARE SOLUTION

DRYER INSTALLATION

DH9060H1, DH9060HG1, DH9060HL1 and
DH9060HLG1 models

INSTALLATION GUIDE

CN

COMPONENTS REQUIRED

..... TOOLS

Not supplied

- Box cutter
- Phillips screwdriver
- Level

..... PARTS


Supplied

- 1x Y Join
- 1x Straight hose
- 1x Cold water hose
- 1x Shoe Rack
- 3x Spare condenser foam filters
- 1x Drain hose extension
(display models only)

ACCESSING YOUR PRODUCT SPECIFICATIONS



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/cn/zh_CN/specify. Search by appliance type, product name or model code.

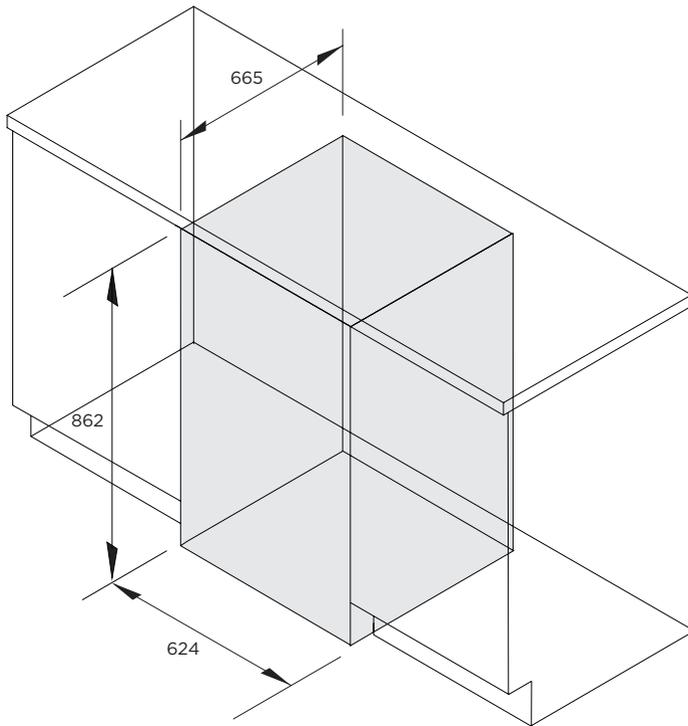

PRIOR TO INSTALLATION



fisherpaykel.com/cn/zh_CN/specify

1. Ensure cabinetry and servicing specifications have been met and clearances have been considered.

Refer to the Planning Guide for details.



2. Ensure floor is level and clear and a finished return has been created.



3. Ensure power will remain accessible following install to allow access for any future product maintenance.

Service holes should be smooth with gromets installed where required.

Refer to the services section of the Planning Guide for more details.

UNPACK



1. Cut the straps and the line printed on the top of the carton. Lift to remove. Discard braces and corner posts. Remove any packaging and accessories from the drum and base packer.



2. Dispose of packaging responsibly.



3. Protect flooring before positioning dryer as close to the installation location as possible, ensuring enough working room is left available.

REVERSE DOOR (OPTIONAL)

The dryer door has reversible hinge and latch fittings and can be switched to open to the left or right, as needed.



1. Unscrew hinge, remove door and place face down on a protected surface.

Remove plugs (x 8) from inner door flanges, then remove screws.




2. Insert flathead screwdriver in access slot to pry off inner door. Rotate door 180 degrees and fit back in place.

Reattach screws, alternating between sides of the door. Replace plugs.



3. On dryer, unscrew and remove latch cover to access latch.

REVERSE DOOR (OPTIONAL)

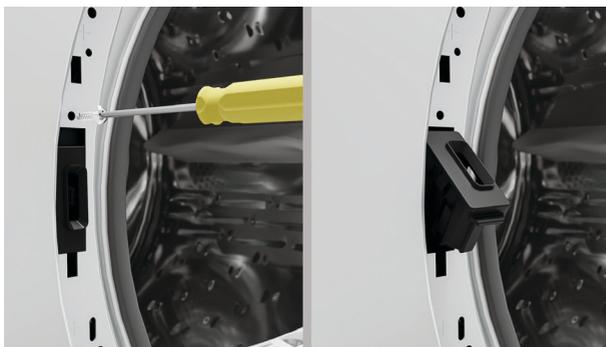

4. Unscrew latch, and slide to remove.



5. Rotate latch and insert on opposite side of dryer. Secure with screw.

Refit and secure latch cover with latch cover screws.



6. Refit door hinge and secure with hinge screws.

LEVEL



1. Adjust the feet until the dryer is level front to back and corner to corner.



2. Move the dryer into its final position, allowing for required clearances.



3. Recheck dryer is level, then remove from the alcove to complete connection steps.

CONNECT CABLES AND HOSES



fisherpaykel.com/cn/zh_CN/specify

1. Refer to the Planning Guide for full service information.

Supply: 220 - 240V, 50Hz

Service: 10A

Outlet: 3-prong grounding-type

Supply: Hoses provided

Pressure: 50KPa (7psi) - 1MPa (150psi). Min 6 litres/min.



2. Optional:

Fit the drain hose extension if dryer can be connected to a drain.



3. Connect the angled end of the dryer cold hose to the dryer.

The washer and dryer cold hoses can be swapped if necessary.

CONNECT CABLES AND HOSES



4. Turn off cold water tap for washer, and undo washer cold hose at tap end.



5. Connect washer and dryer straight ends to the top of the supplied Y join.



6. Connect the dryer straight hose to the bottom of the Y join.

CONNECT CABLES AND HOSES



7. Partially push dryer into the alcove.



8. Route the power cables and hoses through service holes. Ensure power will remain accessible following install to allow access for any future product maintenance.



9. Connect the cold hose to cold water tap and turn tap on.

CONNECT CABLES AND HOSES



10A. Standpipe Installations

Route the drain hose through the guide and place into the standpipe.

Ensure a maximum of 20mm of the hose rests in the standpipe.



10B. Spigot Installations

Drill out blanking insert from the spigot.

Route the drain hose through the guide and place into the spigot. Secure using a hose clamp.



11. Connect the power cable and check product is powered on.

INSTALL DRYER



1. Push dryer into the alcove.

Take care not to damage hoses or cords.



2. Check alignment and ensure required clearances are maintained. Adjust as required.

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2024. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and
models described at the date of issue. Under our policy of continuous product
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

431973A 01.24