FISHER & PAYKEL

DATA SHEET

24" Built-in Oven

OB24SCDEPX1, OB24SCDEX1, OB24SCD9PX1, OB24SCD7PX1, OB24SCD5PX1

(refer page 2 for metric measurements)

| Product Dimensions | in |
|--|----------|
| Overall height of oven | 23 9/16″ |
| Overall width of oven | 23 7/16" |
| \fbox Depth of oven frame and door (excludes dials, handle and front stainless trim) | 13/16″ |
| $_\odot$ Depth of oven door and chassis (excludes handle and front stainless trim) | 22 1/4″ |
| © Depth of chassis | 21 7/16" |
| F Height of chassis | 22 5/8" |
| © Width of chassis | 21 7/8" |
| (#) Height from bottom datum to top of oven door | 19 1/8″ |
| I) Height of control panel | 3 15/16" |
| ④ Height of stainless steel strip on control panel | 3/4" |
| (8) Height of stainless steel strip on door | 4 1/4" |
| () Gap between door and control panel | 1/2" |
| (8) Height from bottom datum to centerline of handle | 18 1/4″ |
| ® Width of handle | 22 1/4″ |
| O Depth of handle (measured from front of door) | 1 5/8″ |
| P Thickness of handle | 5/8″ |
| ③ Distance from bottom of door to bottom of product | 5/16″ |
| B Depth of door (open) (measured from front of door) | 18 1/8" |
| | |

| Minimum Clearances | in |
|----------------------------------|-----------|
| Minimum inside height of cavity: | 22 13/16" |
| Minimum inside width of cavity | 22 1/16" |
| Minimum inside depth of cavity | 21 5/8" |

IMPORTANT NOTE: For full installation and clearance details please refer to our installation manual.



G

DATE: 21.02.2019

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com



FISHER & PAYKEL

DATA SHEET

24" Built-in Oven

| Model | no: |
|-------|-----|
| | |

OB24SCDEPX1, OB24SCDEX1, OB24SCD9PX1, OB24SCD7PX1, OB24SCD5PX1

(refer page 1 for imperial measurements)

| Product Dimensions | mm |
|---|-----|
| Overall height of oven | 598 |
| Overall width of oven | 596 |
| © Depth of oven frame and door (excludes dials, handle and front stainless trim) | 20 |
| Depth of oven door and chassis (excludes handle and front stainless trim) | 565 |
| © Depth of chassis | 545 |
| © Height of chassis | 575 |
| © Width of chassis | 556 |
| Height from bottom datum to top of oven door | 461 |
| ① Height of control panel | 100 |
| ④ Height of stainless steel strip on control panel | 20 |
| Height of stainless steel strip on door | 108 |
| © Gap between door and control panel | 12 |
| (8) Height from bottom datum to centreline of handle | 464 |
| ® Width of handle | 565 |
| Depth of handle (measured from front of door) | 41 |
| P Thickness of handle | 16 |
| ③ Distance from bottom of door to bottom of product | 9 |
| ® Depth of door (open) (measured from front of door) | 460 |
| | |

| Minimum Clearances | |
|----------------------------------|-----|
| | mm |
| Minimum inside height of cavity: | 580 |
| Minimum inside width of cavity | 560 |
| Minimum inside depth of cavity | 550 |

IMPORTANT NOTE: For full installation and clearance details please refer to our installation manual.

INDICATES PRODUCT DATUM ------INDICATES CABINETRY CLEARANCES ------



IMPORTANT NOTE: Throughout this guide, dimensions may vary by $\pm 2mm$ (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com



