




Accessory installation

AV 350 50 – GV 3520 – OV 3500 - OV 3505 – OV 3510 –
RV 4550 - RV 4560 – RV 5500- RV 5600 –
Vortex 305 – Vortex 4 4WD - Vortex 4 PLUS

Synchronise the remote control with the control box

If equipment is replaced, it is essential to synchronise the remote control with the control box.

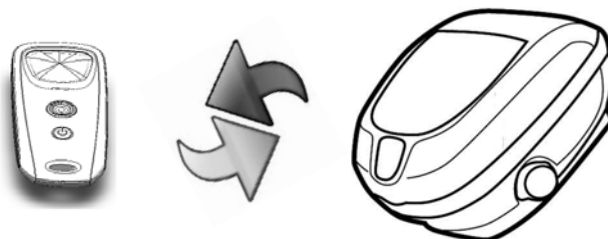

- Place the remote control about 50 cm away from the control box.
- Connect the control box, check that the display shows the operating time, and that no cleaning cycle is running.
- Switch on the remote by pressing .
- Before the remote control puts on hold (around 45 seconds) press the and buttons simultaneously during 6 seconds.
- Check the synchronisation is correctly completed by looking at the display and the remote control Led :

Control box display	Remote Control LED	Result
 ↓ 2 seconds 	Led is blinking	<ul style="list-style-type: none"> • Synchronisation completed correctly.
	Led is not flashing	<ul style="list-style-type: none"> • Check the distance between the control box and the remote control is around 50 cm. • Check remote control batteries. Change them if necessary. • Replace the control box if the remote control is new or replace the remote control if the control box is new.