



ADB SAFEGATE | GATE

SP.AS00325 – Blue board CPU kit

○ T1/T2/T3

Rev 1.0 2023-10-16


**ADB
SAFEGATE**

Scope

This document instructs how to replace CPU module on Carrier board MKII (Blue Board).


BoM Blue board CPU kit

Kit should include:

CPU module



Heatsink kit

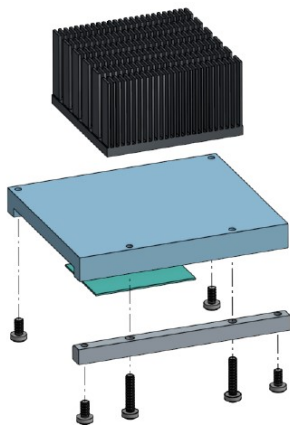



Qty	Description
1	Gap Pad 33x25x0.5 mm
1	Heat Spreader H6075
1	BGA Heat Sink :: Cross-Cut Tape On
2	Metric screw MRT M2.5x12H FZB
4	Metrix screw MRT M2.5x5H FZB
1	Q7 heat bar (DFI: A31-028000-200G)

CFast card with SOS





Instructions



1. Disassembly CPU module and heat bar.

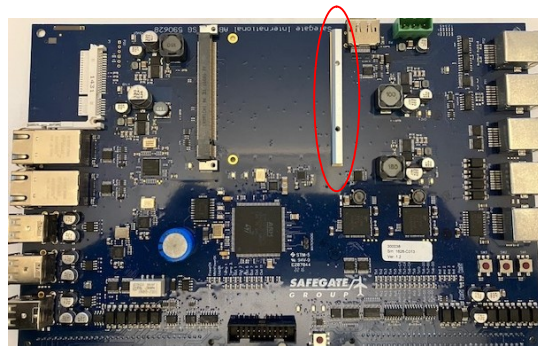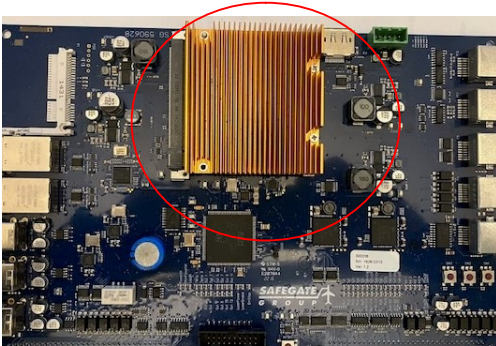


2. Assembly new heat bar with 2 screws M2,5x5 on back side of Carrier board

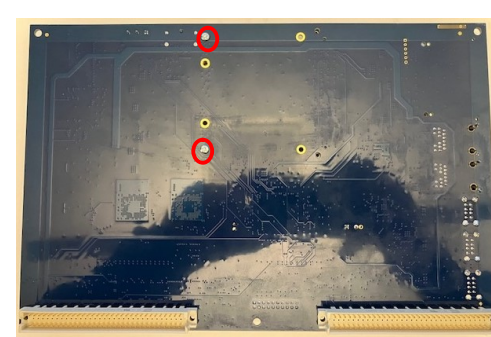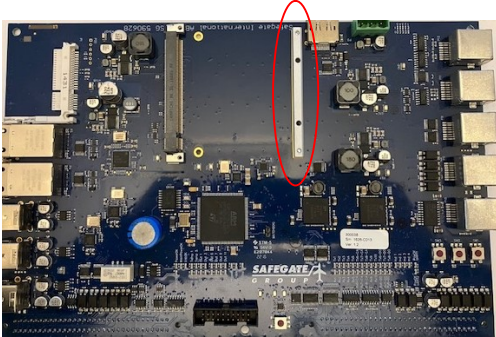


3. Take Heat sink and Heat spreader. Remove protection on Heat sink adhesive and assemble Heat sink on Heat spreader. Press for a couple of seconds.

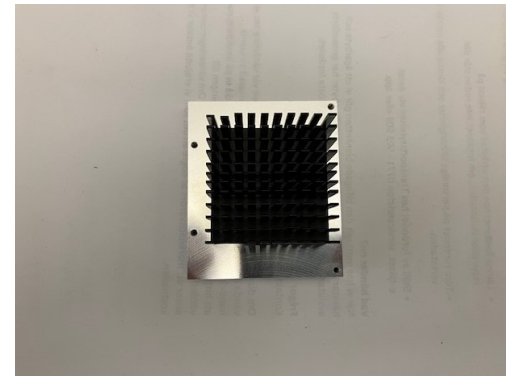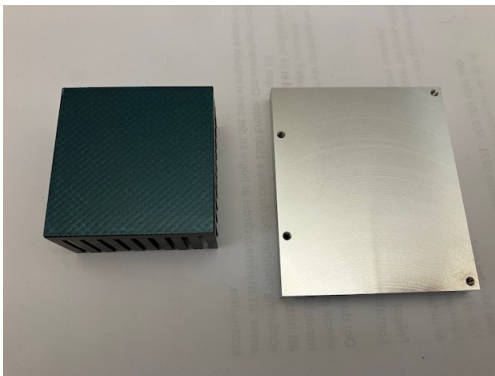


4. Remove protection on gap pad the mount CPU module on Heat spreader, area of blue circle should be placed on gap pad (red circle), 2 screws M2,5x5

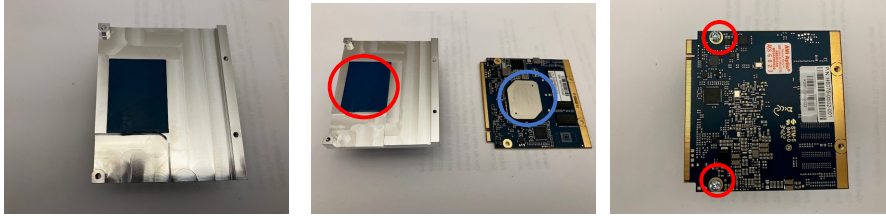

- 5.
6. Mount CPU module on Carrier board and use 2 screws M2,5x12 on back side of Carrier board.

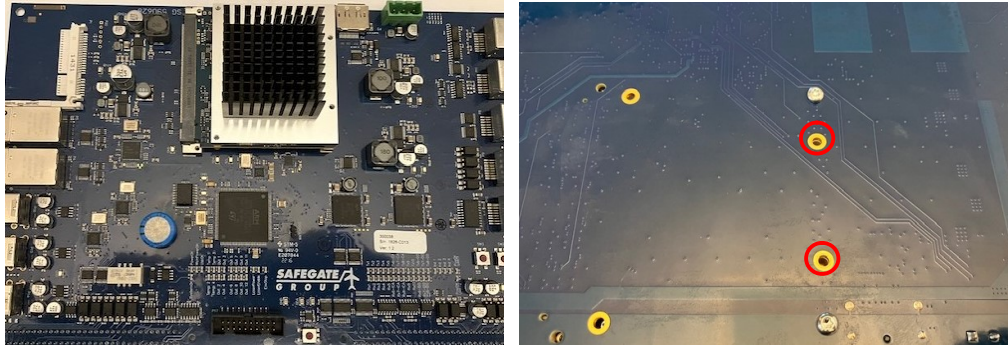

- 7.

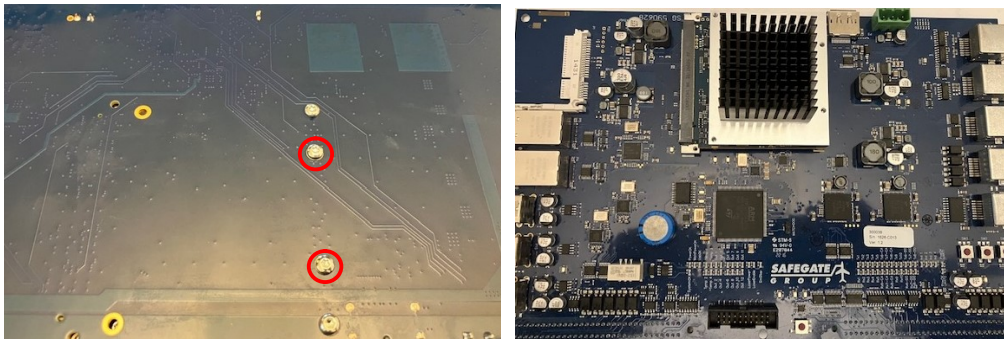

8. If needed replace CFast card

