



CHF (Ferroresonant) L-828 / L-829 Constant Current Regulator
with Universal Regulator Controller (URC) Air-Cooled, 4-70kW, 6.6A / 20A

User Manual

96A0408, Rev. J, 2024/11/15


**ADB
SAFEGATE**

A.0 Disclaimer / Standard Warranty

CE certification

The equipment listed as CE certified means that the product complies with the essential requirements concerning safety and hygiene. The European directives that have been taken into consideration in the design are available on written request to ADB SAFEGATE.

ETL certification

The equipment listed as ETL certified means that the product complies with the essential requirements concerning safety and C22.2 No.180:13 (R2018) regulations. The CSA directives that have been taken into consideration in the design are available on written request to ADB SAFEGATE.

All Products Guarantee

ADB SAFEGATE will correct by repair or replacement per the applicable guarantee below, at its option, equipment or parts which fail because of mechanical, electrical or physical defects, provided that the goods have been properly handled and stored prior to installation, properly installed and properly operated after installation, and provided further that Buyer gives ADB SAFEGATE written notice of such defects after delivery of the goods to Buyer. Refer to the Safety section for more information on Material Handling Precautions and Storage precautions that must be followed.

ADB SAFEGATE reserves the right to examine goods upon which a claim is made. Said goods must be presented in the same condition as when the defect therein was discovered. ADB SAFEGATE further reserves the right to require the return of such goods to establish any claim.

ADB SAFEGATE's obligation under this guarantee is limited to making repair or replacement within a reasonable time after receipt of such written notice and does not include any other costs such as the cost of removal of defective part, installation of repaired product, labor or consequential damages of any kind, the exclusive remedy being to require such new parts to be furnished.

ADB SAFEGATE's liability under no circumstances will exceed the contract price of goods claimed to be defective. Any returns under this guarantee are to be on a transportation charges prepaid basis. For products not manufactured by, but sold by ADB SAFEGATE, warranty is limited to that extended by the original manufacturer. This is ADB SAFEGATE's sole guarantee and warranty with respect to the goods; there are no express warranties or warranties of fitness for any particular purpose or any implied warranties of fitness for any particular purpose or any implied warranties other than those made expressly herein. All such warranties being expressly disclaimed.

Standard Products Guarantee

Products manufactured by ADB SAFEGATE are guaranteed against mechanical, electrical, and physical defects (excluding lamps) which may occur during proper and normal use for a period of two years from the date of ex-works delivery, and are guaranteed to be merchantable and fit for the ordinary purposes for which such products are made.



Note

See your applicable sales agreement for a complete warranty description.

Replaced or repaired equipment under warranty falls into the warranty of the original delivery. No new warranty period is started for these replaced or repaired products.

FAA Certified products manufactured by ADB SAFEGATE

ADB SAFEGATE L858 Airfield Guidance Signs are warranted against mechanical and physical defects in design or manufacture for a period of 2 years from date of installation, per FAA AC 150/5345-44 (applicable edition).

ADB SAFEGATE LED products (with the exception of obstruction lighting) are warranted against electrical defects in design or manufacture of the LED or LED specific circuitry for a period of 4 years from date of installation, per FAA EB67 (applicable edition). These FAA certified constant current (series) powered LED products must be installed, interfaced and powered with and through products certified under the FAA Airfield Lighting Equipment Program (ALECP) to be included in this 4 (four) year warranty. This includes, but is not limited to, interface with products such as Base Cans, Isolation Transformers, Connectors, Wiring, and Constant Current Regulators.



Note

See your sales order contract for a complete warranty description.

Replaced or repaired equipment under warranty falls into the warranty of the original delivery. No new warranty period is started for these replaced or repaired products.

Liability



WARNING

Use of the equipment in ways other than described in the catalog leaflet and the manual may result in personal injury, death, or property and equipment damage. Use this equipment only as described in the manual.

ADB SAFEGATE cannot be held responsible for injuries or damages resulting from non-standard, unintended uses of its equipment. The equipment is designed and intended only for the purpose described in the manual. Uses not described in the manual are considered unintended uses and may result in serious personal injury, death or property damage.

Unintended uses, includes the following actions:

- Making changes to equipment that have not been recommended or described in this manual or using parts that are not genuine ADB SAFEGATE replacement parts or accessories.
- Failing to make sure that auxiliary equipment complies with approval agency requirements, local codes, and all applicable safety standards if not in contradiction with the general rules.
- Using materials or auxiliary equipment that are inappropriate or incompatible with your ADB SAFEGATE equipment.
- Allowing unskilled personnel to perform any task on or with the equipment.

Copyright Statement

This manual or parts thereof may not be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, nor otherwise, without the author's prior written consent.

This manual could contain technical inaccuracies or typographical errors. The author reserves the right to revise this manual from time to time in the contents thereof without obligation of the author to notify any person of such revision or change. Details and values given in this manual are average values and have been compiled with care. They are not binding, however, and the author disclaims any liability for damages or detriments suffered as a result of reliance on the information given herein or the use of products, processes or equipment to which this manual refers. No warranty is made that the use of the information or of the products, processes or equipment to which this manual refers will not infringe any third party's patents or rights. The information given does not release the buyer from making their own experiments and tests.

TABLE OF CONTENTS

1.0 Safety	1
1.1 Safety Messages	1
1.1.1 Introduction to Safety	2
1.1.2 Intended Use	2
1.1.3 Material Handling Precautions: Storage	3
1.1.4 Maintenance Safety	3
1.1.5 Material Handling Precautions, ESD	3
1.1.6 Arc Flash and Electric Shock Hazard	4
2.0 Introduction	5
2.1 About this manual	5
2.1.1 How to work with the manual	5
2.2 Product Introduction	5
2.3 CHF Constant Current Regulator	5
2.4 Remote Control	7
2.5 Total Harmonic Distortion* (THD)	7
2.6 Theory of Operation	7
2.6.1 Power Circuit	7
2.6.2 Output Measurement	7
2.6.3 Universal Regulator Controller (URC)	8
2.6.4 Output Current Monitor Circuitry	8
2.6.5 Local Control Position Detection	8
2.6.6 Contactor Drive	8
2.6.7 Remote Control Position Detection	9
2.6.8 Fault Protection	9
2.7 L-828 CCR	9
2.8 L-829 CCR	10
2.9 SGRS Powerpack™	10
2.10 Universal Regulator Controller	12
2.10.1 L-829 Advanced Control Equipment (ACE)	12
2.11 L-828/L-829 CCR Monitoring Options	13
2.11.1 Optional Insulation Resistance Monitoring System	13
2.11.2 Optional Scanning Monitor Interface	13
2.11.3 Optional Scanning Monitor Ready	13
2.12 Optional Series Cutout Type SCO	13
2.13 L-828 CCRs (4-70 kW 6.6 A/ 20 A): Required Equipment	13
2.14 Input Wire Size	14
2.15 Input Power Breaker Sizing	14
2.16 Specifications	15
2.16.1 Efficiency	15
2.16.2 Reactive Loading	16
2.16.3 Resistive Loading	16
2.16.4 Regulation	16
2.16.5 Environmental Operating Conditions	16
2.16.6 Protection Devices	16
2.16.7 Input Voltage	17
2.16.8 Temperature Rise	17
3.0 Installation	19
3.1 Unpacking	19
3.1.1 Return Shipping	20
3.2 Installation	20
3.2.1 Wiring Connections and Startup	21
3.3 Stacking CCR's (Optional)	24
3.3.1 SGRS Style Powerpacks (Optional)	25
3.4 Frames	27

4.0 Operation	29
4.1 Introduction	29
4.2 CCR Control Procedures	29
4.2.1 Local Control	29
4.2.2 Remote Control	30
4.3 CCR Door Interlock (Optional)	30
4.4 CCR Shutdown Procedure	31
4.5 CCR Adjustment Procedures	31
4.5.1 Output Current Adjustment	31
4.5.2 Overcurrent Adjustment	33
4.6 SCO Cutout Working Positions	33
4.7 Digital Power Meter Calibration (optional)	35
4.7.1 Display	35
4.7.2 Function Buttons	35
4.7.3 DPM Displays	36
5.0 Maintenance and Repair	39
5.1 Maintenance Schedule	39
5.1.1 Short-Circuit Test	40
5.1.2 Open-Circuit Test	41
5.2 Troubleshooting	41
5.2.1 Preliminary Troubleshooting	41
5.2.2 L-828 General Troubleshooting	42
5.3 Additional L-829 General Troubleshooting Procedures	45
5.4 Component Replacement Procedures	45
5.4.1 Removing and Replacing URC PCB	45
5.4.2 Removing and Replacing Dual SCR Module Assembly	46
5.4.3 Removing and Replacing Contactor	47
5.4.4 Removing and Replacing Input Lightning Arrestors (front of Component Mounting Plate)	48
5.4.5 Removing and Replacing Output Lightning Arrestors (front of Component Mounting Plate)	48
6.0 CHF Parts and Mechanical Drawings	51
6.1 Spare Parts	57
7.0 Wiring Schematics	65
A.0 SUPPORT	77
A.1 ADB SAFEGATE Website	78
A.2 Recycling	79
A.2.1 Local Authority Recycling	79
A.2.2 ADB SAFEGATE Recycling	79

1.0 Safety

Introduction to Safety

This section contains general safety instructions for installing and using ADB SAFEGATE equipment. Some safety instructions may not apply to the equipment in this manual. Task- and equipment-specific warnings are included in other sections of this manual where appropriate.

1.1 Safety Messages

HAZARD Icons used in the manual

For all HAZARD symbols in use, see the Safety section. All symbols must comply with ISO and ANSI standards.

Carefully read and observe all safety instructions in this manual, which alert you to safety hazards and conditions that may result in personal injury, death or property and equipment damage and are accompanied by the symbol shown below.



WARNING

Failure to observe a warning may result in personal injury, death or equipment damage.



DANGER - Risk of electrical shock or ARC FLASH

Disconnect equipment from line voltage. Failure to observe this warning may result in personal injury, death, or equipment damage. ARC Flash may cause blindness, severe burns or death.



WARNING - Wear personal protective equipment

Failure to observe may result in serious injury.



WARNING - Do not touch

Failure to observe this warning may result in personal injury, death, or equipment damage.



CAUTION

Failure to observe a caution may result in equipment damage.



ELECTROSTATIC SENSITIVE DEVICES

This equipment may contain electrostatic devices.

Qualified Personnel



Important Information

The term **qualified personnel** is defined here as individuals who thoroughly understand the equipment and its safe operation, maintenance and repair. Qualified personnel are physically capable of performing the required tasks, familiar with all relevant safety rules and regulations and have been trained to safely install, operate, maintain and repair the equipment. It is the responsibility of the company operating this equipment to ensure that its personnel meet these requirements.

Always use required personal protective equipment (PPE) and follow safe electrical work practice.

1.1.1 Introduction to Safety



CAUTION

Unsafe Equipment Use

This equipment may contain electrostatic devices, hazardous voltages and sharp edges on components

- Read installation instructions in their entirety before starting installation.
- Become familiar with the general safety instructions in this section of the manual before installing, operating, maintaining or repairing this equipment.
- Read and carefully follow the instructions throughout this manual for performing specific tasks and working with specific equipment.
- Make this manual available to personnel installing, operating, maintaining or repairing this equipment.
- Follow all applicable safety procedures required by your company, industry standards and government or other regulatory agencies.
- Install all electrical connections to local code.
- Use only electrical wire of sufficient gauge and insulation to handle the rated current demand. All wiring must meet local codes.
- Route electrical wiring along a protected path. Make sure they will not be damaged by moving equipment.
- Protect components from damage, wear, and harsh environment conditions.
- Allow ample room for maintenance, panel accessibility, and cover removal.
- Protect equipment with safety devices as specified by applicable safety regulations
- If safety devices must be removed for installation, install them immediately after the work is completed and check them for proper functioning prior to returning power to the circuit.

Failure to follow this instruction can result in serious injury or equipment damage

Additional Reference Materials



Important Information

- IEC – International Standards and Conformity Assessment for all electrical, electronic and related technologies.
- IEC 60364 – Electrical Installations in Buildings.
- CSA – C22.2 No.180:13 (R2018), series isolating transformers for airport lighting.
- FAA Advisory: AC 150/5340-26 (current edition), Maintenance of Airport Visual Aid Facilities.
- Maintenance personnel must refer to the maintenance procedure described in the ICAO Airport Services Manual, Part 9.
- ANSI/NFPA 79, Electrical Standards for Metalworking Machine Tools.
- National and local electrical codes and standards.

1.1.2 Intended Use



CAUTION

Use this equipment as intended by the manufacturer

This equipment is designed to perform a specific function, do not use this equipment for other purposes

- Using this equipment in ways other than described in this manual may result in personal injury, death or property and equipment damage. Use this equipment only as described in this manual.

Failure to follow this instruction can result in serious injury or equipment damage

1.1.3 Material Handling Precautions: Storage



CAUTION

Improper Storage

Store this equipment properly

- If equipment is to be stored prior to installation, it must be protected from the weather and kept free of condensation and dust.

Failure to follow this instruction can result in equipment damage

1.1.4 Maintenance Safety



DANGER

Electric Shock Hazard

This equipment may contain electrostatic devices

- Do not operate a system that contains malfunctioning components. If a component malfunctions, turn the system OFF immediately.
- Disconnect and lock out electrical power.
- Allow only qualified personnel to make repairs. Repair or replace the malfunctioning component according to instructions provided in its manual.

Failure to follow these instructions can result in death or equipment damage

1.1.5 Material Handling Precautions, ESD



CAUTION

Electrostatic Sensitive Devices

This equipment may contain electrostatic devices

- Protect from electrostatic discharge.
- Electronic modules and components should be touched only when this is unavoidable e.g. soldering, replacement.
- Before touching any component of the cabinet you shall bring your body to the same potential as the cabinet by touching a conductive earthed part of the cabinet.
- Electronic modules or components must not be brought in contact with highly insulating materials such as plastic sheets, synthetic fiber clothing. They must be laid down on conductive surfaces.
- The tip of the soldering iron must be grounded.
- Electronic modules and components must be stored and transported in conductive packing.

Failure to follow this instruction can result in equipment damage

1.1.6 Arc Flash and Electric Shock Hazard



DANGER

Series Circuits have Hazardous Voltages

This equipment produces high voltages to maintain the specified current - Do NOT Disconnect while energized.

- Allow only qualified personnel to perform maintenance, troubleshooting, and repair tasks.
- Only persons who are properly trained and familiar with ADB SAFEGATE equipment are permitted to service this equipment.
- An open airfield current circuit is capable of generating >5000 Vac and may appear OFF to a meter.
- Never unplug a device from a constant current circuit while it is operating; Arc flash may result.
- Disconnect and lock out electrical power.
- Always use safety devices when working on this equipment.
- Follow the recommended maintenance procedures in the product manuals.
- Do not service or adjust any equipment unless another person trained in first aid and CPR is present.
- Connect all disconnected equipment ground cables and wires after servicing equipment. Ground all conductive equipment.
- Use only approved ADB SAFEGATE replacement parts. Using unapproved parts or making unapproved modifications to equipment may void agency approvals and create safety hazards.
- Check the interlock systems periodically to ensure their effectiveness.
- Do not attempt to service electrical equipment if standing water is present. Use caution when servicing electrical equipment in a high-humidity environment.
- Use tools with insulated handles when working with airfield electrical equipment.

Failure to follow these instructions can result in death or equipment damage

2.0 Introduction

CCF (Ferroresonant) L-828 / L-829 Constant Current Regulator with Universal Regulator Controller (URC)

2.1 About this manual

The manual shows the information necessary to:

- Install
- Carry Out Maintenance
- Carry Out Troubleshooting on the CCF (Ferroresonant) L-828 / L-829 Constant Current Regulator, in the manual referred to as the equipment.

2.1.1 How to work with the manual

1. Familiarize yourself with the structure and content.
2. Carry out the actions completely and in the given sequence.

2.2 Product Introduction

This section describes the ADB Safegate Ferroresonant, L-828/L-829, constant current regulators (CCRs). These CCRs are manufactured according to FAA specification AC 150/5345-10 (latest edition).

2.3 CHF Constant Current Regulator

Compliance with Standards

FAA:	L-828/L-829 AC 150/5345-10 (Current Edition). ETL Certified.
Military:	UFC 3-535-01; NAVAIR 51-50AAA-2

Uses

FAA L-828/ L-829 Supplies three or five precision output levels to power series lighting circuits on airport runways and taxiways.

ACE3 Unit

The optional ACE3 unit provides L-829 monitoring, including output current monitoring and optional field Insulation Resistance Measurement System (IRMS). Each unit is installed internally in each CCR that requires remote control and/or monitoring within the airfield lighting electrical vault.

Introduction

The ACE3 unit is also a component of ADB Safegate's distributed control and monitoring system. Each unit can be easily connected to an Airport Lighting Control & Monitoring System (ALCMS) by simply adding redundant communication wires. See ADB Safegate RELIANCE Power ACE3 data sheet 3097 for additional information.

Ordering Code

CHF

Amperage

20 = 20 A Output

Size

50 = 50 kW

70 = 70 kW

Output Range


5 = 5-step without Series Cutout

6 = 5-step with Series Cutout

Input Voltage

3 = 480 VAC, 60 Hz

Monitoring Options

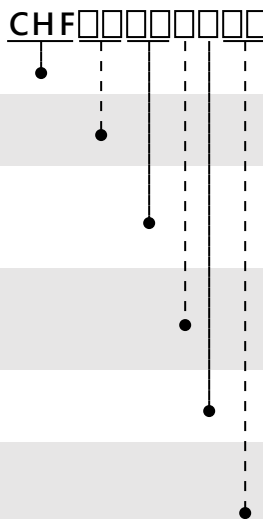00 = None (Standard L-828)¹33 = L-829 Monitor (ACE3)²53 = L-829 Monitor (ACE3) with IRMS³

Application Notes

¹ L-828 with Analog Current Meter on door. Remote Control through multi-wire connection to terminal block in CCR. No monitoring.

² L-829 Monitoring with RELIANCE Power ACE3 Advanced Control Equipment. Remote control from ACE3 to ADB Safegate ALCMS through ethernet or serial communication cable. Multi-wire connection to terminal block in CCR also available.

³ Includes Monitoring Option 33 and Insulation Resistance Measurement System (IRMS).

Electrical Supply

Power Input:	60 Hz, single-phase, available in 480 VAC
Power Factor:	0.95 or more for 50 and 70 kW
Efficiency:	93% minimum for 50 kW 94% minimum for 70 kW
Remote Control:	120 VAC, 60 Hz or +48 VDC, ±10%

Dimensions

CCR Size	Dimensions (H × W × D)	Weight (lbs / kg)
50 kW	70 × 33 × 34 (in.) 177.8 × 83.8 × 86.4 (cm)	2150 lbs / 975.2 kg
70 kW	70 × 33 × 34 (in.) 177.8 × 83.8 × 86.4 (cm)	2400 lbs / 1088.6 kg

CCR Kits

Various kits are available to customize CCRs for specific application requirements.

Current Sensing Relay Kit	94A0343
----------------------------------	----------------

2.4 Remote Control

120V AC, 60Hz or +48V DC, $\pm 10\%$

2.5 Total Harmonic Distortion* (THD)

Current THD: 10% maximum in highest step

Voltage THD: 1.9% maximum in all steps

* Tested with 100% resistive load according to FAA AC150/5345-10 (Latest Edition).

2.6 Theory of Operation

This subsection describes the L-828 CCR theory of operation.

2.6.1 Power Circuit

See [Figure 1](#). A Ferroresonant network consisting of T1, C1, and the SCRs draws from the input lines. This network is capable of drawing a limited amount of power. It can be routed to one of two places. The first is the output leads to the airfield. The second is a resonant tank comprised of C1 and part of T1.

As more power is allowed to flow into the resonant tank, less is available to flow to the field. It is by regulating the current in this tank that the SCRs regulate throughput current to the airfield. It is important to note that the output of the regulator will be the smallest when the SCRs are conducting 100% of the time. This is the opposite of what is seen in simple SCR regulators where the SCRs are used to directly control the output of the regulator.



Note

C1 is actually a bank of capacitors located near T1.

2.6.2 Output Measurement

The components of the Ferroresonant network are designed to deliver an output current slightly higher than 6.6 A/20 A for the minimum input voltage, while the SCRs are fully off.


The output current flows through the high voltage current transformer T5. T5 provides feedback to the URC board on the actual current output to the airfield series circuit.

A second current transformer, T2, provides current to a true-rms-reading ammeter mounted onto the front panel to indicate output current.

2.6.3 Universal Regulator Controller (URC)

See [Figure 5](#). This subsection describes the board level circuitry found on the universal regulator controller.

Figure 1: L-828 CCR Power Circuit Block Diagram

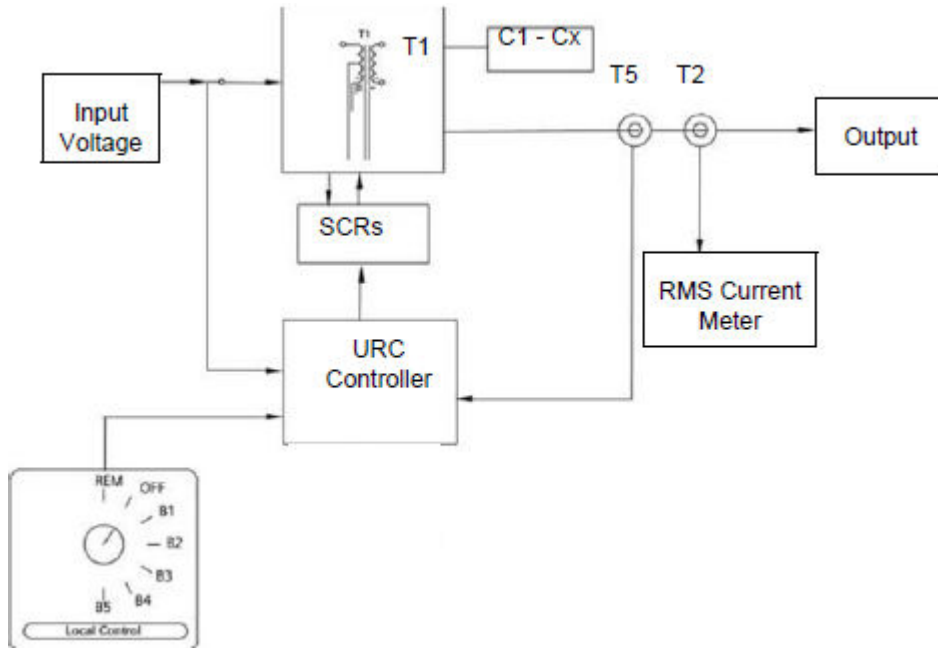

2.6.3.1 URC PCB Inputs/Outputs

The URC receives the inputs listed below. See [Figure 5](#) in this section and [Wiring Schematics](#).

- Local control signals from the front panel rotary switch.
- Remote control signals from a remote control terminal block located in the L-828 chassis (120Vac/48Vdc) (TB1).
- A current proportional to the output current from a current transformer (T5).
- Phase angle reference voltage derived from the input voltage.
- 24 Vac center tapped supply voltage from T4.
- The URC provides the outputs listed below.
- A contact to complete the input contactor K1 coil circuit.
- A contact to enable the Remote CCI voltage at TB1.
- Gate drive signals to the SCR block used to regulate the output current.

2.6.4 Output Current Monitor Circuitry

The system output current is sensed by a current transformer (T5) whose secondary is connected to J8-3 and J8-4 on the URC board. This current signal is passed through a 15- ohm shunt resistor (R38), located on the URC board. For the 6.6 amp regulator, T5 provides a 100:1 step-down of the feedback current. For 20 A regulators, this ratio is 300:1. Output current steps 1-5 would correspond to voltage levels of 420, 510, 615, 780, and 990 millivolts respectively.

2.6.5 Local Control Position Detection

Local control position detection is accomplished by using a rotary switch mounted on the front door of the CCR. See [Figure 2](#).

2.6.6 Contactor Drive

The contactor drive circuit on the URC PCB pulls in the main contactor K2 by shorting points J4-2 to J4-4.

2.6.7 Remote Control Position Detection

When the local control signal to the micro-controller indicates "remote" the remote control circuitry is active. Relay K1 on the URC board closes, providing 120VAC to the CCI connection on TB2. The remote control inputs incorporate surge suppression and are optically isolated from the rest of the PCB.

2.6.8 Fault Protection

This subsection describes URC fault protection.

Overcurrent Protection

The micro-controller detects an over current condition by comparing the output current to a preset value. If the output current exceeds this value the controller will shut the regulator down by removing drive to the input contactor. This contactor will remain de-energized until the controller is reset either by selecting the OFF position (remotely or locally) or cycling the input power off for a minimum of 2 seconds and then back on. The control board will not recognize momentary over currents caused by load switching or other transient conditions.

Open Circuit Protection


The micro-controller detects an open circuit by the absence of current in the regulator output (this will also detect an open or shorted current transformer). If the output current is less than 1.5 amps, the controller will shut the current regulator down within one second by removing drive to the input contactor. This contactor will remain de-energized until the controller is reset either by selecting the OFF position (remotely or locally) or cycling the input power off for a minimum of 2 seconds and then back on.

2.7 L-828 CCR

See Figure 2. This subsection describes the L-828 CCR. The L-828 uses a Universal Regulator Controller (URC) to provide regulator and control functions.

Note Figure 2 shows a Ferroresonant 15 kW/6.6 A L-828 CCR. The other L-828 CCRs (4, 7.5, 10, 20-30 kW/6.6 A/20 A and 50/70kW) may differ in size and appearance.

Figure 2: L-828 CCR (4 -30kW/6.6 A)

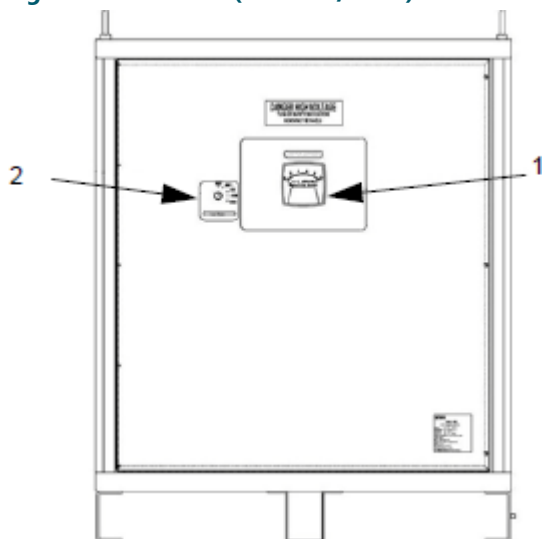

The L-828 CCRs are designed to:

- Supply three or five precision output current levels (6.6 A/20 A maximum) to power airport series lighting circuits on runways and taxiways.
- Accurately regulate the output current to within $\pm 1\%$ of the adjustable nominal levels from no load to full load and with input voltage variations of -5% to $+10\%$ of nominal.
- Maintain the nominal output current levels even when 30 percent of the isolation transformers in the series lighting circuit supplied by the regulator have open secondaries.

2.8 L-829 CCR


See [Figure 3](#). This subsection describes the L-829 CCR. The L-829 uses a URC to provide regulator and control functions. It also uses the Advanced Control Equipment (ACE) for control and monitoring functions.



Note

[Figure 3](#) shows a L-829 (15 kW/6.6 A) CCR. The other L-829 CCRs (4, 7.5, 10, 20-30 kW/6.6 A/20 A & 50/70kW) may differ in size and appearance.

Figure 3: L-829 CCR with ACE3

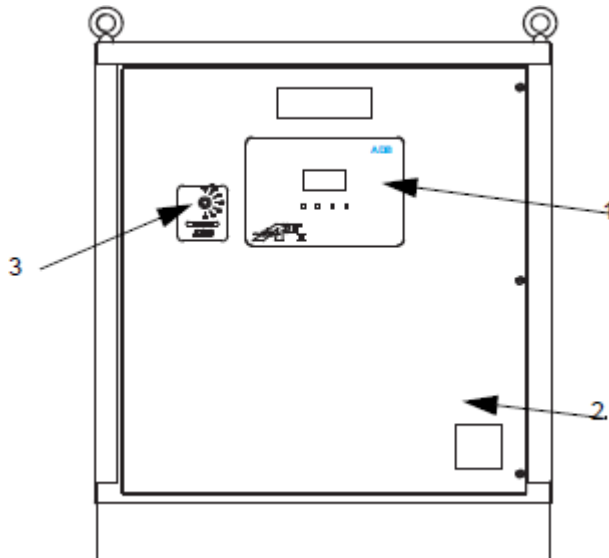

2.9 SGRS Powerpack™

This subsection describes the Switchgear Regulator Style Powerpack. The SGRS Powerpack operates similar to the stand-alone type L-828 / L-829 and uses a URC to provide regulator and control functions. It also uses the Advanced Control Equipment (ACE™, ACE2™ or ACE3™) for control and monitoring functions.


The main difference is the CCR frame which is designed to insert into a SGRS line-up.



Note

Figure 4 shows a Ferroresonant L-829 (30 kW/6.6 A) CCR. The other L-829 CCRs (4, 7.5, 10, 15, 20 kW/6.6 A/20 A and 50/70kW) may differ in size and appearance.

Figure 4: SGRS Powerpack with ACE3

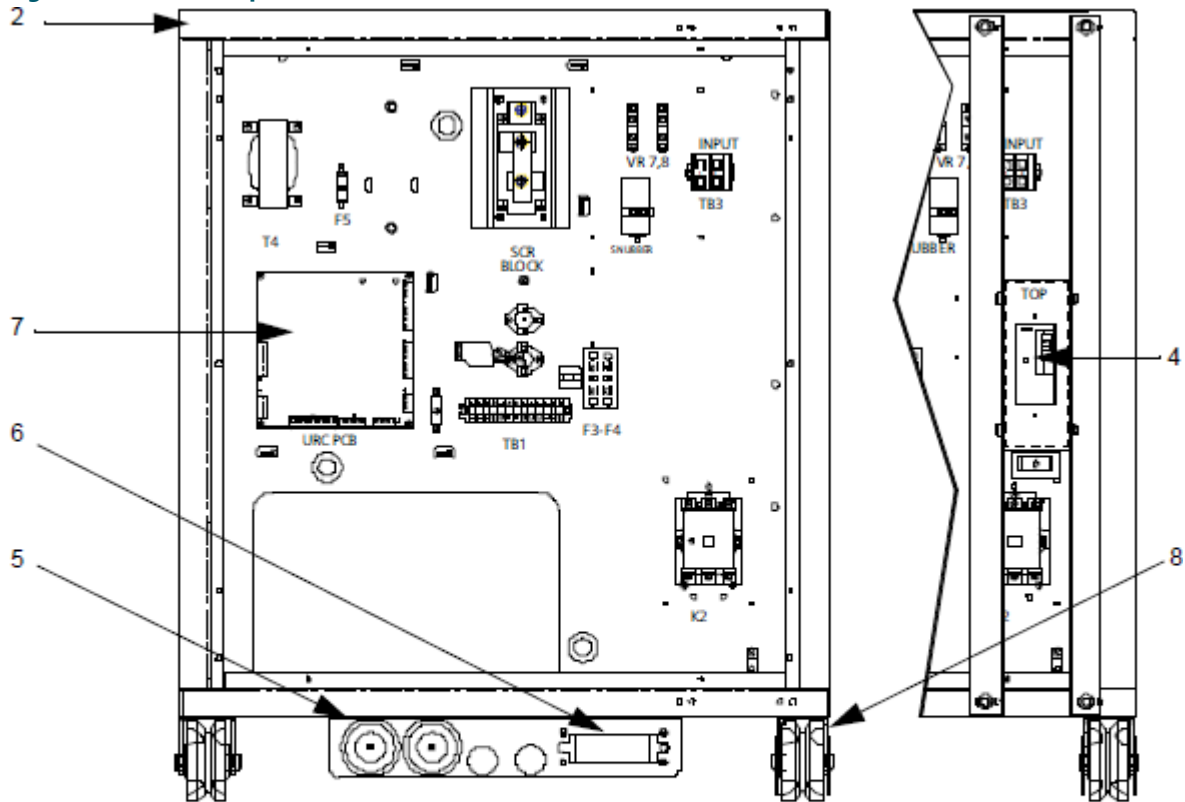

1. ACE – not shown (Installed on inside front of SGRS door)
2. SGRS Powerpack
3. Rotary Switch – (Installed on front of SGRS door)
4. Circuit Breaker
5. Series Circuit Stab Connector
6. Input Power and control wiring stab connector
7. URC Circuit Board
8. Roller Wheels

2.10 Universal Regulator Controller

See [Figure 5](#) below. The Universal Regulator Controller (URC) is a PC board that is designed to provide all regulator and control functions for Ferroresonant L-828/L-829 CCRs manufactured by ADB Safegate. This is accomplished with an 8-bit embedded microcontroller and interface circuitry contained on a single 8 x 8 inch (203 mm x 203 mm) through-hole type printed circuit board. The universal regulator controller PCB performs the functions listed below.

- Produces SCR drive signals in accordance with the desired output current setting.
- Detects an overcurrent, or open circuit, and switches the constant current regulator off.
- When in Remote mode, enables the CCI to provide 120 Vac at 50 W. The CCI is the Remote power control source.

Figure 5: Universal Regulator Controller (URC)



2.10.1 L-829 Advanced Control Equipment (ACE)

See [Figure 3](#) and [Figure 6](#). The L-829 ACE control and monitoring unit consists of an integrated control unit that is interfaced to each CCR either internally or within a small external enclosure. The ACE printed circuit boards are mounted inside a small and rugged environmental enclosure that is directly attached to the door of the L-829 CCR. The ACE consists of microprocessor-based module(s) that processes communication, control commands, input/output interface, and failsafe functionality for controlled elements in the airfield lighting vault.

Figure 6: ACE Control Board



For more information about the ACE, see:

- Advanced Control Equipment (ACE) manual 96A0287, Advanced Control Equipment (ACE2) manual 96A0357, or Advanced Control Equipment (ACE3) manual 96A0500.
- ACE Programming manual 96A0348.

2.11 L-828/L-829 CCR Monitoring Options

The L-829 CCR monitoring options include the Insulation Resistance Monitoring System (IRMS), Scanning Monitor Interface (SMI), and Scanning Monitor Ready (SMR).

2.11.1 Optional Insulation Resistance Monitoring System

The IRMS is used only on the L-829. It performs scheduled cable insulation resistance measurements and can also perform manually requested measurements. IRMS provides the ability for monitoring the long-term degradation of the airfield series circuit cabling and showing the results on the L-829 CCR front display panel.



WARNING

When servicing a regulator equipped with an IRMS module, be sure that power to the IRMS is disconnected before touching the IRMS board, or any of the high voltage components or wires.

2.11.2 Optional Scanning Monitor Interface

The scanning monitor interface is a relay assembly that can be mounted internally to the front panel of the CCR. The relay assembly consists of four relays and sockets. The relay assembly is used to generate feedback signals concerning the CCRs operation to the Remote Multiplexer. The relay assembly generates feed back for the following signals: Remote/local status, commanded ON status, regulator running status, and primary power status.

2.11.3 Optional Scanning Monitor Ready

The scanning monitor ready includes the scanning monitor interface plus one current transformer (CT) and one potential transformer (PT). It also has resistor loads, and a fuse in the potential transformer secondary. Differential signals presenting the actual series circuit voltage and current are transmitted to the scanning monitor system two-conductor shielded cables

2.12 Optional Series Cutout Type SCO

The series cutout Type SCO is often used at airports having a large number of series circuits to isolate the series circuit from the CCR during maintenance or testing operations. It also allows manual measurement of resistance of the series circuit to ground without disconnecting the series cable. The SCO cutout has a nominal working voltage of 5 kV and a nominal carrying current capacity of 20 amps AC.

For more information refer to the SCO Cutout manual 96A0294.

2.13 L-828 CCRs (4-70 kW 6.6 A/ 20 A): Required Equipment

Refer to [Table 1](#) for required equipment that is supplied.


Refer to [Table 2](#) for required equipment that is not supplied.

Refer to [CHF Parts and Mechanical Drawings](#) for ordering information.

Table 1: Required Equipment Supplied

Description	Quantity
L-828/L-829 constant current regulator	As Req'd on Order
Instruction manual	1 per CCR on Order

Table 2: Required Equipment Not Supplied

Description	Quantity
Input power wire. Refer to Table 3 .	As required
Remote control wire, AWG 18 minimum, AWG 14 maximum	As required
Ground wire, AWG 8 minimum (6.6 A); AWG 6 minimum (20 A)	As required
Output load wire, AWG 6 minimum, 5000 Vac, L-824 type (6.6 A); AWG 8 minimum (20 A)	As required
Shorting jumper wire, AWG 8 minimum	As required
Disconnect switch or main circuit breaker	1
Input lightning arrestors for input voltages greater than 480 Vac. Mounted external to CCR.	As required
 Note lightning arrestors are standard on the power input for voltages 480 Vac and less for all new CCRs	
Voltmeter, 60 Vdc full scale	1
Ammeter, true-rms-reading, 9 A maximum scale	1
Inductive-type current probe	1
Ohmmeter	1
Mounting bolts, ½-13 x 1-1/2 in. long, ½ STD washers, and lockwashers	4

2.14 Input Wire Size

[Table 3](#) refers to recommended input power supply wire size for each regulator power rating dependent on the input voltage. This recommendation is based on 75°C rated copper wire per NEC Table 310.16.

Table 3: Recommended Input Wiring Rating

Power Rating	208 Vac	220 Vac	240 Vac	347 Vac	480 Vac
4 kW	AWG 10	AWG 10	AWG 10 ¹	AWG 12 ¹	AWG 14
7.5 kW	AWG 6	AWG 8	AWG 8	AWG 8	AWG 10 ¹
10 kW	AWG 4	AWG 6	AWG 6	AWG 8	AWG 10
15 kW	AWG 3	AWG 3	AWG 4	AWG 6	AWG 8
20 kW	AWG 2/0	AWG 1/0	AWG 2	AWG 4	AWG 6
30 kW	AWG 3/0	AWG 3/0	AWG 2/0	AWG 2	AWG 4
50 kW	Not applicable	Not applicable	Not applicable	Not applicable	AWG 1/0
70 kW	Not applicable	Not applicable	Not applicable	Not applicable	AWG 3/0

Notes

¹ * Increased 1 wire size to comply with small conductor limits in NEC 240.4.D.

2.15 Input Power Breaker Sizing

It is recommended that the circuit breaker on the input power supply lines have a rating of 125% of the CCR's input current, as given in [Table 4](#), unless local codes require a different rating technique. Refer to the CCR's nameplate for the kW rating and input voltage to determine the actual input current from [Table 4](#). If no standard-size circuit breaker exists at the 125% value, use the next larger standard-size circuit breaker.



Note

The currents listed in [Table 4](#) represent actual input currents assuming the worst case limits of AC 150/5345-10 for power factor, efficiency, and number of required lamps out.

Table 4: CCR Input Voltage and Current for the CCR Power Ratings

Power Rating	208 Vac	220 Vac	240 Vac	347 Vac	480 Vac
4 kW	27 A	26 A	24 A	16 A	12 A
7.5 kW	51 A	48 A	44 A	31 A	22 A
10 kW	68 A	65 A	59 A	41 A	30 A
15 kW	97 A	92 A	84 A	58 A	42 A
20 kW	129 A	122 A	112 A	78 A	56 A
30 kW	190 A	179 A	164 A	114 A	82 A
50 kW	Not applicable	Not applicable	Not applicable	Not applicable	136 A
70 kW	Not applicable	Not applicable	Not applicable	Not applicable	188 A

2.16 Specifications

This subsection provides specifications for L-828/L-829 CCR (4-70 kW 6.6 A/20 A).

Table 5: Class, Style and Power Ratings

Class	L-828/L-829 CCR Max Output Current	Style	Brightness Steps	Nominal Output Current	Power Ratings
1	6.6 A	1	3	4.8 A, 5.5 A, 6.6 A	4, 7.5, 10, 15, 20 and 30 kW
		2	5	2.8 A, 3.4 A, 4.1 A, 5.2 A, 6.6 A	
2	20 A	2	5	8.5 A, 10.3 A, 12.4 A, 15.8 A, 20 A	15, 20, 30, 50 and 70 kW

Table 6: Power Factor

CCR	Power Factor
4 - 10 kW	0.90 minimum
15 - 70 kW	0.95 minimum

2.16.1 Efficiency

The efficiency of the regulator operated with rated input voltage into a full load having unity power factor is not less than the value shown in [Table 7](#).

Table 7: Efficiency

CCR	Efficiency
4-20 kW	0.90 minimum
30 kW	0.92 minimum
50 kW	0.93 minimum
70 kW	0.94 minimum

2.16.2 Reactive Loading

The CCR maintains the output current within the limits of [Table 8](#) for all brightness steps when the load is connected via isolating transformers, and the secondaries of 30 percent of the transformers become open-circuited. The load before opening the isolation transformer secondaries may be any value from half to full load. For regulators less than 10 kW loaded as specified above, the current remains below 6.8 amperes for the 100 percent brightness step.

Table 8: Output Current and Limits

Class	Style	Step	Nominal output amperes (A) root mean square (RMS)	Allowable range (A RMS)
1	1	B100	6.6	6.5 - 6.7
		B30	5.5	5.4 - 5.6
		B10	4.8	4.7 - 4.9
1	2	B5	6.6	6.5 - 6.7
		B4	5.2	5.1 - 5.3
		B3	4.1	4.0 - 4.2
		B2	3.4	3.3 - 3.5
		B1	2.8	2.7 - 2.9
2	2	B5	20.0	19.7 - 20.3
		B4	12.8	15.5 - 16.1
		B3	12.4	12.1 - 12.7
		B2	10.3	10.0 - 10.6
		B1	8.5	8.2 - 8.8

2.16.3 Resistive Loading

The regulator maintains the output current within the limits of [Table 8](#) while powering any load between no load (or short circuit) and full load. For regulators 10 kW or larger, the regulation is maintained over the full range of environmental conditions specified in this section and for the input voltages specified in [Table 4](#). For regulators less than 10 kW, the regulation is provided at nominal input voltage for all brightness steps.

2.16.4 Regulation

Refer to [Table 8](#) for output current limits. Current regulation is obtained under the conditions listed in *Environmental Operating Conditions*.

2.16.5 Environmental Operating Conditions

The L-828 CCRs are designed for indoor use only in an area with adequate ventilation for cooling the constant current regulator. The environmental operating conditions include temperature range, relative humidity, and altitude.

Table 9: Environmental Operating Conditions

Temperature Range		Relative Humidity	Altitude
Without monitoring circuitry	With monitoring circuitry		
-40 to +55 °C (-40 to +131 °F)	0 to +55 °C (-18 to +131 °F)	10 to 95% (non- condensing)	Sea level to 6,600 ft (2000 m)

2.16.6 Protection Devices

L-828 CCRs have the following protection devices:

- Output open-circuit protection.
- Output overcurrent protection.

- Lightning arrestors on output terminals and bushings.
- Lightning arrestors on input terminals.
- Fuse protection of AC supply voltage of the URC PCB and brightness control voltage for Remote control.

2.16.6.1 Open-Circuit Protection

The regulator includes an open-circuit protective device to open the primary switch within 2 seconds after an open circuit occurs in the secondary. The device resets within 2 seconds after the control switch is turned off and re-energized, and cannot be tripped by switching the load circuits or other transients.

2.16.6.2 Overcurrent Protection

Regulators include an overcurrent protective device that opens the primary switch when the output current exceeds the 100 percent current (6.6 A or 20 A) by 5 percent. The device operates within 5 seconds after an overcurrent of 5 percent and within 1 second after an overcurrent of 25 percent. The device resets within 2 seconds after the control switch is turned off and re-energized. The overcurrent protection cannot be activated by a momentary (0.25 second) overcurrent caused by switching the load circuits and other transients.

2.16.7 Input Voltage

Input voltage is single phase 60 Hz ac. Regulators operate as required (see subsections *Resistive Loading* and *Reactive Loading* in this section) when the input voltage is anywhere between 95 and 110 percent of the nominal value. The regulator is designed to withstand momentary voltages up to 120 percent of nominal input voltage without shutting off or being damaged by such overvoltage so long as the duration of overvoltage excursions are not longer than 50 milliseconds and do not occur more than once per minute.

2.16.7.1 Built-In True-rms- Reading Ammeter, L-828 only

For the L-828 only, a flush-mounted true-rms-reading ammeter mounted on the front of the input module PCB indicates the output current. The meter accuracy is ± 3.0 percent of the maximum output current.

2.16.7.2 Rating and Input Voltage

Table 10: Rating and Input Voltage

Rating	Input Voltage
4, 7.5, 10, 15, 20, 30 kW	208-480 Vac, -5 to +10%
50, 70 kW	480 Vac, -5 to +10%

2.16.8 Temperature Rise

The temperature rise of the transforming portion of the regulator is in accordance with ANSI C57.12.91 for air-cooled regulators.

3.0 Installation

L-828 / L-829 CCR Installation

This section provides instructions for installing L-828/L-829 constant current regulators (CCRs) (4-70kW/6.6 A/20 A). Refer to the airport project plans and specifications for the specific installation instructions.

3.1 Unpacking

The equipment is shipped ready for installation. Handle equipment very carefully to prevent component damage. Unpack the carton upon receipt and check the contents and their condition. Note any exterior damage to the carton that might lead to detection of equipment damage.

If you note any damage to any equipment, file a claim with the carrier immediately. The carrier may need to inspect the equipment.



Note


Take care to maintain the unit in an upright position when handling the regulator.

The Core Shipping Strap ([Figure 7](#) and top left) or the Core Restraining Bracket (Bottom Left) shall be removed after installation. Retain for future shipping. The plastic/fiberglass strap may be left installed in the CCR.

3.1.1 Return Shipping

The shipping strap that connects to the top of the CCR core to the frame must be in place for shipping. If you are returning the CCR for repair, and the shipping strap was removed after receiving, you must re-install it prior to shipment.

Figure 7: IXT Core Shipping Strap

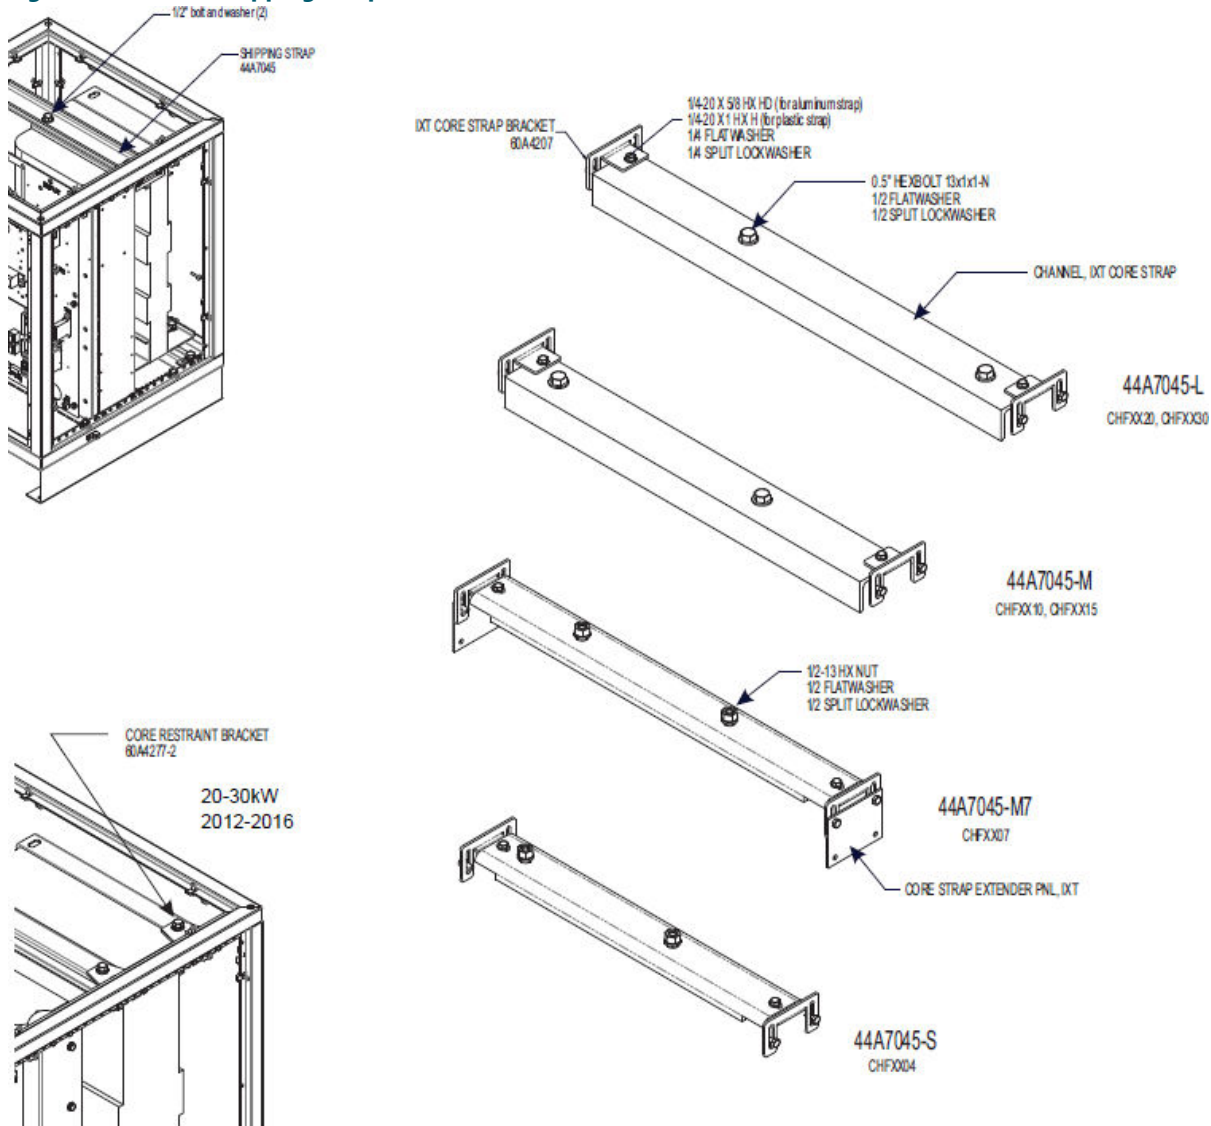

CAUTION

Install the Core Shipping Strap Prior to Shipping.

3.2 Installation

Recommend lifting for the 4 thru 70kW regulators is to use a forklift from underneath the CCR frame. Lifting points, four 3/4-inch ID eyebolts on the top corners of the CCR frame, are provided per FAA specifications. If lifting eye bolts are used, use either a portable hoist and sling(s) or sling(s) attached from forks on forklift. See [Table 11](#) (dimensions and weights) before lifting.



WARNING

Electrical Shock

Read installation instructions in their entirety before starting installation.

- Become familiar with the general safety instructions in this section of the manual before installing, operating, maintaining or repairing this equipment.
- Read and carefully follow the instructions throughout this manual for performing specific tasks and working with specific equipment.
- Make this manual available to personnel installing, operating, maintaining or repairing this equipment.
- Follow all applicable safety procedures required by your company, industry standards and government or other regulatory agencies.
- Install all electrical connections to local code.
- Use only electrical wire of sufficient gauge and insulation to handle the rated current demand. All wiring must meet local codes.
- Route electrical wiring along a protected path. Make sure they will not be damaged by moving equipment.
- Protect components from damage, wear, and harsh environment conditions.
- Allow ample room for maintenance, panel accessibility, and cover removal.
- Protect equipment with safety devices as specified by applicable safety regulations.
- If safety devices must be removed for installation, install them immediately after the work is completed and check them for proper functioning prior to returning power to the circuit.

Failure to follow these warnings may result in serious injury or equipment damage.

Place the regulator inside a well ventilated room with sufficient clearance for personnel to inspect and maintain the unit.

3.2.1 Wiring Connections and Startup



WARNING

Read installation instructions in their entirety before starting installation.

- Installation and operation of the CCR should be performed by personnel qualified to work on high voltage equipment. The high voltage involved with the unit makes it potentially dangerous and may be lethal if contacted by operating personnel.
- Place wiring for output, input, and remote control only on the right side of the CCR to prevent damage to the PCB that is located on the front Left side of the enclosure. If output, input, and remote control wiring must enter from the left side of the enclosure then wiring must be then routed through conduit where it passes the PCB area.


See [Figure 8](#).

To install wiring, perform the following procedure:

1. Verify the input supply voltage corresponds to the voltage rating on the nameplate of the regulator.
2. Make sure the front panel rotary selector switch is set to the OFF position.
3. Ground the regulator by making an adequate ground wire (AWG 6 or larger) connection to the external earth ground lug on the regulator.
4. An appropriate disconnect-type cutout or circuit breaker shall be provided outside the regulator for the input power supply lines.
5. Short-circuit the output terminals TB2-1, TB2-2 using 8 AWG minimum wire to avoid lamp destruction in case of excessive current output.
6. Refer to [Table 3](#) for the recommended input wire.

Connect the power supply lines from the disconnect switch or main circuit breaker to the CCR input fuse block F1/F2 or terminal block TB3. Tighten all connections.

Figure 8: Wiring on Right Side of CCR

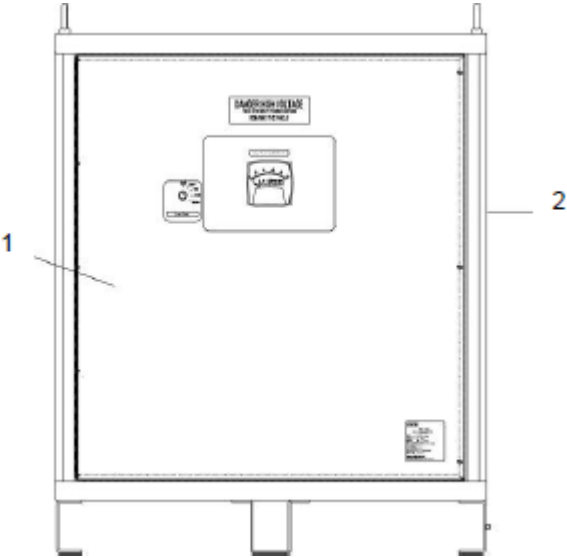

1. Front of CCR
2. Place Conduit and Wire on Right Side of CCR
7. Engage main circuit breaker or disconnect switch to energize the regulator.
8. Turn front panel rotary selector switch to all brightness steps, and verify that current values on the panel ammeter correspond to those in [Table 8](#) for each brightness step.
9. Disengage the main current breaker or disconnect switch to de-energize the regulator.
10. Turn the rotary selector switch to OFF.
11. Connect remote control lines, if required, to remote control terminal block TB1.

Use AWG 18, 300 V wire or larger for 120 Vac signals. See [Wiring Schematics](#) for remote control connections.



Note

If the ADB Safegate Advanced Control Equipment (ACE) is used with the Ferroresonant L-828 CCR, refer to the Advanced Control Equipment manual (96A0245), Advanced Control Equipment 2 (ACE2) manual (96A0357) or Advanced Control Equipment 3 (ACE3) manual (96A0500) for wiring connections to remote control.

[Table 11](#) through [Table 13](#) provide the necessary connections for remote control. Terminal B1 (B10) does not need to be wired. Brightness step B1 (B10) occurs when the regulator is switched on.

Table 11: Remote 120 Vac Control Connections (3-Step/6.6 A)

For this remote intensity step...	Connect CCI to...
LOW (4.8 A)	CC
MEDIUM (5.5 A)	CC, B30
HIGH (6.6 A)	CC, B100
OFF	Not applicable

Table 12: Remote 120 Vac Control Connections (5-Step/6.6 A)

For this remote intensity step...	Connect CCI to...
2.8 A	CC
3.4 A	CC, B2
4.1 A	CC, B3
5.2 A	CC, B4
6.6 A	CC, B5
OFF	Not applicable

Table 13: Remote 120 Vac Control Connections (5-Step/20 A)

For this remote intensity step...	Connect CCI to...
8.5 A	CC
10.3 A	CC, B2
12.4 A	CC, B3
15.8 A	CC, B4
20 A	CC, B5
OFF	Nothing

12. Make sure wiring connections are tight and no wires are shorting across each other.



CAUTION

Read installation instructions in their entirety before starting installation.

- Incorrect wiring can damage regulator. Double check all connections.

13. Energize regulator and set rotary selector switch to REM.

Operate the CCR by remote control, and verify correct current levels are obtained on all brightness steps.

14. Turn rotary selector switch to OFF and de-energize regulator (disengage disconnect switch or main circuit breaker).

Remove short-circuit link between output terminals TB-2-1 and TB2-2.

15. Connect the 6.6 A or 20 A series lighting circuit to the output terminals/ bushings and tighten all connections.

Table 14: Input/Output Connections

CCR Size	Input Location	Output Location
4 thru 30kW with SCO	Top of each Fuse Block front of component plate right hand side	Bottom of SCO
CHF 20kW/208 V CHF 30kW/208 V		Lightning Arrestors (VR1 and VR2) on Back of component plate
CHF 4, 7.5, 10 kW	Terminal Block (black) Front of component plate right hand side	Lightning Arrestors (VR1 and VR2) on Back of component plate
	N/A	Lightning Arrestors (VR1 and VR2) on Back of component plate
CHF 15,20,30 kW	Terminal Block (white) Front of component plate right hand side Top of each Fuse Block front of component plate right hand side	Lightning Arrestors (VR1 and VR2) on Back of component plate
CHF 50, 70 kW	Top of each Fuse Block – front of component plate top right side	Lightning Arrestors (VR1 and VR2) on Back of component plate

16. The core shipping strap should be removed after installation.

Retain for future shipping. Leave the Core Strap Bracket in place for easy re-install. See [Unpacking](#).

3.3 Stacking CCR's (Optional)



CAUTION

Read installation instructions in their entirety before starting installation.

- Before stacking CCRs larger than 10 kW or stacking more than 2 CCRs, contact the ADB Safegate Sales Department.

To stack CCRs, perform the following procedure:

1. Remove the four ½ x 3–3/4 HILTI anchor bolts with 4 nuts and lock washers for anchoring the CCRs to concrete, and the four 1/2–13 x ¾ hex head bolts and ½ split lock washers from the stacking kit (Part Number 94A0355).
2. See [Table 11](#) for anchor bolt template.


Use the four ½ x 3.75 Lg HILTI anchor bolts with 4 nuts and lock washers to anchor the CCR to the concrete floor.



Note


Make sure the clearance behind the CCR is far enough from the wall for easy access to the regulator.

Figure 9: Anchor Bolt Template

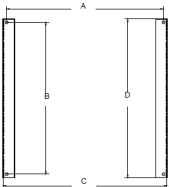


CCR	A	B	C	D
Small	22.50 in	23.50 in	23.75 in	24.75 in
Medium	27.50 in	28.50 in	28.75 in	29.75 in
Large	31.50 in	32.50 in	32.75 in	33.75 in

Figure 10: Location of Bolts for Stacking CCRs

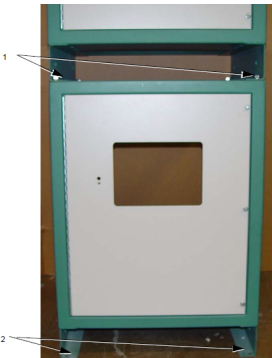

1. Hex Head Bolts and Split Lock washers
2. ½ x 3–3/4 inch HILTI Anchor Bolt Location

Figure 11: Stacking Bolt

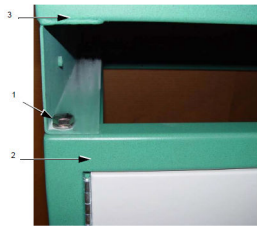

1. Stacking Bolt
2. Bottom CCR Anchored to Concrete
3. Top CCR

3.3.1 SGRS Style Powerpacks (Optional)



CAUTION

Read installation instructions in their entirety before starting installation.

- SGRS Style Powerpacks should be installed using Powerpack lift device.

For information on installing SGRS Powerpacks refer to the SGRS Installation Manual. Document number 96A0303.

Figure 12: Powerpack Installation in SGRS



1. Upper Bay Powerpack

2. Lower Bay Powerpack

4.0 Operation



WARNING

Read installation instructions in their entirety before starting installation.

- Become familiar with the general safety instructions in this section of the manual before installing, operating, maintaining or repairing this equipment.
- Read and carefully follow the instructions throughout this manual for performing specific tasks and working with specific equipment.
- Make this manual available to personnel installing, operating, maintaining or repairing this equipment.
- Contents are static-sensitive. Must be grounded when handling PCB.
- Operation of a Regulator while overloaded at any step may result in equipment failure or equipment damage.
- If safety devices must be removed for installation, install them immediately after the work is completed and check them for proper functioning prior to returning power to the circuit.

Failure to follow these warnings may result in serious injury or equipment damage.

4.1 Introduction

This section provides the operational procedures listed below for the L-828/L-829 constant current regulator (CCR) (4-70 kW/6.6 A or 20 A).

- CCR control procedures
- CCR shutdown procedures
- CCR adjustment procedures
- SCO Cutout working positions

4.2 CCR Control Procedures

This subsection describes the regulator operations in local and remote controls.

4.2.1 Local Control

See [Figure 14](#). Refer to [Table 15](#) through [Table 17](#) for output current when using local control. The front panel rotary selector switch is used for regulator local control. The rotary switch for the 3-step CCR has five positions; the rotary switch for the 5-step has seven positions. The regulator automatically maintains the output current within $\pm 1\%$ of the nominal value for the brightness position selected.

Figure 14: Switch (3-Step/5-Step)

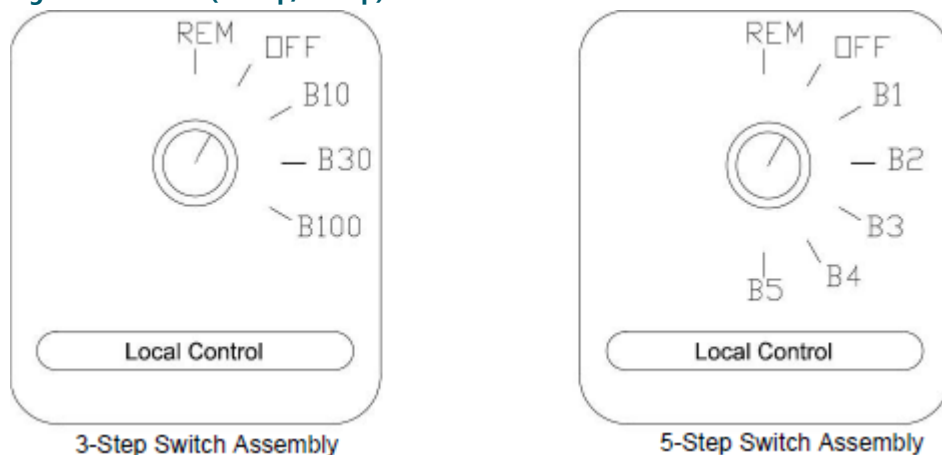


Table 15: Output Current from Rotary Switch (3-Step/6.6A)

If you set the rotary switch to the following...	The result is...
B10	4.8 A current output
B30	5.5 A current output
B100	6.6 A current output

Table 16: Output Current from Rotary Switch (5-Step/6.6 A)

If you set the rotary switch to the following...	The result is...
B1	2.8 A current output
B2	3.4 A current output
B3	4.1 A current output
B4	5.2 A current output
B5	6.6 A current output

Table 17: Output Current from Rotary Switch (5-Step/20 A)

If you set the rotary switch to the following...	The result is...
B1	8.5 A current output
B2	10.3 A current output
B3	12.4 A current output
B4	15.8 A current output
B5	20 A current output

4.2.2 Remote Control

See [Figure 14](#). Refer to [Table 18](#) for instructions on how to set up and use remote control.

Table 18: Remote Control

If...	Then...
The rotary switch is set to position REM and remote control wiring is connected to remote control terminal block TB1 on the regulator	Remote control of the regulator is possible. The output current of the regulator will correspond to the brightness setting energized by remote 120 Vac or 48 Vdc control signals.
Switch is set to OFF	Remote control signals will not operate the regulator; that is, turn the regulator on to a particular brightness setting or turn the regulator off.
No remote control connections exist on terminal block TB1 (switch is set to REM)	The position REM becomes an additional OFF position; that is, the regulator is de-energized.

4.3 CCR Door Interlock (Optional)

The optional door interlock disables remote and local control of the CCR when the door is opened. If the door is opened while the CCR is running, the CCR will shut OFF.

This is to protect personnel from coming into contact with high voltage electronics.



Note

Power to the output terminals is now off, and the regulator cannot be energized by remote control signals. Power is still present on the input power terminals and on the internal control circuitry.

To bypass the interlock, pull out the plunger of the interlock switch. This will allow remote and local control of the CCR with the door open.

4.4 CCR Shutdown Procedure

See [Figure 14](#). To shut down the CCR, set the rotary switch to position OFF.

The door interlock removes power to the CCR when the door is opened. Pull out the plunger fully to bypass.



Note

Power to the output terminals is now off, and the regulator cannot be energized by remote control signals. Power is still present on the input power terminals and on the internal control circuitry.

To remove input power, disengage disconnect switch or external circuit breaker.

4.5 CCR Adjustment Procedures

This subsection provides regulator adjustment procedures.



Note

The regulator has been adjusted at the factory to provide the nominal output current levels as given in [Table 15](#). If the current level settings need to be adjusted, read the following warning statement before proceeding.



WARNING

Read the instructions in their entirety before starting installation.

Only personnel qualified to work on high voltage systems should attempt to make any adjustments on the constant current regulator.

Turn the rotary selector switch on the front panel of the regulator to position OFF. Remove input power before servicing control circuitry.

Never service the regulator when it is in protective shutdown mode. Remote controls or power fluctuations can restart the regulator.


4.5.1 Output Current Adjustment

To adjust the output current, perform the following procedure:

1. Connect a clamp-on true rms-reading instrument (such as a Fluke 87 multimeter with a current clamp) around one of the output current leads.

See [Figure 15](#).

Figure 15: Output Current Clamp

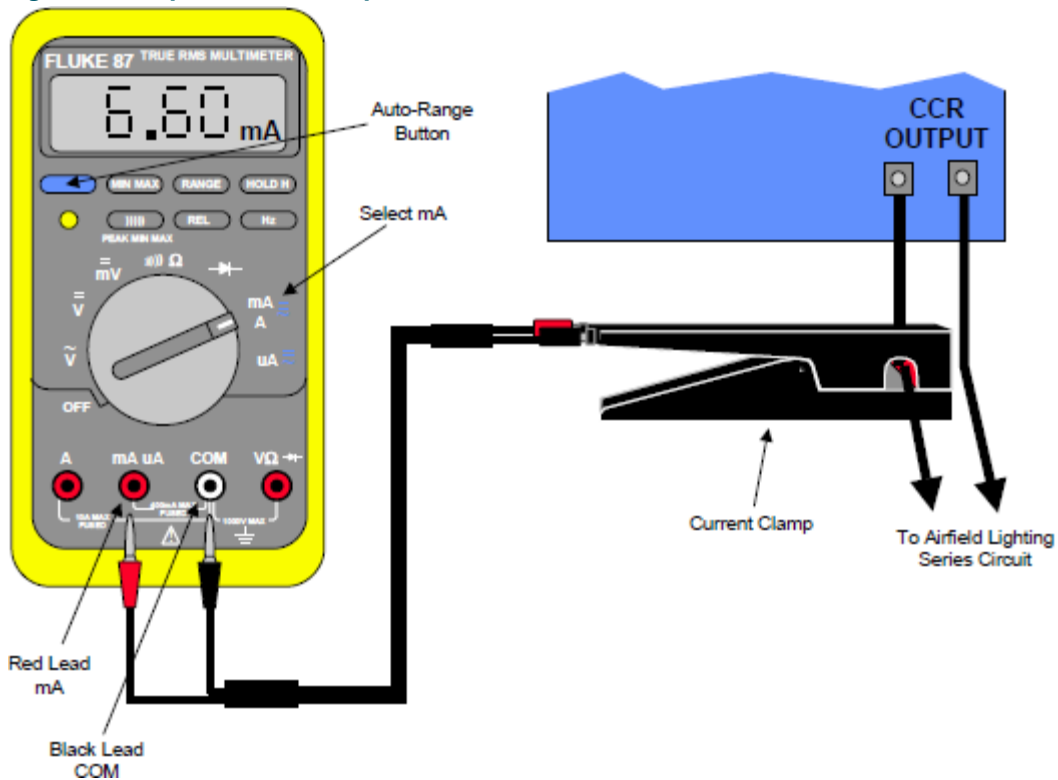

Note

Make sure the meter is set on the AC current scale.

Because the output current waveform is not a true sine wave, the ammeter must be of the true-rms (root mean squared) type. Field instruments such as clamp-on ammeters and Simpson voltmeters will give erroneously low readings.

2. Energize the regulator locally, and set the rotary selector switch to the maximum brightness position **B5** or **B100**.
3. See [Figure 16](#).

Carefully adjust R40 on the universal regulator controller board until the desired current is measured on the meter.




WARNING

Read the instructions in their entirety before starting installation.

Dangerous voltages are present on the URC PCB. It is strongly recommended that a nonconductive screwdriver be used during calibration to protect personnel and the PCB from accidental damage.

Figure 16: R40 (URC Board)

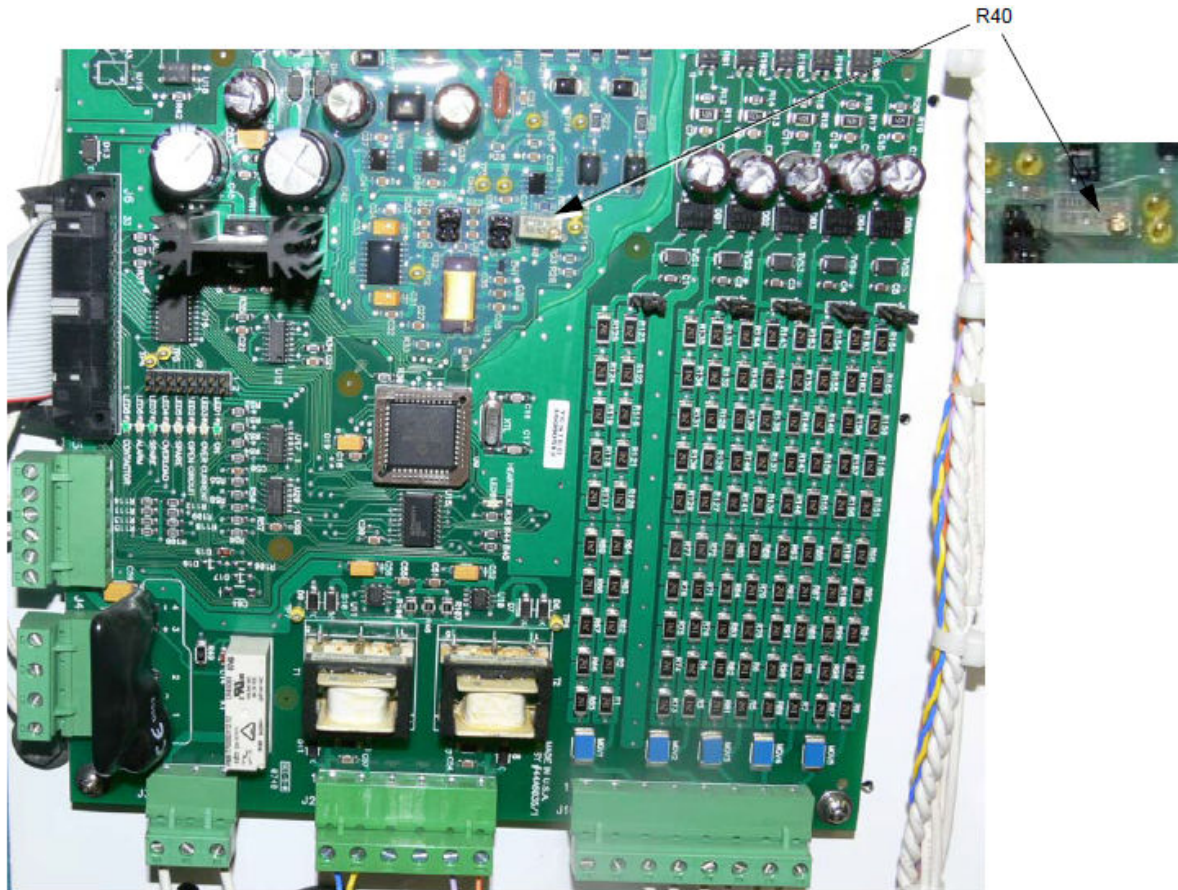


4.5.2 Overcurrent Adjustment

No adjustment is necessary.

4.6 SCO Cutout Working Positions

See [Figure 17](#). The SCO cutout can be plugged in three orientations. For additional information on the SCO cutout, refer to manual 96A0294, *SCO Cutout*.


Figure 17: Handle Orientations

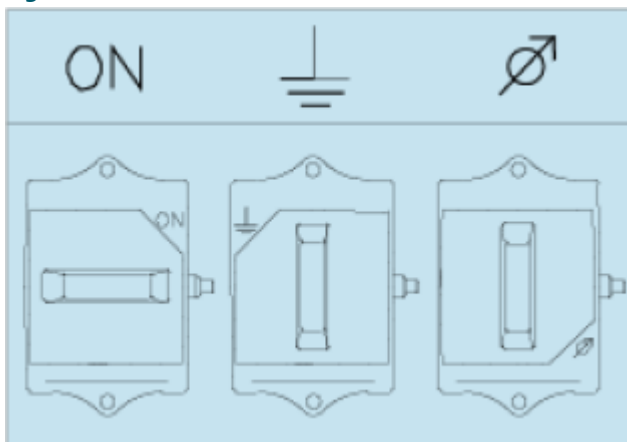

In the operation position, the regulator is connected to the series circuit, and the microswitch is activated.


Note An activated microswitch means that the normally open contact is closed and that the normally closed contact is open. For interlocking with the CCR, only the normally open contact is used. When the cover is removed, the microswitch is not activated. When the microswitch is not activated local and remote control is disabled.

Figure 18: SCO Cutout Operation Position

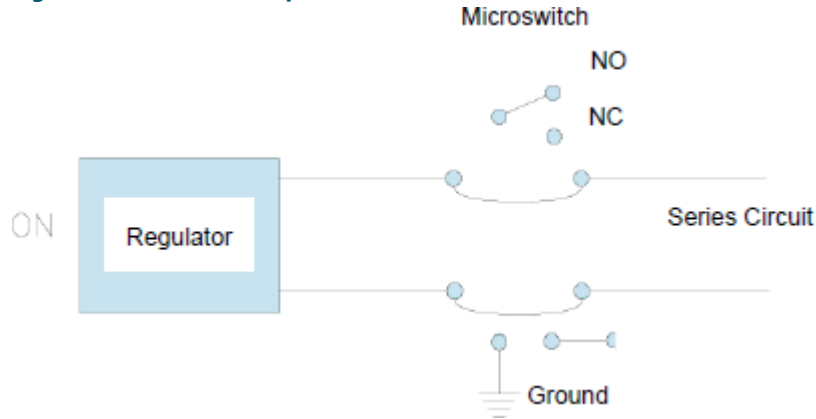

See Figure 19. In the maintenance position, the regulator and the series circuit are both shorted and grounded. The microswitch is not activated.

Figure 19: SCO Cutout Maintenance Position

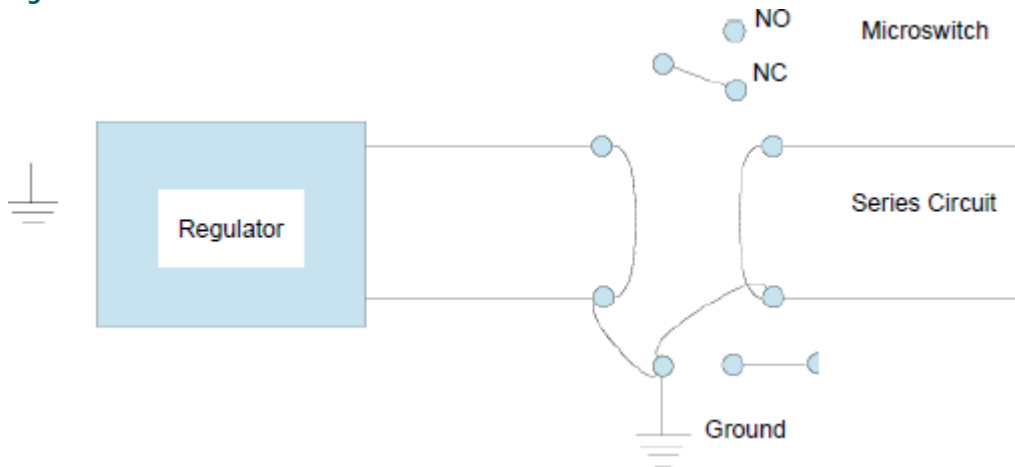


You can determine the current orientation by observing the cutoff corner of the handle.

See Figure 20. In the test and measure position, the insulation resistance of the series circuit can be measured. The regulator operation can be tested under short-circuited output conditions.

In the test and measure position, the regulator is shorted and grounded; the series circuit is shorted and connected to the measurement socket. The microswitch is activated.

Figure 20: SCO Cutout Test and Measure Position

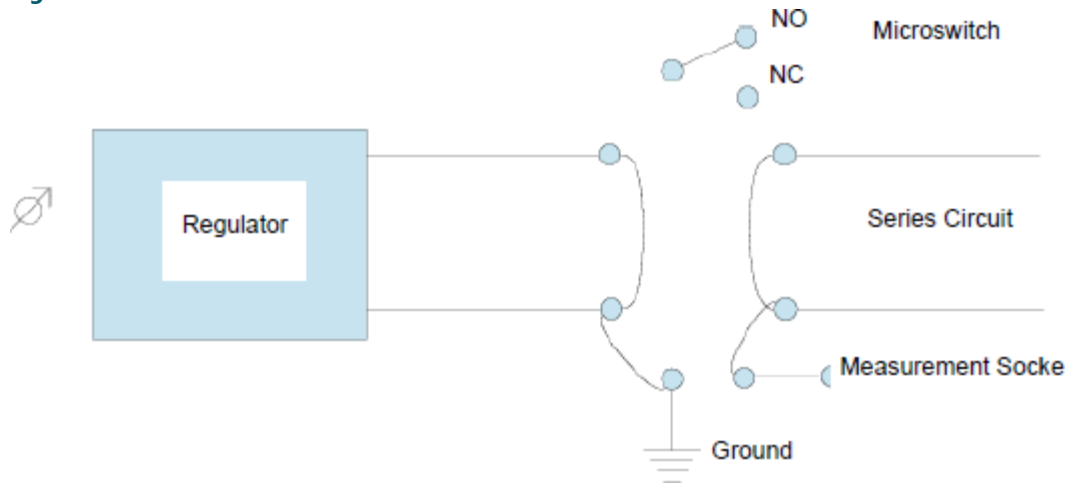

4.7 Digital Power Meter Calibration (optional)


4.7.1 Display

Figure 21: Meter Display



4.7.2 Function Buttons

Figure 22: Function Buttons

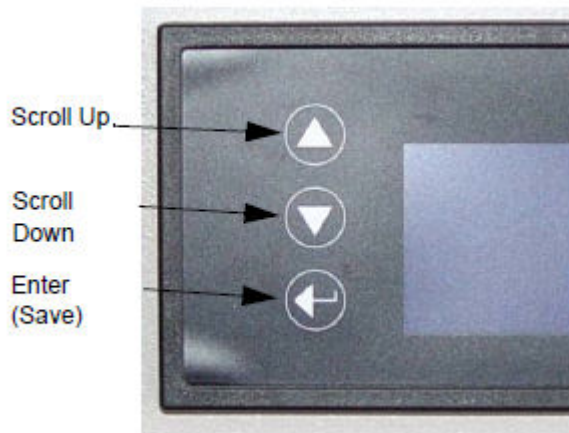

4.7.3 DPM Displays



Note Scroll through displays using the Scroll Up and Scroll Down buttons. After 30 seconds the display will revert to the default setting of A rms.

4.7.3.1 Calibration Procedure

Note The following is needed to calibrate the DPM:


- Calibrated true-rms AC multimeter with current clamp.
- High Voltage probe capable of reading 5,000V true-rms.
- Ability to apply a shorted load to CCR.
- Ability to apply a field load or equivalent resistive load to CCR.

WARNING Read the instructions in their entirety before starting installation.
The CCR must be operating during calibration. Risk of electrical shock. Failure to observe this warning may result in personal injury, death, or equipment damage

Proceed as follows to calibrate the DPM

Depress and hold the top **SCROLL** button and the bottom **ENTER** button **simultaneously** for 3 seconds (See Figure 22) to enter the calibration menu.

Figure 23: Calibration Menu

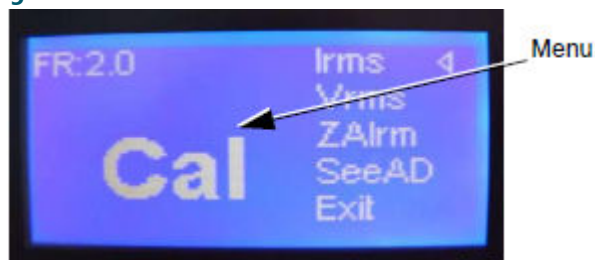

The **SCROLL** buttons are used to select items on the calibration menu. Scroll to the desired selection and then press the **ENTER** button. See the following steps to calibrate the DPM.

Current Calibration

During calibration you will be asked to wait until displayed “cnt” values settle. These “cnt” values are internal A/D values as measured by the power meter’s microprocessor. These values will always vary slightly while the meter is measuring voltage and current. They are displayed to give feedback that the load has settled and the meter is obtaining a steady reading.

Tip

At each calibration step, wait until the thousands digit has settled before proceeding.

a. Irms – High Step (6.6 amps)

Using the **SCROLL** buttons, select Irms and follow the prompts to calibrate the Irms.

- Short the CCR output and then turn the CCR to the highest step.
- Measure the CCR output current with a true-rms current meter and adjust the current value on the meter display to match.



Note

If the CCR output needs to be adjusted follow the procedure in [CCR Adjustment Procedures](#).

- Wait until the Icnt and **V Cnt** values settle and select the **ENTER** button.

Figure 24: Irms High Step Calibration




b. Irms Low Step (2.8 amps)

Repeat the previous steps and follow the prompts for the Low CCR step.

c. Press **ENTER** button to save.


Figure 25: Irms Low Step Calibration

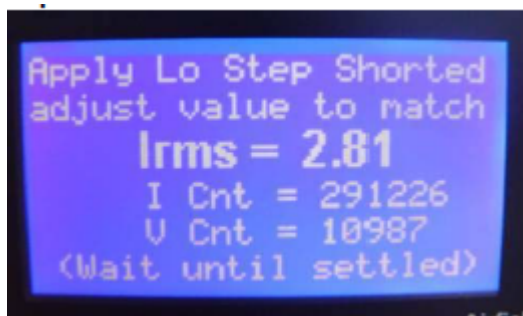

Voltage Calibration

At the calibration screen, scroll to Vrms on the menu and press the **ENTER** button. The next screen ([Figure 26](#)) shows the last calibration voltage set points and internal A/D numbers. **Select Y** (yes) to enter the Vrms calibration.

Figure 26: Vrms Calibration

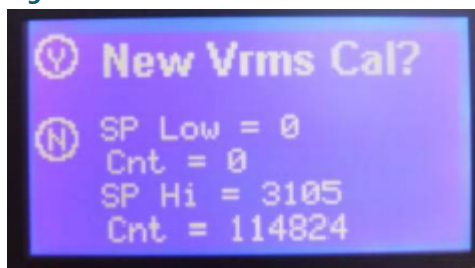

d. Vrms – High Step Loaded




WARNING

Read the instructions in their entirety before starting installation. Use proper safety procedures when adjusting the meter display.

Following screen prompts, apply the field load or equivalent resistive load to the CCR at the high step. Measure the Vrms at the CCR output terminals with the High Voltage probe. Adjust the meter display to match the measured voltage. Wait for the cnt-number to settle (this may take a couple minutes while the load heats up) and then press the **ENTER** button.


Figure 27: Vrms High Step Loaded

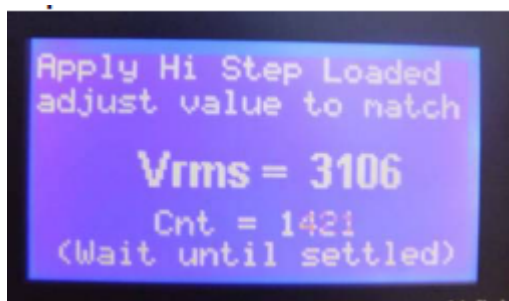

e. Vrms - Off

Follow the prompts to turn off the CCR. When the **Cnt** has settled press the **ENTER** button. (**Cnt** may not go to zero)

Figure 28: Save Vrms Calibration

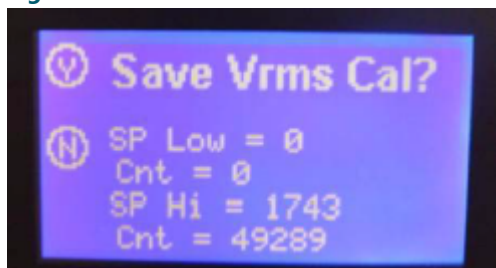

5.0 Maintenance and Repair

This section provides maintenance and repair instructions for the L-828 and L-829 CHF Air-cooled CCRs.



WARNING

Read installation instructions in their entirety before starting maintenance procedures.

- Become familiar with the general safety instructions in this section of the manual before installing, operating, maintaining or repairing this equipment.
- Read and carefully follow the instructions throughout this manual for performing specific tasks and working with specific equipment.
- Follow all applicable safety procedures required by your company, industry standards and government or other regulatory agencies.
- Use only electrical wire of sufficient gauge and insulation to handle the rated current demand. All wiring must meet local codes.
- Protect components from damage, wear, and harsh environment conditions.
- Allow ample room for maintenance, panel accessibility, and cover removal.
- Protect equipment with safety devices as specified by applicable safety regulations.
- If safety devices must be removed for installation, install them immediately after the work is completed and check them for proper functioning prior to returning power to the circuit.

Failure to follow these warnings may result in serious injury or equipment damage.

This section provides preventive maintenance for L-828 /L-829 constant current regulators (CCRs) (4-70 kW 6.6 A or 20 A).

5.1 Maintenance Schedule

To keep the L-828/L-829 CCRs operating efficiently, follow a preventive maintenance schedule. Refer to [Table 19](#).

Table 19: L-828/L-829 CCR (4-70 kW/6.6 A/20 A) Maintenance

Interval	Maintenance Task	Action
Daily	Check all control equipment for proper operation.	Check local and remote control (if used) on each brightness step.
Monthly	Check input voltage.	If input voltage is not within -5% to +10% of the nominal value specified on the nameplate of the regulator, notify power company to correct voltage.
	Check and record output current on each brightness step.	Use a true-rms reading instrument. Adjust current levels if out of tolerance. Refer to <i>Adjustment Procedures</i> in the <i>Operation</i> section. Refer to "Output Current and Limits" on page 12 for the current range for the 3-Step and 5-Step CCRs.

Table 19: L-828/L-829 CCR (4-70 kW/6.6 A/20 A) Maintenance (Continued)

Interval	Maintenance Task	Action
Annually	Check relays, wiring and insulation.	Replace contacts that are excessively burned or pitted.
		Operate the local control switch to check for proper operation of relays and contactors.
		Make sure input and output connections are tight and that no damaged wires or damaged insulation exists.
	Inspect housing for rust spots.	Clean and touch-up rust spots with paint.
	Inspect lightning arrestor connections.	Tighten any loose connections. Replace charred or burnt wiring or broken arrestors.
	Perform a short-circuit test.	Refer to <i>Short-Circuit Test</i> in this section.
	Perform an open-circuit test.	Refer to <i>Open-Circuit Test</i> in this section.
Unscheduled	Check load on regulator.	At installation and subsequent load changes make sure that the output rms-voltage times the output true-rms current does not exceed the rated load on the nameplate of the regulator.

5.1.1 Short-Circuit Test



WARNING

Read the instructions in their entirety before starting installation.
Only personnel authorized to work on high-voltage equipment should perform maintenance on the regulator.
Since high open-circuit voltages may result by opening the primary of a series lighting circuit, only personnel authorized to work on high-voltage equipment should be allowed to perform the short-circuit test.

To perform the short-circuit test, perform the following procedure:

1. Remove input power to the regulator (turn off disconnect switch or main circuit breaker) and turn the rotary switch to OFF.
2. Remove leads from output terminals and bushings.
Use AWG 8 or larger wire to short output bushings.
3. Energize the regulator and turn the rotary selector switch to the lowest brightness step (1) and then to the remaining brightness steps.
Check the output current on the ammeter at each step.



Note

The output current should be within the tolerance given in "Output Current and Limits" on page 12. The panel meter is intended to indicate function. Any calibrations should be performed with a calibrated true-rms current meter.

4. If the output current is not within the limits specified in "Output Current and Limits" on page 12 check the input voltage to the regulator.
The supply voltage should be within -5% to +10% of the nominal input voltage given on the regulator nameplate. Refer to *Adjustment Procedures* in the *Operation* section.
5. Turn off disconnect switch or main circuit breaker to remove input power to regulator.
6. Disconnect the shorting jumper and reconnect output cables.
7. Close input-power disconnect switch or main circuit breaker.

5.1.2 Open-Circuit Test



WARNING

Read the instructions in their entirety before starting installation.

Only personnel authorized to work on high-voltage equipment should perform maintenance on the regulator.

Since high open-circuit voltages may result by opening the primary of a series lighting circuit, only personnel authorized to work on high-voltage equipment should be allowed to perform the open-circuit test.

To perform the open-circuit test, perform the following procedure:

1. Remove input power to regulator (turn off disconnect switch or main circuit breaker) and turn the rotary switch to OFF.
2. Disconnect cables from the output terminals and bushings.
3. Turn on input power to the regulator.
4. Turn the rotary switch to the lowest brightness position (1).
The open-circuit protective device should automatically de-energize the regulator in less than 2 seconds.
5. Turn the rotary switch to OFF.
The open-circuit protective device should reset.
6. Turn the rotary switch to position 1.
The regulator should turn on and then de-energize in less than 2 seconds.
7. If regulator operation is satisfactory, turn rotary switch to OFF, and turn off disconnect switch or main circuit breaker before reconnecting the load.
8. After the load has been reconnected, turn on input power to the regulator.

5.2 Troubleshooting



WARNING

Read the instructions in their entirety before starting installation.

Only personnel authorized to work on high-voltage equipment should perform maintenance on the regulator.

Allow only qualified personnel to perform the following tasks. Observe and follow the safety instructions in this document and all other related documentation.

Since high open-circuit voltages may result by opening the primary of a series lighting circuit, only personnel authorized to work on high-voltage equipment should be allowed to perform the open-circuit test.

De-energize regulator by turning rotary switch S1 to OFF, and remove input power to regulator by turning off disconnect switch or main circuit breaker. Discharge capacitors and ground output terminals bushings by using a grounding rod prior to touching any parts.

If the regulator de-energizes, the output circuit could be interrupted by an overcurrent, open-circuit, or undervoltage condition. Before inspecting the output circuit. Place rotary selector switch S1 in the OFF position and turn off disconnect switch or main circuit breaker. Without this precaution, a dip in the power line may reset the regulator and turn it on, resulting in an output voltage of thousands of volts which can cause serious injury or death.

Contents are static-sensitive. Must be grounded when handling PCB.

Short the output terminals before switching the regulator on. The wire should be AWG 8 or larger.

5.2.1 Preliminary Troubleshooting

The following is a check list of initial steps to perform.

- Visually examine all areas of the CCR. Do burnt or loose connections/parts exist?
- Is the input voltage present and within +10 to -5% of nominal?
- Check all the fuses.
- Are the wire harness connectors to the control board fully seated?

- Have the PCBs been adjusted in accordance with the instruction manual?
- If the CCR works in local but not Remote, check the voltage on the Remote control lines.
- Can the CCR be re-energized by turning the rotary switch from OFF to Step B1 (B10)?
- Short the output of the CCR with an AWG 8 wire, and turn on the CCR. If the regulator operates normally, the problem is probably load related.
- If the CCR turns on and then shuts off after a few seconds and the ammeter has a high current reading, the problem is overcurrent. Adjust the output current accordingly. If the output current is not adjustable, replace the control board restart the regulator.
- If the CCR still fails in overcurrent, replace the SCR and restart.

5.2.2 L-828 General Troubleshooting

This subsection provides general troubleshooting procedures for the L-828 CCR.



WARNING

Read the instructions in their entirety before starting installation.

Only personnel authorized to work on high-voltage equipment should perform maintenance on the regulator.

Since high open-circuit voltages may result by opening the primary of a series lighting circuit, only personnel authorized to work on high-voltage equipment should be allowed to perform the open-circuit test.

Operating a regulator for long periods of time while seriously overloaded may cause the regulator to overheat.


Table 20:

Problem	Possible Cause	Corrective Action
1. Regulator not turning on	Main power supply off	Verify presence of input voltage.
	Switched off due to overcurrent	Switch regulator off in local. Wait for 2 seconds and check to see if the regulator now operates correctly.
	Incorrect external wiring	If the regulator works correctly in local but not in Remote, check the Remote control signals.
	Blown fuse	Replace any blown fuse. Check the input supply voltage and make sure that it is between -5% and +10% of the nominal value listed on the CCR nameplate.
	Defective URC PCB	Replace URC PCB.

Table 20: (Continued)

Problem	Possible Cause	Corrective Action
2. Regulator turns on but de-energizes suddenly	Output circuit interrupted	Apply a short to the regulator output. Turn the regulator on. If the regulator works correctly, repair the lighting circuit. Follow all safety precautions in this manual.
	Defective printed circuit board	Replace regulator controller.
	Overcurrent condition	Verify that SCR is triggering by replacing the PCB.
		Check feedback transformer T5 for damage and proper connections. Polarity does not affect operation. Compare input voltages across J8-4 to J8-3 with those in Output Current Monitor Circuitry . If the voltage at the terminals is correct for the selected step and the output is not correct, and the difference cannot be corrected by calibrating the regulator as specified in <i>Output Current Adjustment</i> in the Operation section.
		Check SCRs and wiring.
		Replace SCR.
		Refer to Problem #11 in this table.
3. Output Current always 6.6 A/20 A or more	Universal regulator controller not calibrated	With regulator set on Step B100 (B5), adjust R40 until a current reading of 6.6 A or 20 A is measured. Check remaining steps to verify the values from Output Current Adjustment .
	Overcurrent condition	Refer to problem #2 in this table, <i>Regulator turns on but de-energizes suddenly</i> .
4. Output Current always 4.8 A or less for 3-Step CCR or 2.8 A or less for 5- Step CCR or 8.5 or less on 20 A	Defective control board	If problem exists in Remote and local control, replace universal regulator controller.
	SCRs always conducting	Verify SCR is triggering by replacing PCB. Check SCRs and wiring for shorts in SCR circuitry. Replace SCR snubber assembly.
		Replace SCR.
	Defective Ferroresonant resonant circuit (transformer or capacitor)	Visually inspect capacitors for damaged housing or wire connections. Visually inspect transformer for damaged coils, connections, and/or wiring. Faulty capacitors will exhibit a bulging case.
	CCR overload	Remove section of load.
5. More than 2 seconds required for CCR to de- energize on open-circuit load	Faulty overcurrent protection	Replace URC PCB.
6. Short lamp life and/or high output current reading on panel ammeter	Incorrect output current adjustment	Refer to Output Current Adjustment .
	Faulty overcurrent protection	Replace URC PCB.

Table 20: (Continued)

Problem	Possible Cause	Corrective Action
7. Regulator not indicating proper current	Incorrect output current adjustment	Refer to Output Current Adjustment in the Operation section. Refer to Problem #11 in this table.
	Current meter not calibrated or faulty	<p>Turn the regulator to the top step (6.6 A/20 A). Verify the current with a true-rms current meter. If the meter is not accurate, adjust the meter with the screw on the front cover. For systems equipped with ACE, refer to:</p> <ul style="list-style-type: none"> Advanced Control Equipment (ACE) manual 96A0287 or Advanced Control Equipment (ACE3) manual 96A0500 or Advanced Control Equipment (ACE2) manual 96A0357 for display calibration procedures. <p>Refer to Problem #11 in this table.</p>
8. Regulator operates by the local control switch but not by Remote control	The rotary switch on the input module not set to REM	Set the rotary switch to REM.
	Blown fuse	Check fuse F5.
	Loose or broken Remote control wires	Check connections on Remote terminal block TB1. If 120 Vac Remote control signals are used, use an AC voltmeter (300 Vac scale) to verify correct signals are received at the CCR.
	Incorrect wire connections	Refer to Table 11 through Table 13 .
9. Ammeter on CCR oscillates and loud noise occurs	SCR drive not working properly	Check connections at SCR module. Replace URC PCB. Refer to Problem #11 in this table.
10. Output current not able to be adjusted up to 6.6 A/20 A	Regulator load too large	<p>Either reduce the load or replace the regulator with a larger kW CCR. When overloaded, the regulator may make a faint bouncing sound as the controller bounces against the upper control limits.</p> <div>  Note <p>This problem can also be verified by shorting the output of the CCR and verifying output current can be adjusted correctly in each step.</p> </div>
11. 5-Step regulator (in Steps 1 or 2) emitting loud hum, not indicating proper current, and operating erratically	Light inductive load (for example, signs)	<p>Increase load on regulator. If you cannot increase the load, verify that you are dealing with the right problem by placing a current clamp on the output of the regulator and measuring the frequency of the output. Investigate to see if the problem occurs in Highest Step</p>

5.3 Additional L-829 General Troubleshooting Procedures

For additional L-829 CCR general troubleshooting procedures, refer to the *Troubleshooting* section in manuals:


- 96A0287, Advanced Control Equipment (ACE™) or
- 96A0357, Advanced Control Equipment (ACE2™) or
- 96A0500, Advanced Control Equipment (ACE3™).

5.4 Component Replacement Procedures

5.4.1 Removing and Replacing URC PCB

1. Turn CCR local switch to the OFF position.

Figure 29: URC PCB

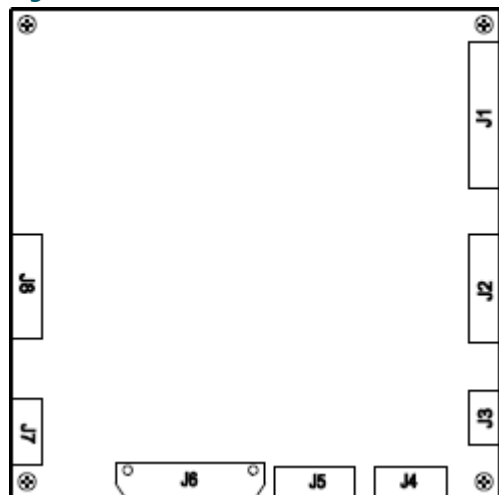


2. Remove and lock out/tag out primary power to the CCR at the breaker panel.
3. Lock out/tag out the SCO in the maintenance position.
4. Loosen the door latch screws and open the CCR door.
5. Unplug green connectors J8, J1, J2, J3, J4, and J5 from the PCB.
6. Disconnect the ribbon cable from J6 by pressing out on the tabs at both sides of the ribbon connection and pull the cable away from the board.
7. Remove the 4 screws at the 4 corners of the PCB.
Remove the ground wire from the top right corner. Remove and label the ground wire from the top left corner of the PCB.
8. Mount the new PCB by replacing the 4 screws at the corners of the PCB including the ground wire on the top right corner.
9. Plug the ribbon cable back into J6 by pressing it in.
It is keyed and will only go in one way.
Also verify the tabs on the side have locked into place.
10. Plug in all of the green connectors to the board.
J8, J1, J2, J3, J4, and J5.
11. Close the CCR door and loosen the door latch screws.
12. Restore the SCO to the ON position.
13. Restore primary power to the CCR at the breaker panel.
14. Turn the CCR local switch to the REM position.

5.4.2 Removing and Replacing Dual SCR Module Assembly

See Internal Wiring Schematic, 43A2522.dwg in [Wiring Schematics](#).

Figure 30: Dual SCR Module Assembly

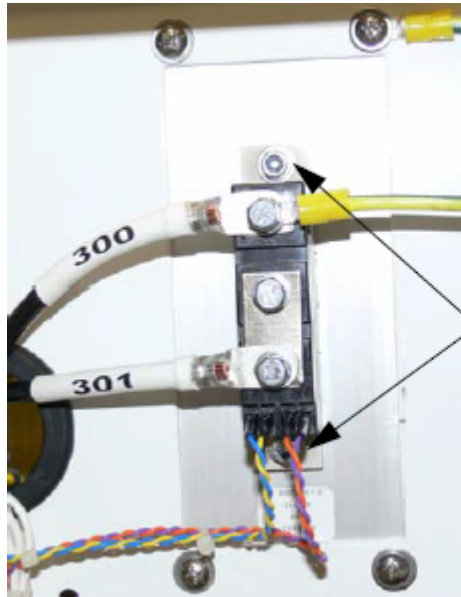


#10 Split Lock Washer (2 or 4 each)
and
1/4-20 X 1/2 Hex Head Screw (2 or 4 each)

1. Turn CCR local switch to the OFF position.
2. Remove and lock out/tag out primary power to the CCR at the breaker panel.
3. Lock out/tag out the SCO in the maintenance position.
4. Open the CCR front door by loosening the 3 door screws.
5. Remove wire 300 and the ground wire from the top lug of the SCR using a 11/16-inch socket.
*note: There are different versions of this SCR so hardware may vary.
6. Remove wire 301 from the bottom lug of the SCR using a 11/16-inch socket.
7. Pull the 4 colored gate wires from the bottom of the SCR.
8. Remove the SCR from the regulator by removing the (2) 5/32-hex mounting screws.
Clean the heat-sink surface with a dry rag.
9. The replacement SCR will arrive mounted to a rectangular metal plate.
10. Remove the SCR from the attached plate by removing the (2) 5/32-hex mounting screws from the new SCR and the mounting it to the existing plate in the front of the regulator.
Place a thin layer of thermal paste on the heat-sink prior to attaching the SCR.
11. Once the SCR is mounted in the CCR, connect wire 300 and the ground wire to the top lug of the SCR.
12. Connect wire 301 to the bottom lug of the SCR.
13. Connect the colored gate wires according to the documentation supplied with the replacement SCR.
Different versions of the SCR require these gate wires to be connected in a different order, refer to the documentation shipped with the replacement SCR.
14. Close all doors and replace all panels.
15. Restore the SCO to the ON position.
16. Restore primary power to the CCR at the breaker panel.
17. Turn the CCR local switch to the REM position.

5.4.3 Removing and Replacing Contactor

1. Turn CCR local switch to the OFF position.

Figure 31: CCR Power Contactor

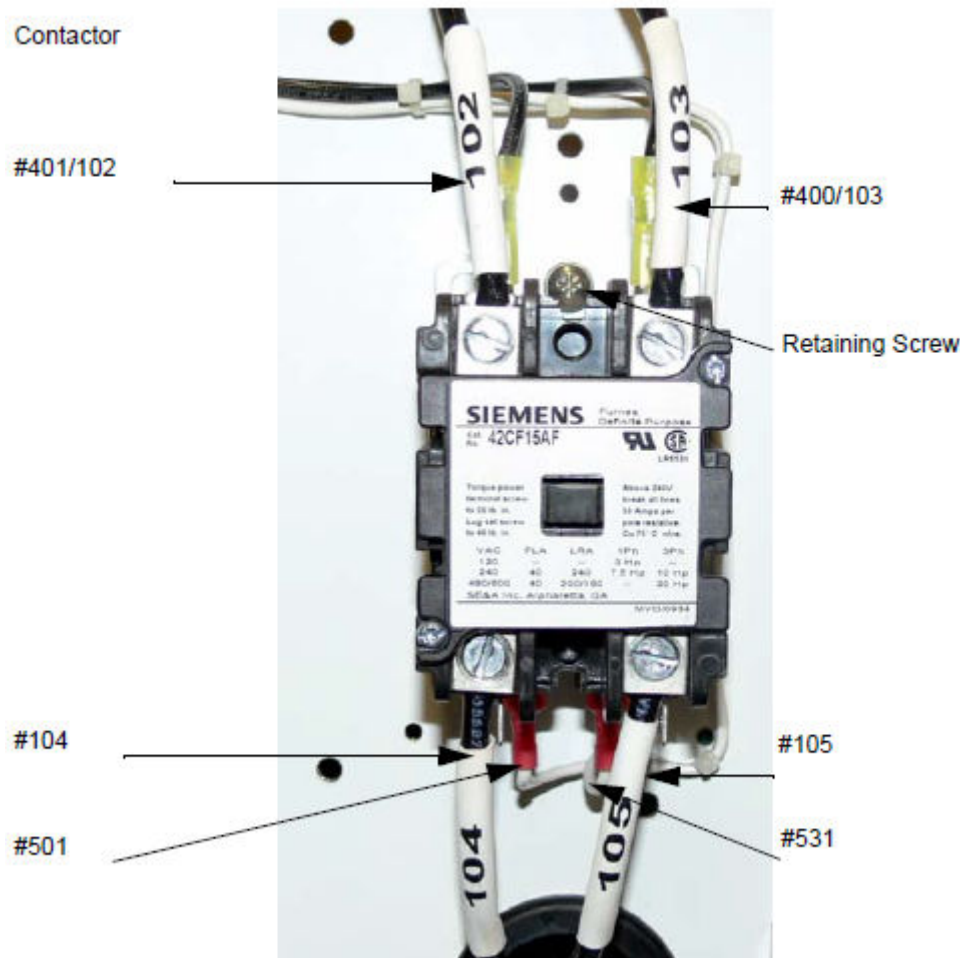

2. Label the wires.
3. Remove and lock out/tag out primary power to the CCR at the breaker panel.
4. Lock out/tag out the SCO in the maintenance position.
5. Open the CCR front door by loosening the 3 door screws.
6. Loosen the wire retaining lugs for 102, 103, 104 and 105 and disconnect.
See Internal Wiring Schematic, 43A2522.dwg in [Wiring Schematics](#).
7. Label any wires not labeled prior to disconnecting them.
8. Remove wires 400 and 401 from the top connectors of the contactor.
9. Remove the wires 531 and 501 from the contactor coil connections at the bottom of the contactor.
10. Remove the 3 mounting screws until the contactor is free.
11. Replace the contactor.
Tighten the contactor retaining screws on the contactor plate.
12. Connect wires 531 and 501 to the contactor coil connections at the bottom of the contactor.
13. Connect wires 400 and 401 to the top connectors of the contactor.
14. Connect the wires for 102, 103, 104 and 105 and tighten retaining lugs.

15. Close the CCR front door by tightening the 3 door screws.
16. Restore the SCO to the ON position.
17. Restore primary power to the CCR at the breaker panel.
18. Turn the CCR local switch to the REM position.

5.4.4 Removing and Replacing Input Lightning Arrestors (front of Component Mounting Plate)

1. Turn CCR local switch to the OFF position.
2. Remove and lock out/tag out primary power to the CCR at the breaker panel.
3. Lock out/tag out the SCO in the maintenance position.
4. Open the CCR front door by loosening the 3 door screws.
5. Loosen the wire retaining screws for 100, 402, 101, 403, 802 and 803 and disconnect.
See Internal Wiring Schematic, 43A2522.dwg in [Wiring Schematics](#).
6. Remove the top two of (4) #10 x 32 pan-head screws and loosen the bottom two screws until the arrestors are free.
7. Replace the Input Lightning Arrestor assembly.
Replace the two top screws on the assembly plate and tighten all four until the arrestors are secure.
8. Connect the wires for 100, 402, 101, 403, 802 and 803 and tighten retaining screws.
9. Close the CCR front door by tightening the 3 door screws.
10. Restore the SCO to the ON position.
11. Restore primary power to the CCR at the breaker panel.
12. Turn the CCR local switch to the REM position.

5.4.5 Removing and Replacing Output Lightning Arrestors (front of Component Mounting Plate)

1. Turn CCR local switch to the OFF position.
2. Remove and lock out/tag out primary power to the CCR at the breaker panel.
3. Lock out/tag out the SCO in the maintenance position.
4. Remove the side panel of the CCR, by removing the 8 mounting screws.
Be careful as you will also need to disconnect the ground wire attached from the frame to the panel.

Figure 32: Output Lightning Arrestors



-
5. Loosen the 11/16-inch wire retaining nuts for 200, 201, 203, ST1, ST2 and 202 and disconnect.
 6. Remove the (4) #10 x 32 pan-head screws and retain until later.
 7. Replace the Input Lightning Arrestor assembly.
Replace and tighten the screws on the assembly plate.
 8. Connect the wires for 200, 201, 203, ST1, ST2 and 202 and tighten retaining nuts.
 9. Connect the ground wire from the frame to the side panel.
 10. Put the side panel back on the CCR with the 8 screws.
 11. Restore the SCO to the ON position.
 12. Restore primary power to the CCR at the breaker panel.
 13. Turn the CCR local switch to the REM position.

6.0 CHF Parts and Mechanical Drawings

Ordering Code

CHF

Amperage

20 = 20 A Output

Size

50 = 50 kW

70 = 70 kW

Output Range

5 = 5-step without Series Cutout

6 = 5-step with Series Cutout

Input Voltage


3 = 480 VAC, 60 Hz

Monitoring Options

00 = None (Standard L-828)¹

33 = L-829 Monitor (ACE3)²

53 = L-829 Monitor (ACE3) with IRMS³

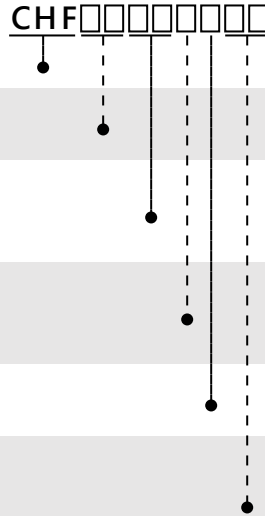

Application Notes

¹ L-828 with Analog Current Meter on door. Remote Control through multi-wire connection to terminal block in CCR. No monitoring.

² L-829 Monitoring with RELIANCE Power ACE3 Advanced Control Equipment. Remote control from ACE3 to ADB Safegate ALCMS through ethernet or serial communication cable. Multi-wire connection to terminal block in CCR also available.

³ Includes Monitoring Option 33 and Insulation Resistance Measurement System (IRMS).

Figure 33: CHF 4 kW CHF6604-XXXX


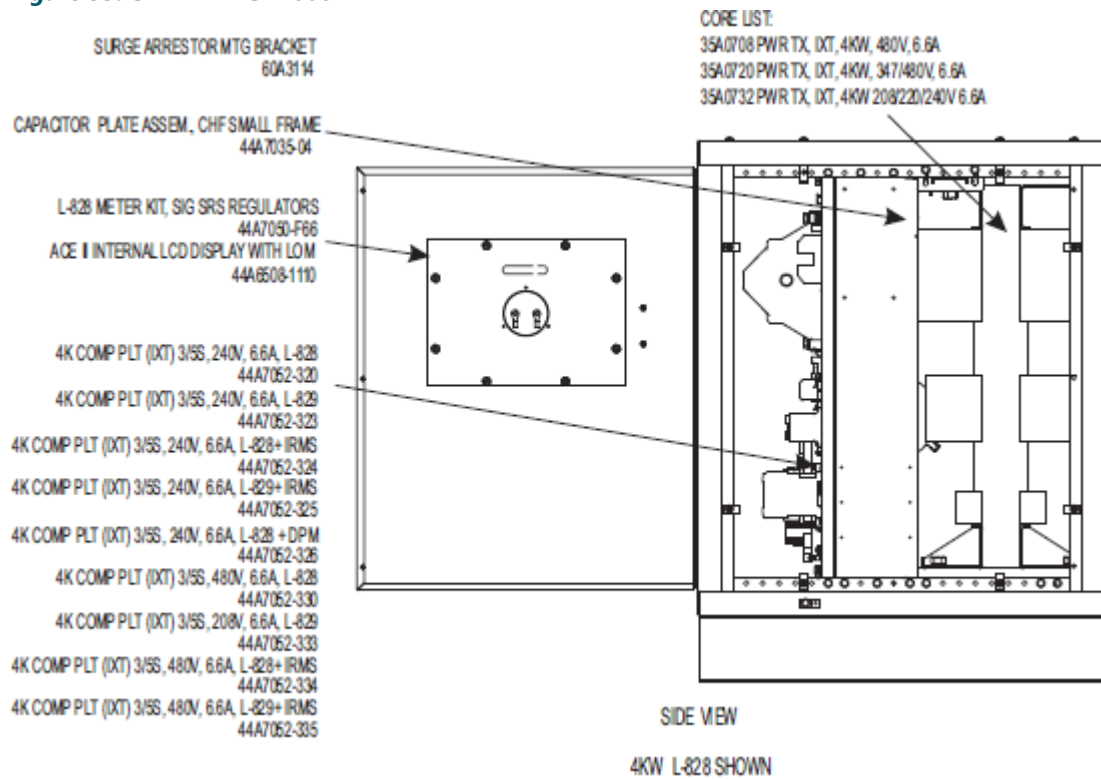



Figure 34: CHF 4KW Component Plate Parts

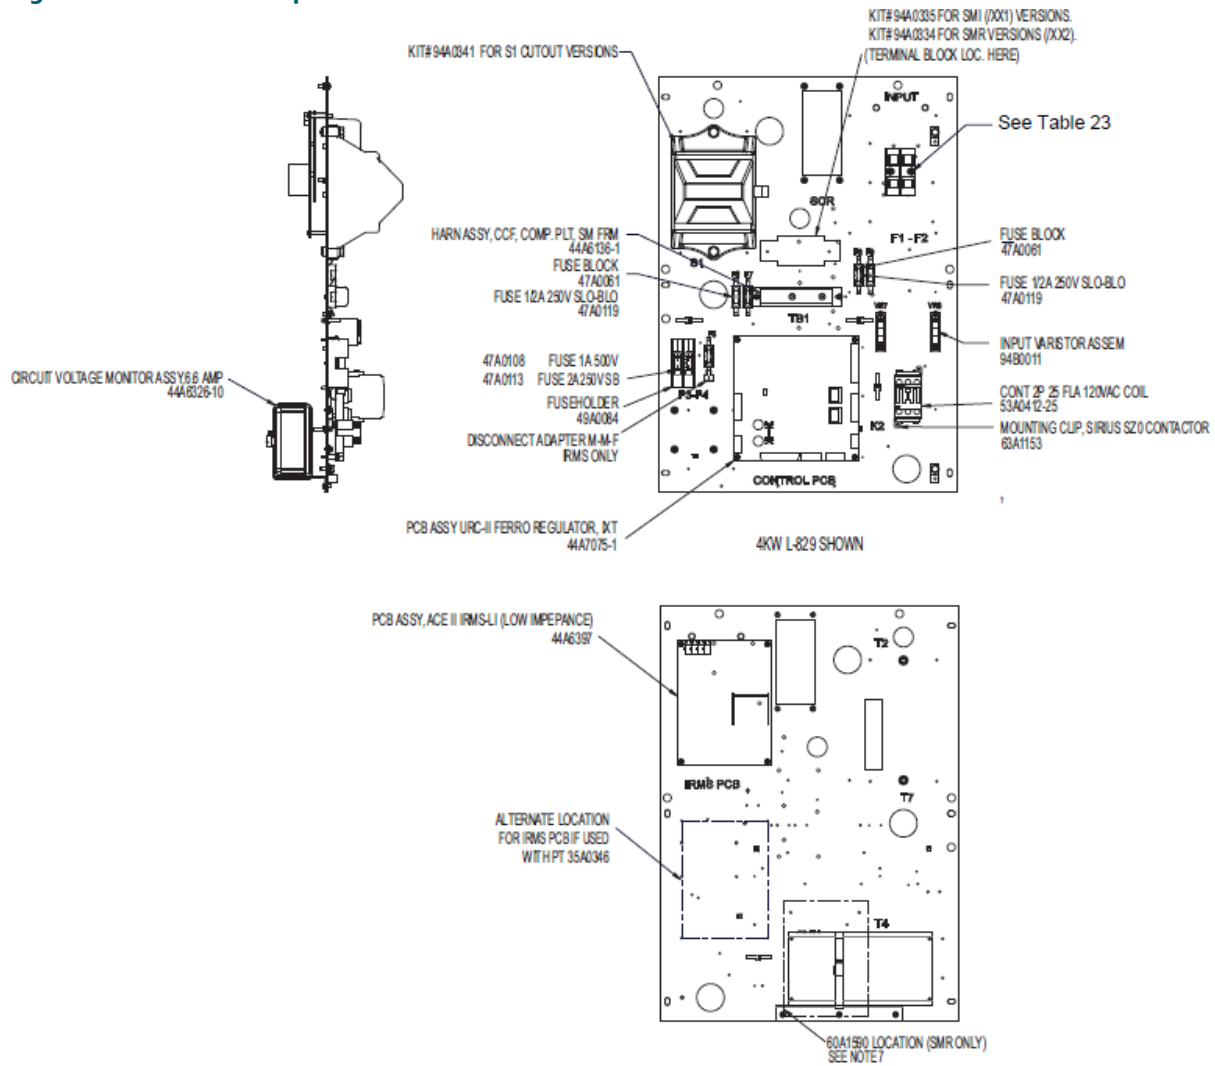

See ALN174 to replace the F1 and F2 fuse block with a circuit breaker.

RIBBON CABLE ASSY,34-POS WICONNS,24"
BA020924

Figure 36: CHF 7-10-15 kW CHF6615-XXXX

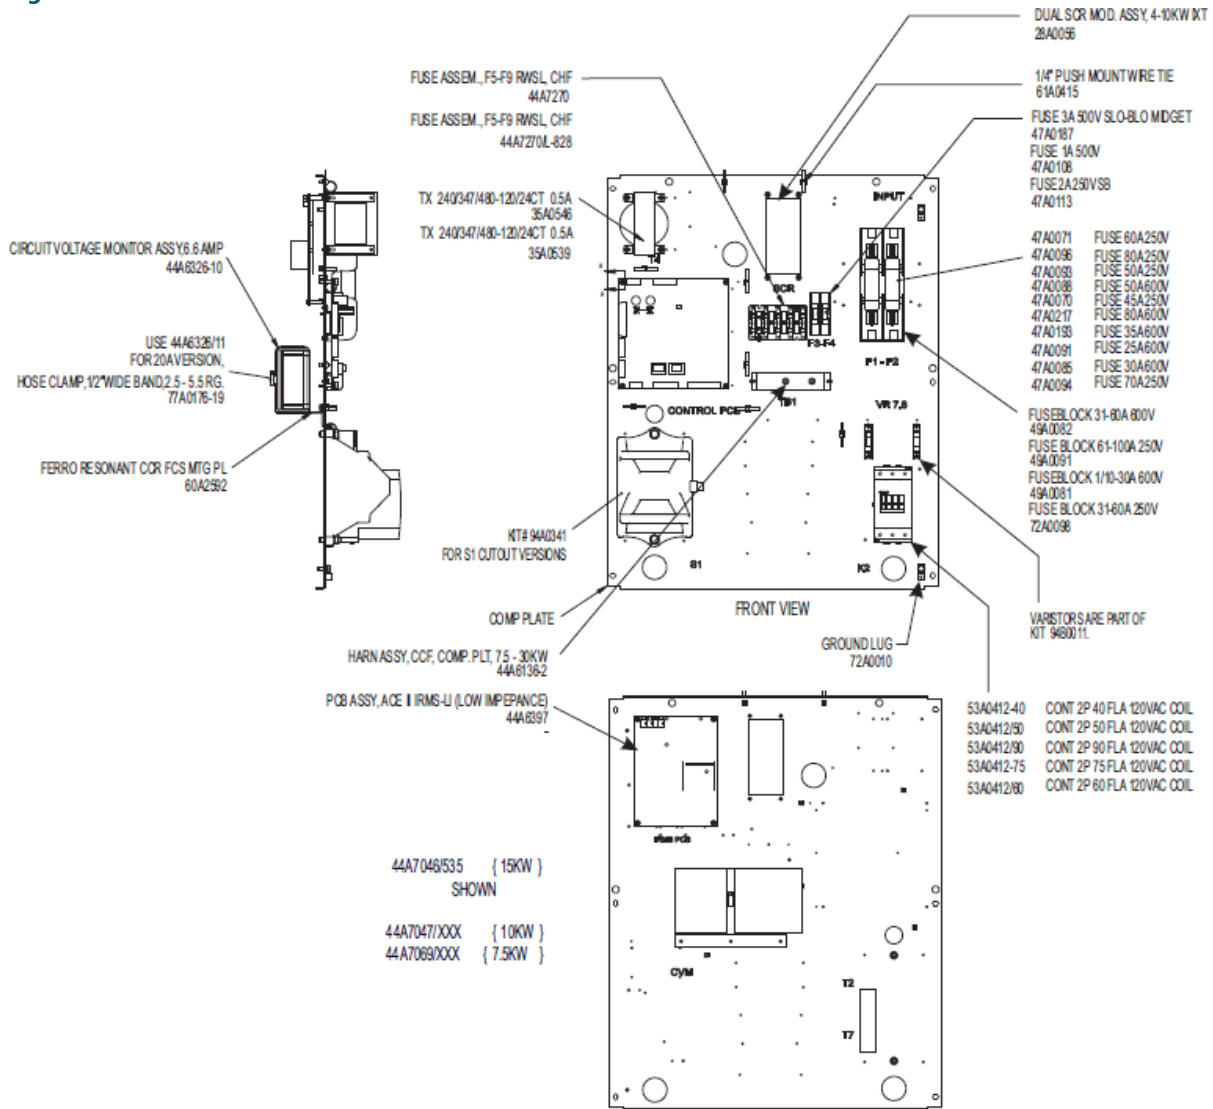



Note

See ALN174 to replace the F1 and F2 fuse block with a circuit breaker.

Figure 37: CHF 20-30 kW CHF6630-XXXX


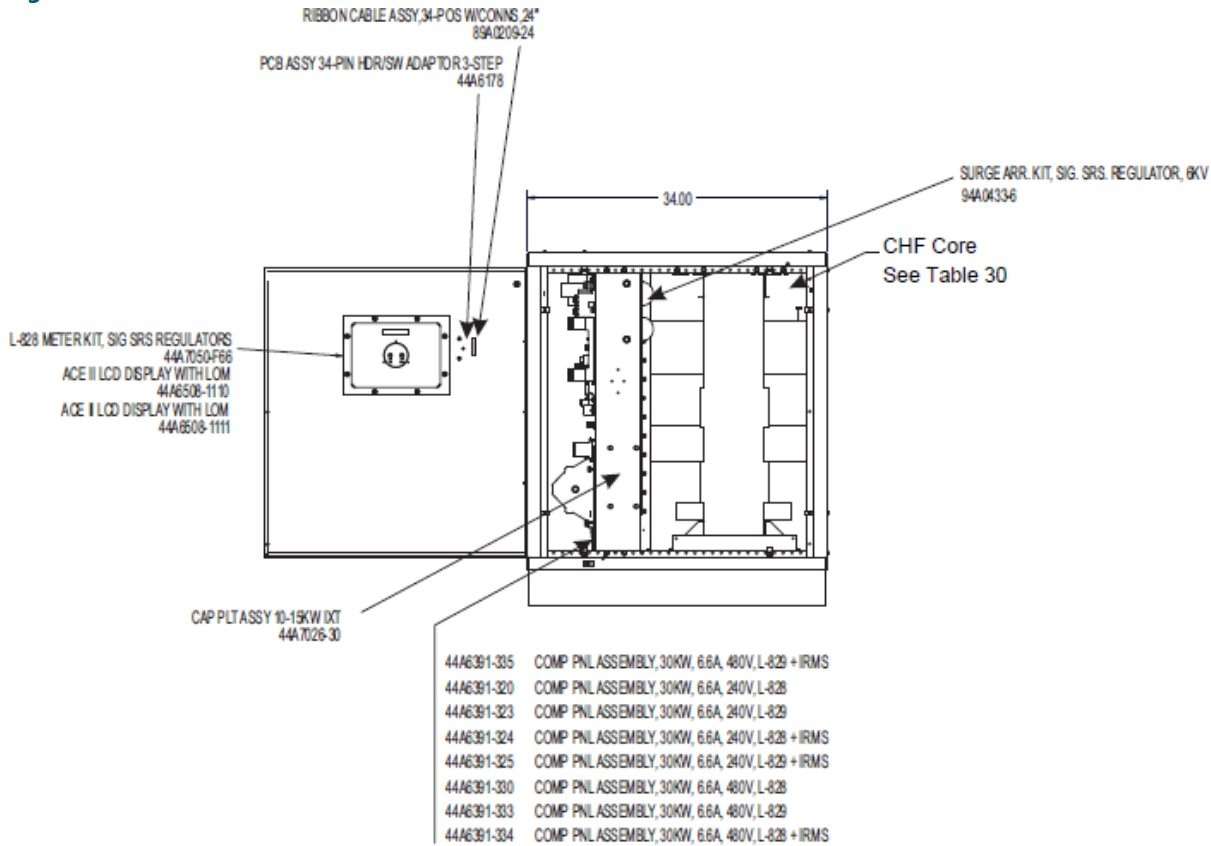


Figure 38: CHF 20-30 kW Component Plate Assembly

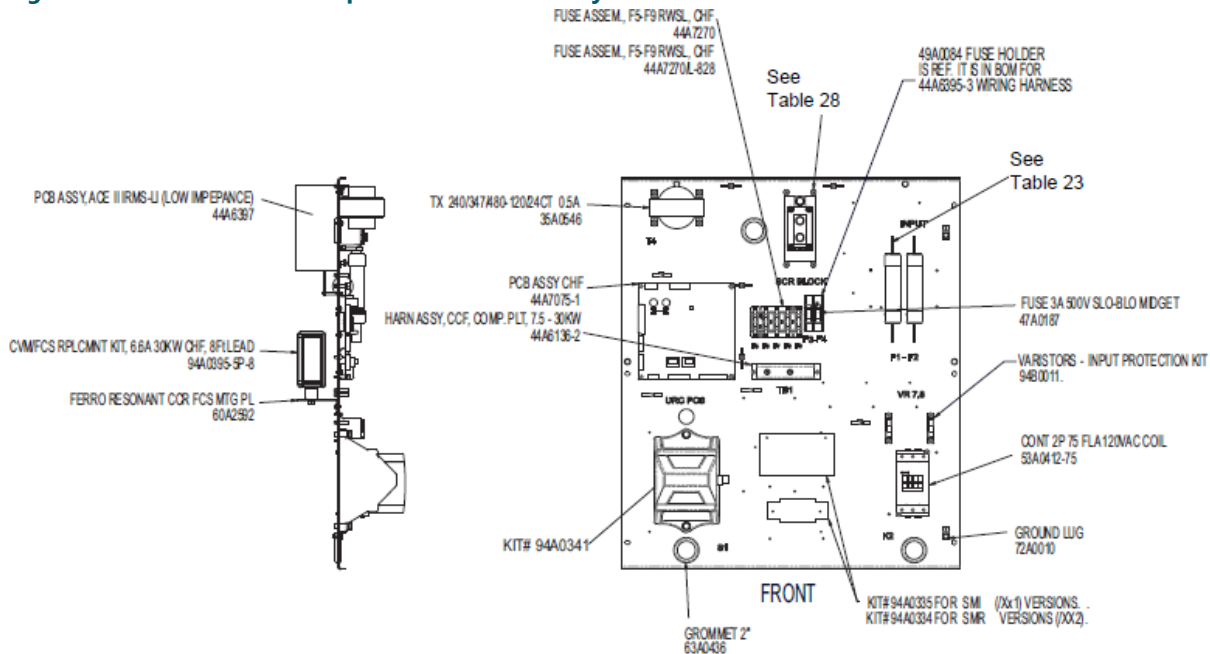

6.1 Spare Parts

This subsection provides information for fuses and other components.

Amp rating as a function of input voltage and CCR kW rating for input power fuses F1 and F2 on the L-828 and L-829 CCRs.
Input Power Fuses, F1 and F2, per CCR Input Voltage and CCR kW Rating

Table 21: L-828/L-829 Input Power Fuses F1 and F2.

CHF/XXXX INPUT FUSES (F1, F2)					
SIZE	208 V	220 V	240 V	347 V	480 V
4kW	47A0092	47A0069	47A0069	47A0191	47A0090
7.5kW	47A0093	47A0093	47A0070	47A0193	47A0091
10kW	47A0094	47A0071	47A0071	47A0088	47A0085
15kW	47A0099	47A0096	47A0096	47A0217	47A0088
20kW	47A0072	47A0072	47A0099	47A0097	47A0087
30kW	47A0102	47A0101	47A0101	47A0106	47A0097
50kW	N/A	N/A	N/A	N/A	47A0106
70kW	N/A	N/A	N/A	N/A	47A0141
47A0069	Fuse 25A 250V Time Delay				
47A0070	Fuse 45A 250V				
47A0071	Fuse 60A 250V				
47A0072	Fuse 125A 250V				
47A0085	Fuse 30A 600V				
47A0087	Fuse 60A 600V				
47A0088	Fuse 50A 600V				
47A0090	Fuse 12A 600V				
47A0091	Fuse 25A 600V				
47A0092	Fuse 30A 250V				
47A0093	Fuse 50A 250V				
47A0094	Fuse 70A 250V				
47A0096	Fuse 80A 250V				
47A0097	Fuse 90A 600V				
47A0099	Fuse 110A 250V				
47A0101	Fuse 175A 250V				
47A0102	Fuse 200A 250V				
47A0106	Fuse 125A 600V				
47A0120	Fuse 2400V				
47A0141	Fuse 200A 600V				

Table 22: Input Fuse Blocks

CHF/XXXX INPUT FUSE BLOCK (Item 11)					
SIZE	208 V	220 V	240 V	347 V	480 V
4kW	72A0091	72A0091	72A0091	49A0081	49A0081
7.5kW	72A0098	72A0098	72A0098	49A0081	49A0081
10kW	72A0091	72A0098	72A0098	49A0082	49A0081
15kW	72A0091	49A0091	49A0091	49A0085	49A0082
20kW	72A0099	72A0099	72A0099	49A0085	49A0082
30kW	72A0099	72A0099	72A0099	49A0097	49A0085
50kW	N/A	N/A	N/A	N/A	49A0097
70kW	N/A	N/A	N/A	N/A	49A0097
49A0081	Fuse Block, 10-30A, 600V				
49A0082	Fuse Block, 31-60A, 600V				
49A0085	Fuse Block, 61-100A, 600V				
49A0097	Fuse Block, 100-200A, 250V				
72A0091	Fuse Block, 2P, 30A, 250V				
72A0098	Fuse Block, 31-60A, 250V				
72A0099	Fuse Block, 100-200A, 250V				

Fuses F3 and F4 on the L-828/L-829 CCRs protect transformer T4, which supplies 110 Vac and 24 Vac to the universal regulator control card. Transformer T3 Fuses F3 and F4 Ratings

Table 23: L-828 / L-829 Step-Down T4 Transformer Fuses F3 and F4

CHF /XXXX T4 Fuses (F3, F4)					
SIZE	208 V	220 V	240 V	347 V	480 V
4kW	47A0113	47A0113	47A0113	47A0113	47A0108
7.5kW	47A0113	47A0113	47A0113	47A0113	47A0108
10kW	47A0113	47A0113	47A0113	47A0113	47A0108
15kW	47A0187	47A0187	47A0187	47A0187	47A0187
20kW	47A0187	47A0187	47A0187	47A0187	47A0187
30kW	47A0187	47A0187	47A0187	47A0187	47A0187
50kW	N/A	N/A	N/A	N/A	47A0187
70kW	N/A	N/A	N/A	N/A	47A0187
47A0108	Fuse 1A 500V				
47A0113	Fuse 2A 250V				
47A0187	Fuse 3A 500V				
49A0084	Fuse Holder (double) (4, 20 - 30 kW)				

Universal regulator power supply transformer fuse F5 protects the remote control circuitry on the URC. Fuse F6 protects the 120 Vac power supply to the ACE. Fuses F5 and F6 Ratings

Table 24: L-829 Power Supply Transformer Fuse F5 and ACE Power Supply Fuse F6

CHF/XXXX ACE Fuses F5, F6	
47A0119	Fuse .5A 250V
47A0061	Fuse Block (single)

Table 25: Current Transformer T2

CHF/XXXX Current Transformer T2		
SIZE	6.6 A	20 A
4kW	35A0263	N/A
7.5kW	35A0263	N/A
10kW	35A0263	N/A
15kW	35A0263	35A0308
20kW	35A0263	35A0308
30kW	35A0263	35A0308
50kW	N/A	35A0308
70kW	N/A	35A0308

35A0263 Current Transformer 6.6/6.6A (Only required if analog current meter used)

35A0308 Current Transformer 20/6.6A (Only required if analog current meter used)

Table 26: CHF CCR Contactors

CHF/XXXX CONTACTORS			
SIZE	208-240 V	347 V	480 V
4kW	53A0412/25	53A0412/25	53A0412/25
7.5kW	53A0412/50	53A0412/40	53A0412/40
10kW	53A0412/60	53A0412/50	53A0412/40
15kW	53A0412/90	53A0412/75	53A0412/40
20kW	53A0412/120	53A0412/90	53A0412/50
30kW	53A0331	53A0412/150	53A0412/75
50kW	N/A	N/A	53A0412/150
70kW	N/A	N/A	53A0331

53A0331	Contactors 3P 200A 170A 120VAC Coil
53A0412/150	Contactors 2P 150 FLA
53A0412/25	Contactors 2P 25 FLA
53A0412/40	Contactors 2P 40 FLA
53A0412/50	Contactors 2P 50 FLA
53A0412/60	Contactors 2P 60 FLA
53A0412/75	Contactors 2P 75 FLA
53A0412/90	Contactors 2P 90 FLA
53A0431	Contactors 2P 160A 1501-3600V

Table 27: Dual SCR Blocks

CHF/XXXX Dual SCR Block (SCR)					
SIZE	208 V	220 V	240 V	347 V	480 V
7.5kW	28A0056	28A0056	28A0056	28A0056	28A0056
10kW	28A0056	28A0056	28A0056	28A0056	28A0056
15kW	28A0057	28A0057	28A0057	28A0057	28A0057
20kW	28A0055	28A0055	28A0055	28A0055	28A0055
4kW	28A0056	28A0056	28A0056	28A0056	28A0056
30kW	28A0054	28A0054	28A0054	28A0054	28A0054
50kW	N/A	N/A	N/A	N/A	28A0037
70kW	N/A	N/A	N/A	N/A	28A0037
28A0037	Dual SCR Module (50, 70 kW)				
28A0054	Dual SCR Module (30 kW)				
28A0055	Dual SCR Module (20 kW)				
28A0056	Dual SCR Module (4, 7.5, 10 kW)				

Table 28: Power Transformer T1

CHF/XXXX Power Transformer T1 (Core)										
SIZE	208 V 6.6A	208 V 20A	220 V 6.6A	220 V 20A	240 V 6.6A	240 V 20A	347 V 6.6A	347 V 20A	480 V 6.6A	480 V 20A
4kW	35A07 32		35A07 32		35A07 32		35A07 20		35A07 08	
7.5kW	35A07 31		35A07 31		35A07 31		35A07 19		35A07 07	
10kW	35A07 30	35A07 36	35A07 30	35A07 36	35A07 30	35A07 36	35A07 18	35A07 24	35A07 06	35A071 2
15kW	35A07 29	35A07 35	35A07 29	35A07 35	35A07 29	35A07 35	35A07 17	35A07 23	35A07 05	35A071 1
20kW	35A07 28	35A07 34	35A07 28	35A07 34	35A07 28	35A07 34	35A07 16	35A07 22	35A07 04	35A071 0
30kW	35A07 27	35A07 33	35A07 27	35A07 33	35A07 27	35A07 33	35A07 15	35A07 21	35A07 03	35A070 9
50kW	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	35A060 5
70kW	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	35A060 4

Table 29: Power Core List

Power Core List	
35A0604	70kW High Efficiency Power Transformer, 480V, 20A
35A0605	50kW High Efficiency Power Transformer, 480V, 20A
35A0703	30kW High Efficiency Power Transformer, 480V, 6.6A
35A0704	20kW High Efficiency Power Transformer, 480V, 6.6A
35A0705	15kW High Efficiency Power Transformer, 480V, 6.6A

Table 29: Power Core List (Continued)

Power Core List	
35A0706	10kW High Efficiency Power Transformer, 480V, 6.6A
35A0707	7.5kW High Efficiency Power Transformer, 480V, 6.6A
35A0708	4kW High Efficiency Power Transformer, 480V, 6.6A
35A0709	30kW High Efficiency Power Transformer, 480V, 20A
35A0710	20kW High Efficiency Power Transformer, 480V, 20A
35A0711	15kW High Efficiency Power Transformer, 480V, 20A
35A0712	10kW High Efficiency Power Transformer, 480V, 20A
35A0715	30kW High Efficiency Power Transformer, 480/347V, 6.6A
35A0716	20kW High Efficiency Power Transformer, 480/347V, 6.6A
35A0717	15kW High Efficiency Power Transformer, 480/347V, 6.6A
35A0718	10kW High Efficiency Power Transformer, 480/347V, 6.6A
35A0719	7.5kW High Efficiency Power Transformer, 480/347V, 6.6A
35A0720	4kW High Efficiency Power Transformer, 480/347V, 6.6A
35A0721	30kW High Efficiency Power Transformer, 480/347V, 20A
35A0722	20kW High Efficiency Power Transformer, 480/347V, 20A
35A0723	15kW High Efficiency Power Transformer, 480/347V, 20A
35A0724	10kW High Efficiency Power Transformer, 480/347V, 20A
35A0727	30kW High Efficiency Power Transformer, 208/220/240V, 6.6A
35A0728	20kW High Efficiency Power Transformer, 208/220/240V, 6.6A
35A0729	15kW High Efficiency Power Transformer, 208/220/240V, 6.6A
35A0730	10kW High Efficiency Power Transformer, 208/220/240V, 6.6A
35A0731	7.5kW High Efficiency Power Transformer, 208/220/240V, 6.6A
35A0732	4kW High Efficiency Power Transformer, 208/220/240V, 6.6A
35A0733	30kW High Efficiency Power Transformer, 208/220/240V, 20A
35A0734	20kW High Efficiency Power Transformer, 208/220/240V, 20A
35A0735	15kW High Efficiency Power Transformer, 208/220/240V, 20A
35A0736	10kW High Efficiency Power Transformer, 208/220/240V, 20A

Table 30: Input Lightning Arrestor VR7, VR8

CHF/XXXX Input Lightning Arrestor VR7, VR8	
32A0028	Input Power Lightning Assestor (All sizes and input voltages)
	(Kit used is 94B0011)

Table 31: Output Lightning Arrestor

CHF/XXXX Output Lightning Arrestor VR2, VR3, VR4, VR5										
SIZE	208 V 6.6A	208 V 20A	220 V 6.6A	220 V 20A	240 V 6.6A	240 V 20A	347 V 6.6A	347 V 20A	480 V 6.6A	480 V 20A
4kW	32A01 15	N/A	32A01 15	N/A	32A01 15	N/A	32A01 15	N/A	32A01 15	
7.5kW	32A01 15	N/A	32A01 15	N/A	32A01 15	N/A	32A01 15	N/A	32A01 15	
10kW	32A01 15	N/A	32A01 15	N/A	32A01 15	N/A	32A01 15	N/A	32A01 15	
15kW	32A01 14	32A01 15	32A01 14	32A01 15	32A01 14	32A01 15	32A01 14	32A01 15	32A01 14	32A01 15
20kW	32A01 14	32A01 15	32A01 14	32A01 15	32A01 14	32A01 15	32A01 14	32A01 15	32A01 14	32A01 15
30kW	32A01 14	32A01 14	32A01 14	32A01 14	32A01 14	32A01 14	32A01 14	32A01 14	32A01 14	32A01 14
50kW	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	32A01 14
70kW	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	32A01 14
32A01 14	Surge Arrestor 6kV									
32A01 15	Surge Arrestor 6kV									

Table 32: T5 Current Sensing Transformer

CHF/XXXX Current Sensing Transformer (T5)		
SIZE		
6.6A	35A0548	Transformer, Current Sensing, 6.6A to 66mA
20A	35A0528	Transformer, Current Sensing, 20A to 66mA

Table 33: T4 Power Transformer

CHF/XXXX Power Transformer (T4)	
35A0539	240/347/480 V to 120/24 V .5A (4, 7.5, 10 kW)
35A0546	240/347/480 V to 120/24 V .5A (15, 20, 30, 50, 70 kW)

Table 34: CHF/XXXX Other parts

CHF/XXXX Other parts	
44A7075/1	URC PC Assembly
44A6397	IRMS-LI Board (Option)
44A6178	Rotary Switch (3 Step)
44A6178/5	Rotary Switch (5 Step)
1475.92.030	SCO Series Circuit Cutout (Option)

Table 35: Current / Voltage Monitor Assembly (CVM)

CHF/XXXX Current / Voltage Monitor Assembly (CVM) (Option)	
44A7772/00	Current / Voltage Monitor Assembly 2 (CVM2) 6.6A 4'
44A7772/01	Current / Voltage Monitor Assembly 2 (CVM2) 20A 4'
44A7772/10	Current / Voltage Monitor Assembly 2 (CVM2) 6.6A 8'
44A7772/1	Current / Voltage Monitor Assembly 2 (CVM2) 20A 8'

Table 36: Ammeters

CHF/XXXX AmmeteX	
52A0099	Analog Ammeter (6.6A)
52A0098	Analog Ammeter (20A)


Note

Refer to ACE Manuals for Optional L-829 Monitoring and Control

Table 37: CCF/XXXX Capacitor Plate

44A6107/1	30kW (6.6A and 20A)
44A6107/2	20kW (6.6A) 208 - 480V
44A6107/2	20kW (20A) 208 - 480V
44A6107/3	15kW (6.6A and 20A) 208 - 480V
44A6108/3	10kW 208 - 480V
44A6108/1	7.5kW 208V
44A6217	4kW 208 - 480V
44A6392/07	7.5kW 220 - 480V
44A6483/09	10kW and 30kW 2400V
44A6483/13	50kW (20A) 480V
44A6483/18	20kW 2400V
44A6483/26	50 kW (20A) and 70kW (20A) 480V

7.0 Wiring Schematics

This section provides wiring schematics for the ADB Safegate L-828/L-829 Ferroresonant constant current regulators (CCRs) (4-70 kW/6.6 A/20 A) with universal regulator controller (URC) cards.

Figure 40: Ferroresonant L828/L829, 4-30kW, 6.6A, Internal Wiring (43A3736, page 1, 2 of 2)


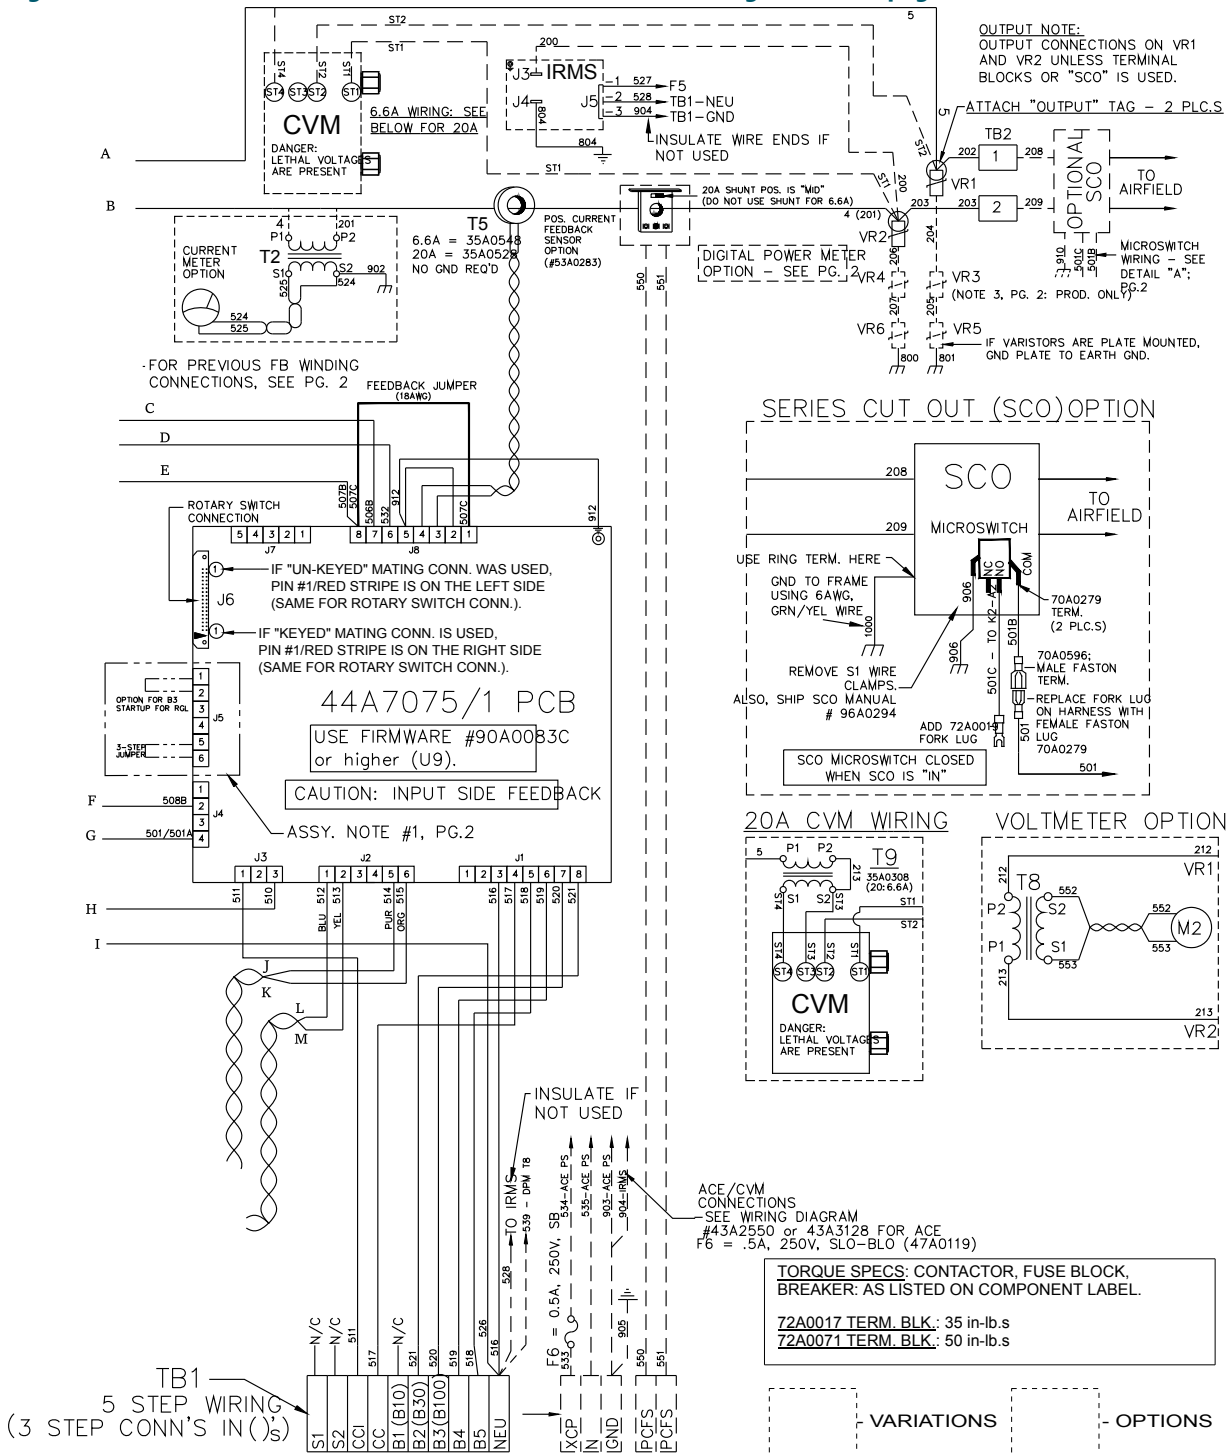


Figure 41: Ferroresonant L828/L829, 4-30kW, 6.6A, Internal Wiring (43A3736, page 2)

PREVIOUS FEED BACK WINDING CONNECTIONS

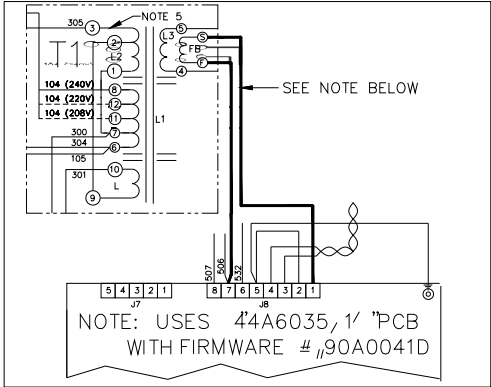


100 SERIES WIRES: PRIMARY POWER, 600V, 105°C

POWER	208 V	220 V	240 V	347V	480 V
4 kW	12 AWG 89A0185/9		12 AWG 89A0185/9	12 AWG 89A0185/9	12 AWG 89A0185/9
7.5 kW	8 AWG 89A0196/9		8 AWG 89A0196/9	8 AWG 89A0196/9	8 AWG 89A0196/9
10 kW	8 AWG 89A0196/9		8 AWG 89A0196/9	8 AWG 89A0196/9	8 AWG 89A0196/9
15 kW	8 AWG 89A0198/9		6 AWG 89A0197/9	6 AWG 89A0197/9	6 AWG 89A0197/9
20 kW	1/0 AWG 89A0201/9		2 AWG 89A0199/9	2 AWG 89A0198/9	6 AWG 89A0197/9
30 kW	1/0 AWG 89A0201/9		2 AWG 89A0199/9	2 AWG 89A0198/9	6 AWG 89A0197/9

300 SERIES WIRES:
TANK LOOP;
600V, 105°C

POWER	ALL
4 kW	10 AWG 89A0195/9
7.5 kW	10 AWG 89A0195/9
10 kW	6 AWG 89A0197/9
15 kW	6 AWG 89A0197/9
20 kW	2 AWG 89A0199/9
30 kW	2 AWG 89A0199/9

DIGITAL POWER METER OPTION

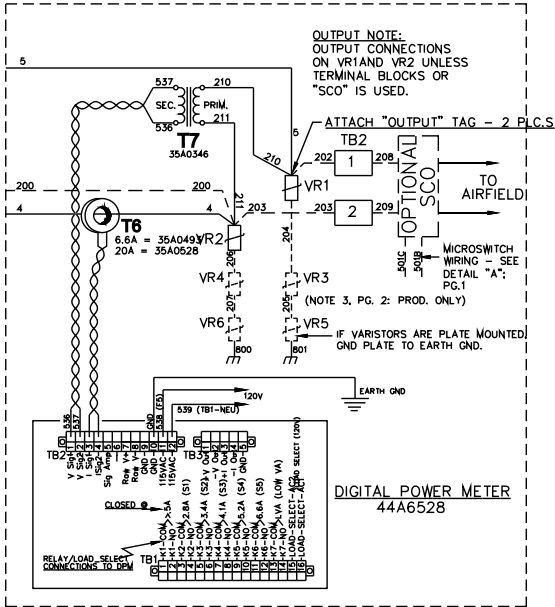

WIRE & ASSEMBLY NOTES:

1. ADD APPROPRIATE JUMPER WHERE REQUIRED (NO JUMPER IS 6.6A, 5-STEP). TIE ALL JUMPERS INTO CABLE HARNESS SO CONNECTOR HAS TO BE PULLED FROM PCB WHEN REPLACING PCB.
2. WIRE SIZES:
 - 100-105: PRIMARY POWER, SEE TABLE.
 - 200-213: HIGH VOLTAGE, 12AWG, 25KV, 150°C, 89A0086/1
 - 300-303: TANK LOOP, SEE TABLE.
 - 400-409: MEDIUM CURRENT, 12AWG, 600V, 105°C, 89A0185/9
 - 500-535: STD CONTROL, 18AWG, 600V, 105°C, 89A0182/9
 - 800-804: GROUND, 12AWG, 600V, GN/YL, 89A163/5
 - 900-912: GROUND, 18AWG, 600V, GN/YL, 89A0163/7
 - 1000: GROUND, 6AWG, 600V, GRN/YLW, 89A0168/5
3. SEE BILL OF MATERIALS FOR NUMBER OF MOV's OR SURGE SUPPRESSORS IN EACH LEG.
4. USE INDIVIDUAL WIRES TO EACH CAPACITOR BANK.
5. IF A JUMPER WIRE IS REQUIRED FOR ANY CORE LEAD, USE HIGH VOLTAGE 89A0086/1 WIRE.
6. GROUNDING NOTES:
 - GND EACH PANEL TO THE FRAME.
 - JUMPER INTERNAL GND LUG TO EXTERNAL GND LUG.
7. USES POWER WIRE KIT # 94A0561/XXXX.
8. ROUTE THESE WIRES SEPARATE FROM ALL OTHER WIRING.
9. ROUTE THESE WIRES SEPARATE FROM CONTROL WIRES.
10. TORQUE ALL CONTACTOR CONNECTIONS PER CONTACTOR PRODUCT LABEL.

SCR PART NO.'S PER CCR KW RATING					
4 KW	7.5 KW	10 KW	15 KW	20 KW	30 KW
28A0056	28A0056	28A0056	28A0057	28A0055	28A0054

CCR INPUT VOLTAGE	INPUT PWR FUSES, F1 & F2, PER CCR INPUT VOLTAGE & CCR KW RATING						TX. T4 FUSES, F3 & F4 RATINGS	
	4 KW	7.5 KW	10 KW	15 KW	20 KW	30 KW	4-10 KW	15-40 KW
208/220V	30A, 250V	50A, 250V	70A, 250V	110A, 250V	125A, 250V	200A, 250V	2A, 250V	NA
240V	25A, 250V	45A, 250V	60A, 250V	80A, 250V	110A, 250V	175A, 250V	2A, 250V	NA
347/480V	12A, 600V	25A, 600V	30A, 600V	50A, 600V	60A, 600V	90A, 600V	1A, 500V	3A, 500V

Figure 42: Ferroresonant L828/L829, 50-70kW - 20A Internal Wiring (43A3736 50-70, 1 of 2)

TOP or BOTTOM VIEW:
K2 PWR WIRE CONNECTIONS
(SIEMENS "SIRIUS" STYLE)

IMPORTANT! KEEP WIRES (100's & 300's) AWAY FROM CORE!

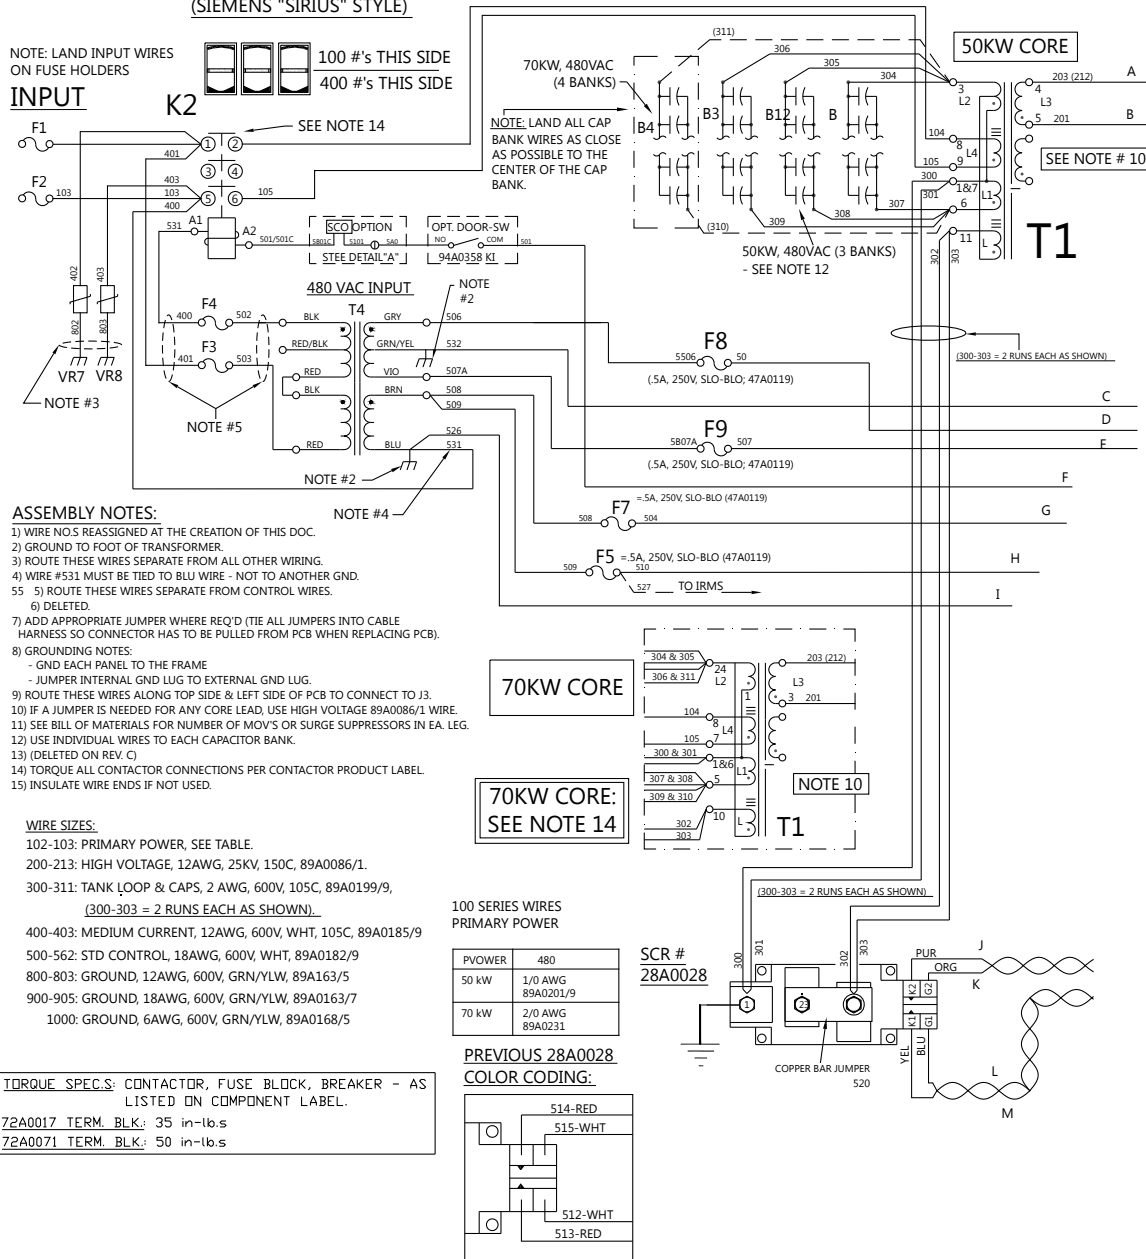


Figure 43: Ferroresonant L828/L829, 50-70kW - 20A Internal Wiring (43A3736 50-70, 2 of 2)

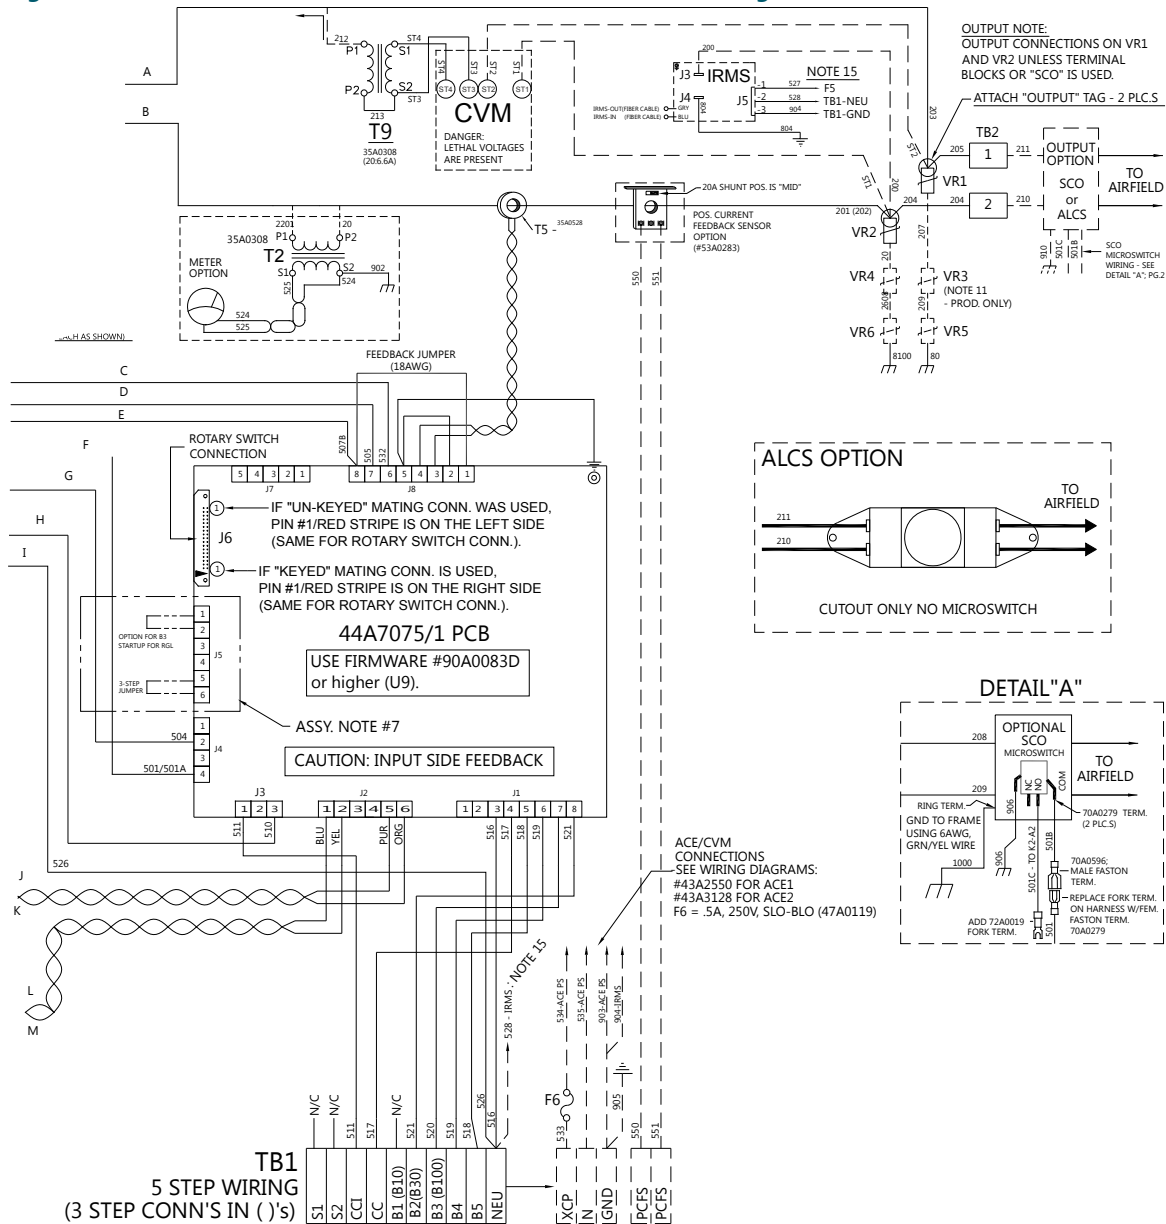
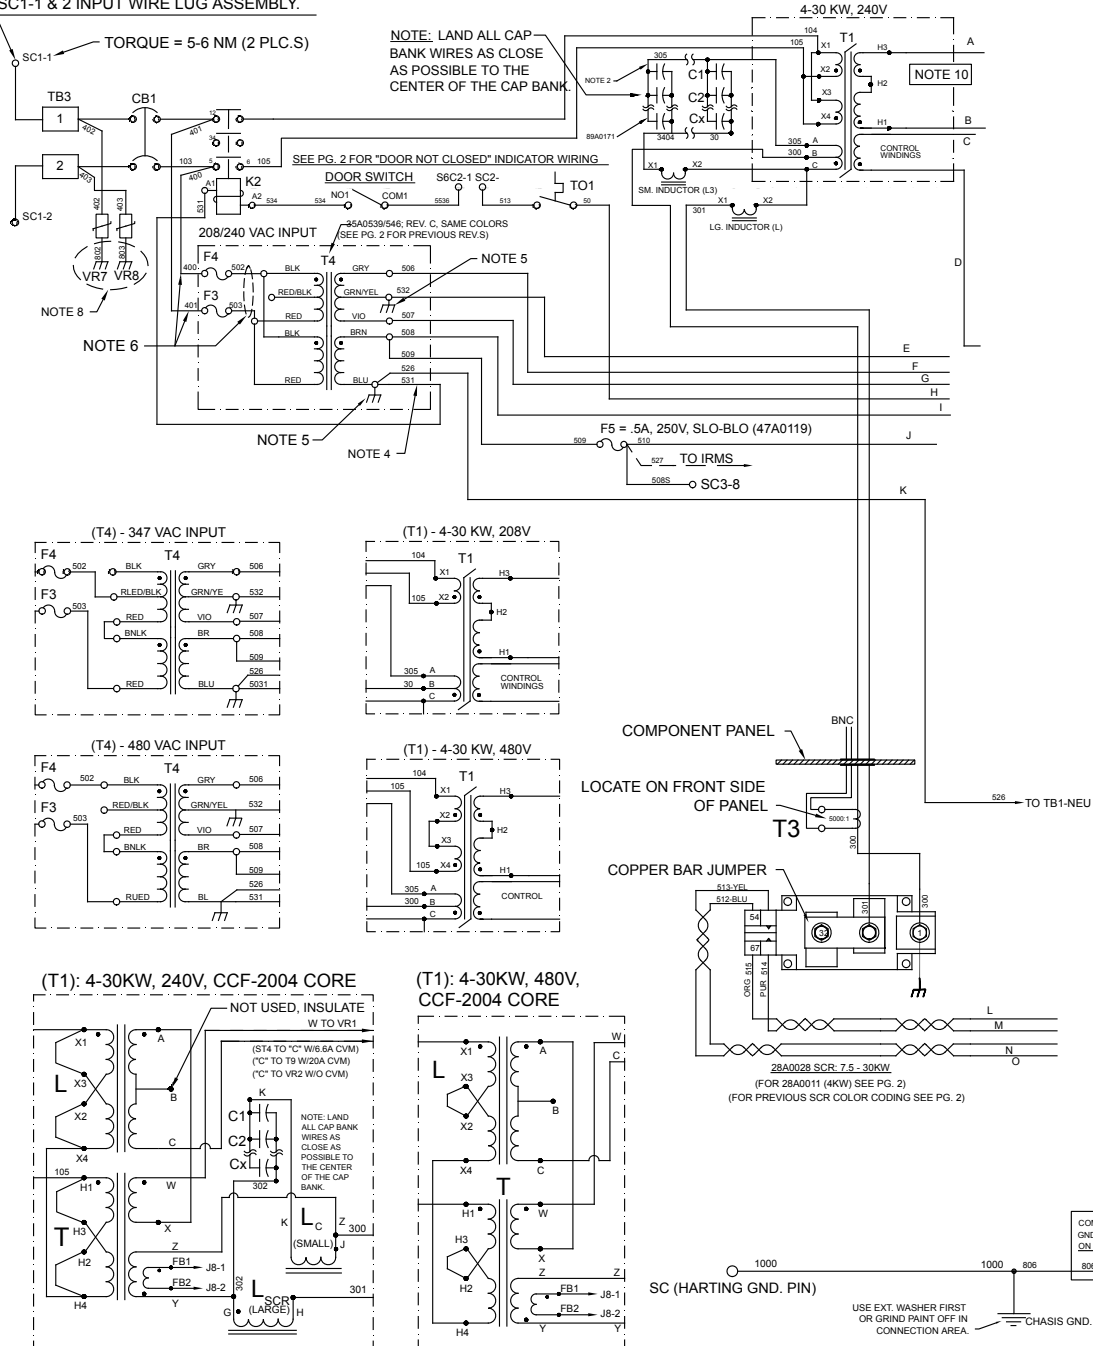


Figure 44: SGRS 5-30kW (43A2616, page 1, 1 of 2)

IMPORTANT! SEE NOTE 12 FOR
SC1-1 & 2 INPUT WIRE LUG ASSEMBLY.






Figure 46: SGRS 5-30kW (43A2616, page 2)


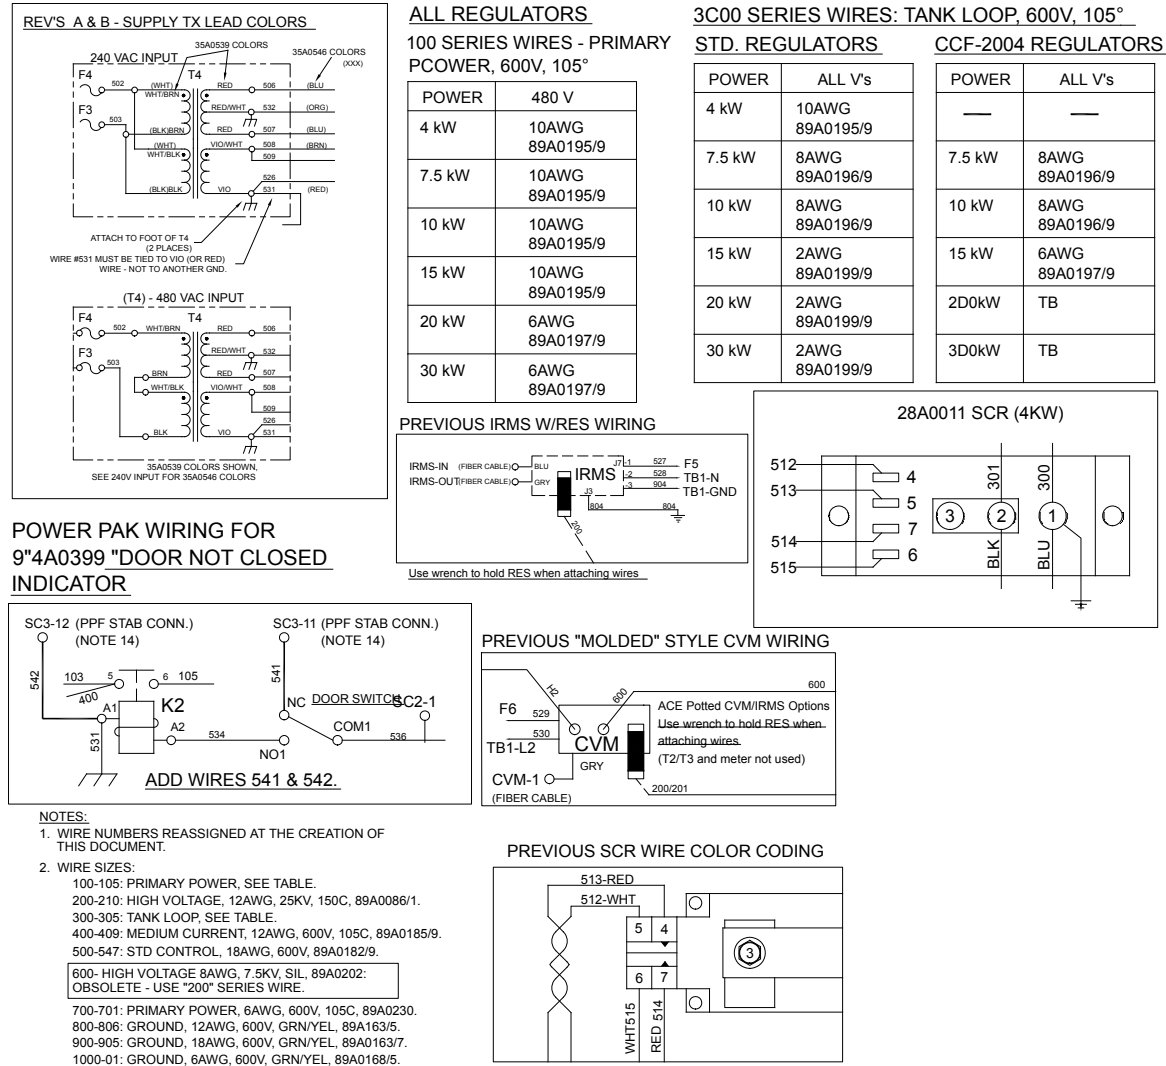


Figure 47: SGRS 50-70kW (43A2616 50-70, page 1, 1 of 2)

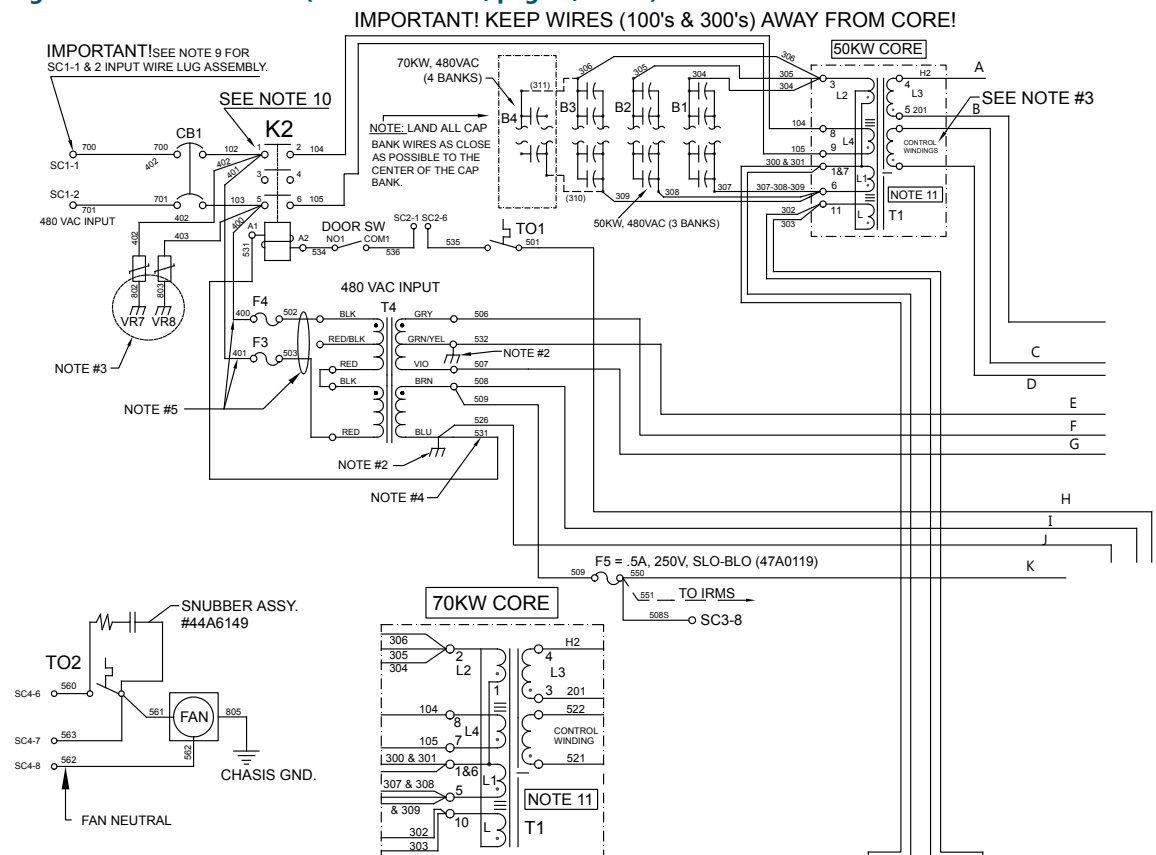

ASSEMBLY NOTES:

- 1) ADD 2 JUMPERS TO J5 AS SHOWN. TIE JUMPERS INTO CABLE HARNESS
SO CONNECTOR HAS TO BE PULLED FROM PCB WHEN REPLACING PCB.
- 2) GROUND TO FOOT OF TRANSFORMER.
- 3) ROUTE THESE WIRES SEPARATE FROM ALL OTHER WIRING.
- 4) WIRE #531 MUST BE TIED TO BLU WIRE - NOT TO ANOTHER GND.
- 5) ROUTE THESE WIRES SEPARATE FROM CONTROL WIRES.
- 6) SNUBBER MAY BE SUPPLIED WITH SCR.
- 7) (REMOVED: REV. B)
- 8) GROUNDING NOTES:
 - GND EACH PANEL TO THE FRAME
 - JUMPER INTERNAL GND LUG TO EXTERNAL
GND LUG.BE PULLED FROM PCB
- 9) REFERENCE ASSY. DWG. 44A6292/2 FOR WIRE LUG ASSY.
- 10) TORQUE SPEC.'S OF #53A0412/150 CONTACTOR: 120 LB-IN.
- 11) IF A JUMPER IS NEEDED FOR ANY CORE LEAD, USE
HIGH VOLTAGE 89A0086/1 WIRE.
- 12) IF OUTPUT GOES THRU SGRS BAYS, USE 40KV 89A0087/1 WIRE.
- 13) FOR ICVM WIRING, SEE DWG. # 44A6687/XXX.
- 14) SEE "SYSTEM PACKAGE" FOR WIRING OF 44A6007/X HARTING "STAB" CONNECTOR.



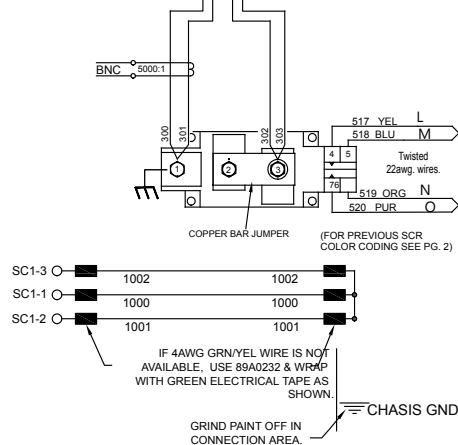


Figure 49: SGRS 50-70kW (43A2616 50-70, page 2)

PREVIOUS "MOLDED" STYLE CVM WIRING

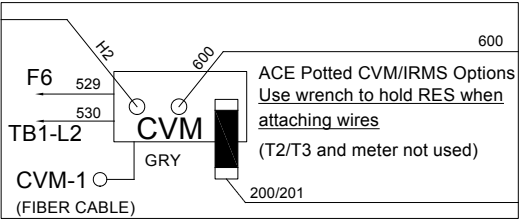


PREVIOUS IRMS W/RES WIRING

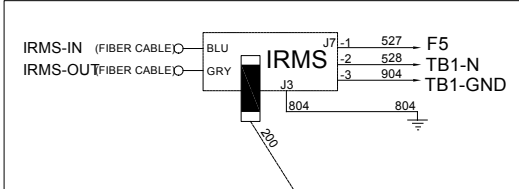


Use wrench to hold RES when attaching wires

PREVIOUS SCR WIRE COLOR CODING

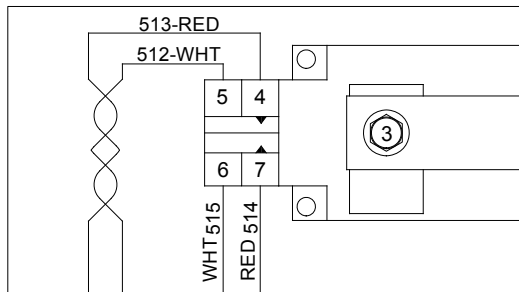

POWER PAK WIRING FOR
94A0399 "DOOR NOT CLOSED"
INDICATOR

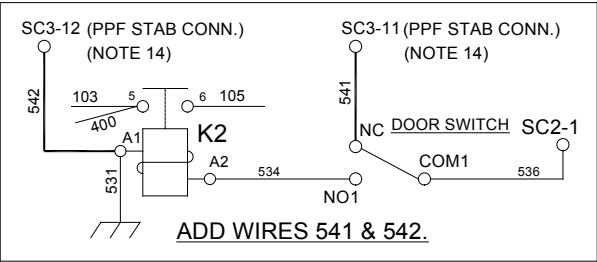

TORQUE SPEC.S: CONTACTOR, FUSE BLOCK, BREAKER - AS LISTED ON COMPONENT LABEL.

72A0017 TERM. BLK.: 35 in-lb.s

72A0071 TERM. BLK.: 50 in-lb.s

72A0306/1 & /2 HARTING CONN'S: 48 in-lb.s

WIRE SIZES:

102-105: PRIMARY POWER, SEE TABLE.

200-206: HIGH VOLTAGE, 12AWG, 25KV, 150C, 89A0086/1.

300-311: TANK LOOP & CAPS, 2 AWG, 600V, 105C, 89A0199/9 (300-303 = 2 RUNS AS SHOWN).

400-409: MEDIUM CURRENT, 12AWG, 600V, 105C, 89A0185/9.

500-562: STD CONTROL, 18AWG, 600V, 89A0182/9.

600-604: HIGH VOLTAGE, 8AWG, 7.5KV, 89A0202:
OBSOLETE - USE "200" SERIES WIRE.

700-701: INPUT POWER, 2/0 AWG, 600V, 105C, 89A0231.

800-806: GROUND, 12AWG, 600V, GN/YL, 89A163/5.

904-906: GROUND, 18AWG, 600V, GN/YL, 89A0163/7.

1000-1004: GROUND, 4 AWG, 600V, 105C, GN/YL, 89A0233.

1100: GROUND, 6 AWG, 600V, 105C, GN/YL, 89A0168/5.

100 SERIES WIRES
PRIMARY POWER
600V - 105°C

POWER	480V
50 kW	1/0 AWG 89A0201/9
70 kW	2/0 AWG 89A0231

Appendix A: SUPPORT

Our experienced engineers are available for support and service at all times, 24 hour/7 days a week. They are part of a dynamic organization making sure the entire ADB SAFEGATE is committed to minimal disturbance for airport operations.

ADB SAFEGATE Support

Technical Support – Global

Customers in Europe, the Middle East, Africa or Asia Pacific are more than welcome to our portal for technical support. Trained in all areas of system issues, troubleshooting, quality control and technical assistance, our highly experienced Technical support specialists are available 24 hours a day, seven days a week to provide assistance over the phone. In the Americas, we also offer live technical support.

Live Technical Support – Americas

If at any time you have a question or concern about your product, contact ADB SAFEGATE's US-based technical support specialists, available 24 hours a day, seven days a week, to assist you via phone.

ADB SAFEGATE Americas Technical Service & Support (US & Canada) : **+1-800-545-4157**

ADB SAFEGATE Americas Technical Service & Support (Canada): **+1-905-631-1597**

ADB SAFEGATE Americas Technical Service & Support (International): **+1-614-861-1304**

We can also be reached via email during regular business hours:

Airfield and Gate: **techservice.us@adbsafegate.com**

Gate: **gateservice.us@adbsafegate.com**

We look forward to working with you!


Before You Call

When you have an airfield lighting or system control system problem, prior to calling, please ensure the following:

- Review the product's manual and troubleshooting guide.
- Be located with the product ready to troubleshoot.
- Have all necessary information available: airport code/company name, customer id number, contact phone number/email address, product/part number.
- Have a *True RMS* meter available and any other necessary tools.

When calling about an issue with Safedock A-VDGS, we can serve you better if you collect the following information before you call:

- Relevant information regarding the issue you are calling about, such as gate number, flight number, aircraft type and time of the event.
- What, if any, actions have been taken to resolve the issue prior to the call.
- If available, provide a CCTV recording of the incident to aid in aligning the information from the Safedock log file.

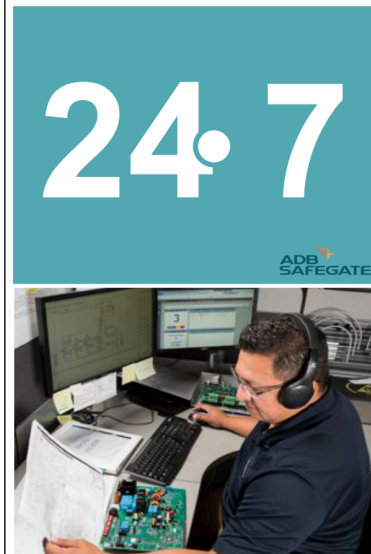

Note

For more information, see www.adbsafegate.com, contact ADB SAFEGATE Support via email at support@adbsafegate.com or

Europe: +32 2 722 17 11

Americas: +1 614 861 1304. Press 3 for technical service or press 4 for sales support.

China: +86 (10) 8476 0106

Middle East and Africa: +971 4 452 7575

A.1 ADB SAFEGATE Website

The ADB SAFEGATE website, www.adbsafegate.com, offers information regarding our airport solutions, products, company, news, links, downloads, references, contacts and more.

A.2 Recycling

A.2.1 Local Authority Recycling

The disposal of ADB SAFEGATE products is to be made at an applicable collection point for the recycling of electrical and electronic equipment. The correct disposal of equipment prevents any potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. The recycling of materials helps to conserve natural resources. For more detailed information about recycling of products, contact your local authority city office.

A.2.2 ADB SAFEGATE Recycling

ADB SAFEGATE is fully committed to environmentally-conscious manufacturing with strict monitoring of our own processes as well as supplier components and sub-contractor operations. ADB SAFEGATE offers a recycling program for our products to all customers worldwide, whether or not the products were sold within the EU.

ADB SAFEGATE products and/or specific electrical and electronic component parts which are fully removed/separated from any customer equipment and returned will be accepted for our recycling program.

All items returned must be clearly labeled as follows:

- For *ROHS/WEEE* Recycling
- Sender contact information (Name, Business Address, Phone number).
- Main Unit Serial Number.

ADB SAFEGATE will continue to monitor and update according for any future requirements for *EU directives* as and when *EU member states* implement new *regulations* and or *amendments*. It is our aim to maintain our *compliance plan* and assist our customers.

Company Addresses

ADB SAFEGATE, Belgium	ADB SAFEGATE BV Leuvensesteenweg 585 B-1930 Zaventem Belgium
Contact: Tel.: +32 2 722 17 11 Fax: +32 2 722 17 64	Email: marketing@adbsafegate.com Internet: www.adbsafegate.com
ADB SAFEGATE, Americas	ADB SAFEGATE Americas, LLC 700 Science Blvd Gahanna, OH 43230 USA
Contact: Tel.: +1 (614) 861 1304 Fax: +1 (614) 864 2069	Email: sales.us@adbsafegate.com Internet: www.adbsafegate.com
ADB SAFEGATE, Sweden	ADB SAFEGATE Sweden AB Djurhagegatan 19 SE-213 76 Malmö Sweden
Contact: Tel.: +46 (0)40 699 17 00 Fax: +46 (0)40 699 17 30	Email: marketing@adbsafegate.com Internet: www.adbsafegate.com
ADB SAFEGATE, China	ADB SAFEGATE Airfield Technologies Ltd. China Unit 603, D Block, CAMIC International Convention Center, No 3, Hua Jia Di East road, ChaoYang district, Beijing 100102 P.R. China
Contact: Tel.: +86 (10) 8476 0106 Fax: +86 (10) 8476 0090	Email: china@safegate.com Internet: www.adbsafegate.com
ADB SAFEGATE, Germany	ADB SAFEGATE Germany GmbH Konrad-Zuse-Ring 6, D-68163 Mannheim Germany
Contact: Tel.: +49 (621) 87 55 76-0 Fax: +49 (621) 87 55 76-55	Email: marketing@adbsafegate.com Internet: www.adbsafegate.com



**Powering Your Airport Performance
from Approach to Departure**

adbsafegate.com

Copyright © ADB SAFEGATE, all rights reserved

