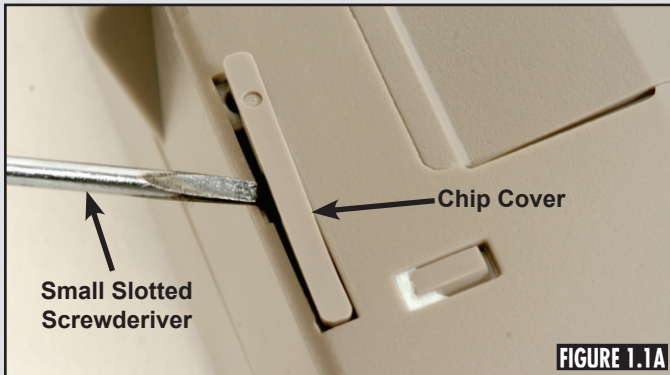## For the Latest Chip Information

Please visit Static Control's Chip Center for a listing of all the cartridges for which these chips are qualified. The chip center is located online at http://www. scc-inc.com/chipcenter. Contact your Static Control Support Team for product information, ordering and technical support services. For the latest cartridge information and other SSS™ documents, please visit www.scc-inc.com.

Chip appearance subject to change. Pictures and images may not be reflective of current offering.
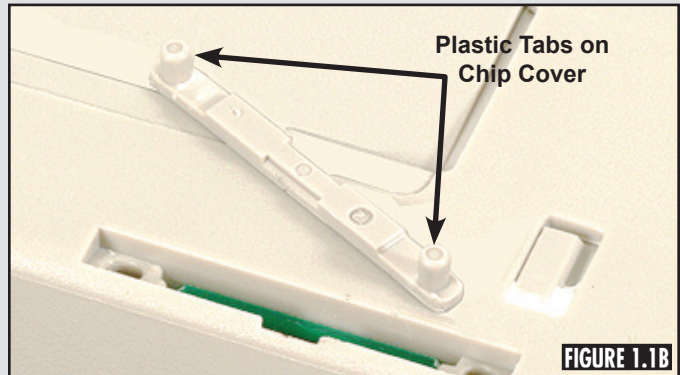
⚠️ **Warning:** To prevent damage, personal grounding devices such as Static Control's Field Service Kit (FSKL3RD), should always be used when working with static sensitive components.

STEP 1.1 (REMOVAL)

Small Slotted Screwderiver

Chip Cover

FIGURE 1.1A
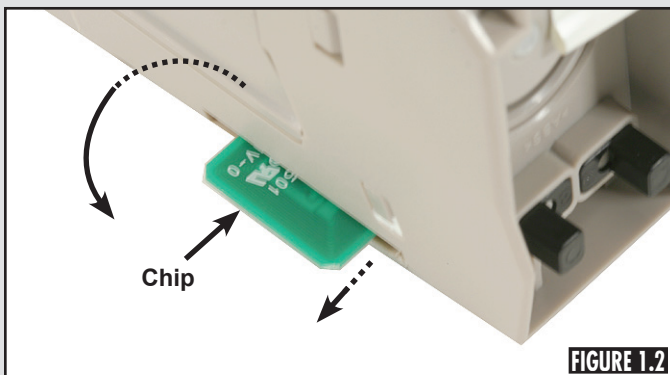

Plastic Tabs on Chip Cover

FIGURE 1.1B

Locate the chip cover on the cartridge. Using a small slotted screwdriver, carefully pry the chip cover up and remove from the cartridge. See Figures 1.1A & 1.1B.

⚠️ **Warning:** Ensure the plastic tabs on the chip cover are not damaged during removal.
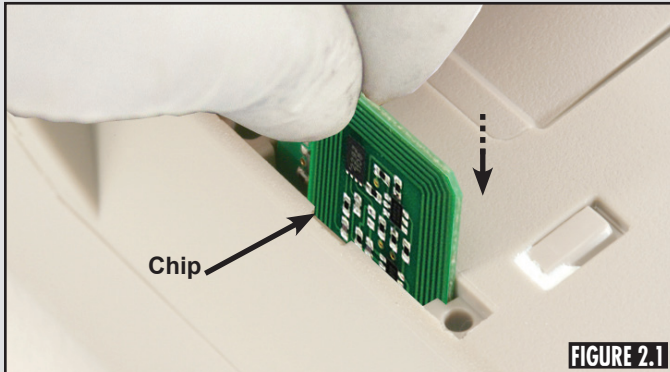
STEP 1.2

Chip

FIGURE 1.2

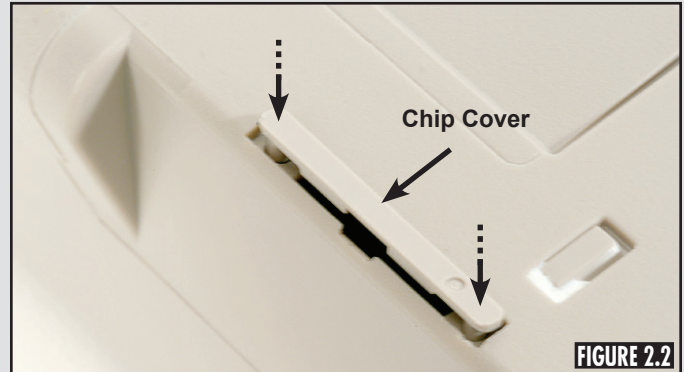Tilt the cartridge so that the OEM chip slides out of the slot (Figure 1.2).

STEP 2.1 (INSTALLATION)

Chip

FIGURE 2.1

Align the replacement chip as shown in Figure 2.1 and drop it into the chip's slot.

STEP 2.2

Chip Cover

FIGURE 2.2

Align the chip cover with the chip slot as shown in Figure 2.2 and snap into place.

V.9.3 - 6.13

For direct technical support, please call:

US: +1 800 488 2426, Int'l +1 919 774 3808 ● Europe: + 44 (0) 118 923 8800

China: 800 630 0700 ● Hong Kong: +852 2427 6011 ● South Africa: +27 (0) 11 973 1930

www.scc-inc.com ● www.scceurope.co.uk ● www.scc-inc.cn