


1. Skruva av bakstycket.




2. Skruva bort den svarta korken från fettpatronen.


3. Tryck fram 5-10mm fett genom att trycka på följelocket. Detta för att undvika luftficka vid byte av patron.




****För våra batteri-, luft-drivna fettssprutor eller Retrofit-adaptorrör kan det behöva tryckas fram lite mer, vid laddning av första tuben på dessa sprutor bör man fylla området framför tuben så fettets når fram till pumpens inlopp för att undvika problem vid uppstart****

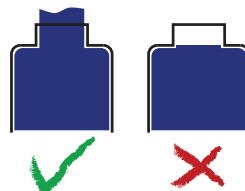

4. För in patronen med den gängade änden först in i sprutan och skruva fast patronen.




5. Komprimera fjädern på bakstycket mot följelocket på fettpatronen och skruva fast det på röret.



6. Sprutan är nu klar för användning!



1. Unscrew the rear piece.




2. Remove the black cap from the cartridge.

3. Push forward some 5-10mm of grease by applying pressure to the piston, to prevent air pocket when changing cartridge.




****When using our battery-, air-operated grease guns or Retrofit-adaptors, some extra grease may be required to be pushed out.**


When using these grease guns for the first time the compartment in the adaptor should be filled with grease so the grease reaches the pump inlet to avoid pumping problems.**

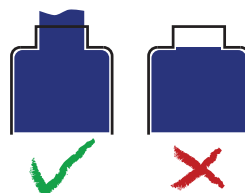

4. Insert the cartridge with the threaded end first and fasten the thread.



5. Compress the spring on the rear piece against the cartridge piston and fasten the rear piece to the cartridge barrel.



6. Grease gun is ready to use!

