





TYPE 102
SAME AS TYPE 101
EXCEPT AS SHOWN





TYPE 107
SAME AS TYPE 102
EXCEPT AS SHOWN





TYPE 103
SAME AS TYPE 101
EXCEPT AS SHOWN






TYPE 104
SAME AS TYPE 101
EXCEPT AS SHOWN




TYPE 105
SAME AS TYPE 101
EXCEPT AS SHOWN





TYPE 106
SAME AS TYPE 103
EXCEPT AS SHOWN





TYPE 101



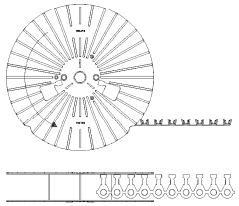

TERMINAL
COIL WINDING
SCALE 1 NONE
TYPE 1

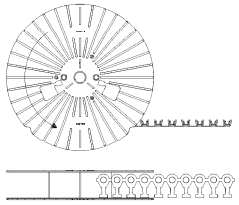

TERMINAL
COIL WINDING
SCALE 1 NONE
TYPE 11

NOTES

1. UNLESS OTHERWISE SPECIFIED AND/OR INDICATED:
   DIMENSIONS ARE TO FACE OF VIEW SHOWN AND
   ARE FOR REFERENCE ONLY. NOT FOR USE IN INSPECTION
   / SEE MATH MODEL FOR PRECISE DIMENSIONS. FOR ALL
   OTHER DIMENSIONS NOT SHOWN BUT REQUIRED FOR TOOL
   BUILD, SEE MATH MODEL FOR PRECISE TOOL PATH DATA.

| SYMBOL DEFINITION | | MISSING SYMBOLS |
|---|---|---|
| A DIMENSION WITHOUT AN INSPECTION REPORT SYMBOL (—) DOES NOT REQUIRE INSPECTION. IT MAY BE CONTROLLED ON THE INDIVIDUAL COMPONENT DRAWINGS. | TOTAL NO OF INSPECTIONS REQUIRED: 11<br>LAST NO. USED: 11 | NO MISSING SYMBOL NUMBER |

| REVISION HISTORY | | |