

# 42" LOW-PROFILE BLOW-MOULD CREEPER

PROD. NO. 355132  
 MOD. NO. JBMC-42440

To install swivel casters, follow the steps below and use the image for reference:

**Step 1** Align swivel caster (#2) with holes on base (#1).



**Step 2** Insert carriage bolt (#5) through the swivel caster (#2) and the base (#1).

**Step 3** Add a bushing (#8) then a washer (#7) over the carriage bolt (#5) that should be visible on the top side of the base (#1).

**Step 4** Secure the carriage bolt (#5), bushing (#8) and washer (#7) with the lock nut (#6).

**Step 5** Check each swivel caster (#2) to see if there is any movement between swivel caster (#2) and the base (#1) if so, tighten lock nut (#6).

**Step 6** Press the lock nut cap (#9) over each hole to stop debris.

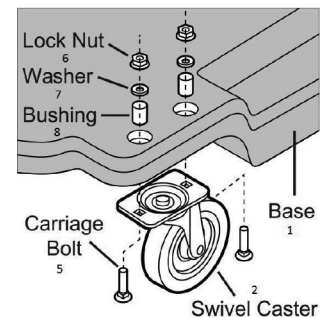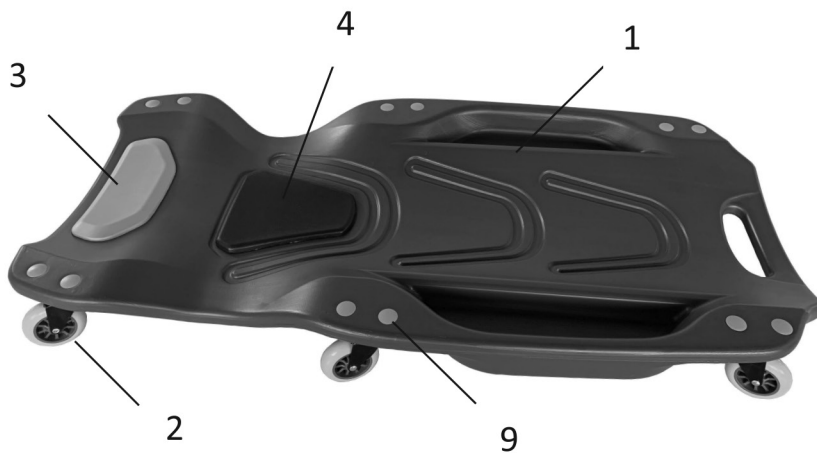

REF	DESCRIPTION	REQ
1	BASE	1
2	SWIVEL CASTER	6
3	EVA HEAD CUSHION	1
4	EVA BASE CUSION	1
5	CARRIAGE BOLT	12
6	LOCK NUT	12
7	WASHER	12
8	BUSHING	12
9	LOCK NUT CAP	12
10	SPANNER	1