


# DRAWER HANDLE INSTRUCTIONS

A = 211 mm 

B = 143 mm 


C = 207 mm 

## PLEASE READ THESE INSTRUCTIONS CAREFULLY

Use the same set of guides for all drawers.

1. Make sure that the drawer is clean and dry. Wipe the surface with the included wipes. First use the wet "1" then the dry "2".
2. Use the correct guide/guides for your storage. See table to the below.
3. Place the guide on the corner of the drawer.
4. Peel of the protecting layer of the tape on the handle.
5. For horizontal positioning, align the the handle on the edge of the drawer
6. For vertical positioning, push the handle edge to edge with the guide.
7. Keep the horizontal and vertical position and press the handle on to the drawer.
8. Apply pressure on the whole length of the of the handle.

*The adhesive strength of the tape will be 100% after 72 hours*

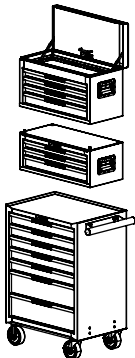

What guides to use to your storage

	Width	26"	37"	53"	64"
Top Box 4 Drawers	C	-	-	-	-
Full Depth Top Box	A	A + B	A	-	-
Middle Box	C	-	-	-	-
Cabinet	A	A + B	A	A, A + B	

Have a look at our informative instruction videos at TengTools YouTube channel:



TengTools AB 2024

[www.tengtools.com](http://www.tengtools.com)

Version: 1

Item ID: ALUE803/ALUE804

