

SAFETY & WARNINGS

WARNING!

Cut Hazard
Failure to use caution could result in injury.
• Take care: some edges may be sharp.

- This trim kit is designed to complement your companion product if installing into 30" (760mm) wide cabinetry. Ensure correct variation is used for styling (contemporary, minimal).

COMPONENTS REQUIRED

Supplied



Button screw 16mm (4)



Template (1)



Bracket (2)



Trims (2)



Adhesive putty

Not supplied



Powered driver (1)



Small pilot hole drill bit (1)



Phillips drill bit (1)



Hammer (1)



Centre punch (1)

For more information, visit www.fisherpaykel.com

INSTALLATION

①



Apply adhesive putty to the back four corners of the template.

②



Position the horizontal **ALIGNMENT EDGE** to the top of the product and the vertical **ALIGNMENT EDGE** to the side of the product. Press to secure.

③



Ensure vertical **ALIGNMENT EDGE** runs evenly up the full height of the product

④



Ensure the template is completely flush against the cabinet and all four corners are secure.

⑤




Punch one upper and one lower hole using the locations marked on the template. Note that three sets of holes are provided and not all holes need to be drilled. Drill pilot holes and remove template.

⑥



Ensure the top and bottom of the bracket sit flat against the cabinet. Align with the pilot holes.

⑦

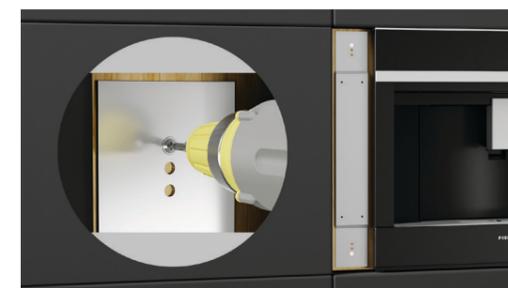

Fit the bracket into place using the supplied screws. Repeat on opposite side.

⑧



Clip the trims into place.

⑨



Check the alignment of both trims. If adjustments within $\pm 1\text{mm}$ are required, remove the trim and adjust the bracket. If further adjustments are required, remove the trim and bracket. Return to step 5 and repeat the process with a new set of holes.

⑩



Removal
The trims can be removed at any time. To remove, carefully pull trims outwards.