


HD20 Concrete Vacuum Point & Plug


Installation Instructions

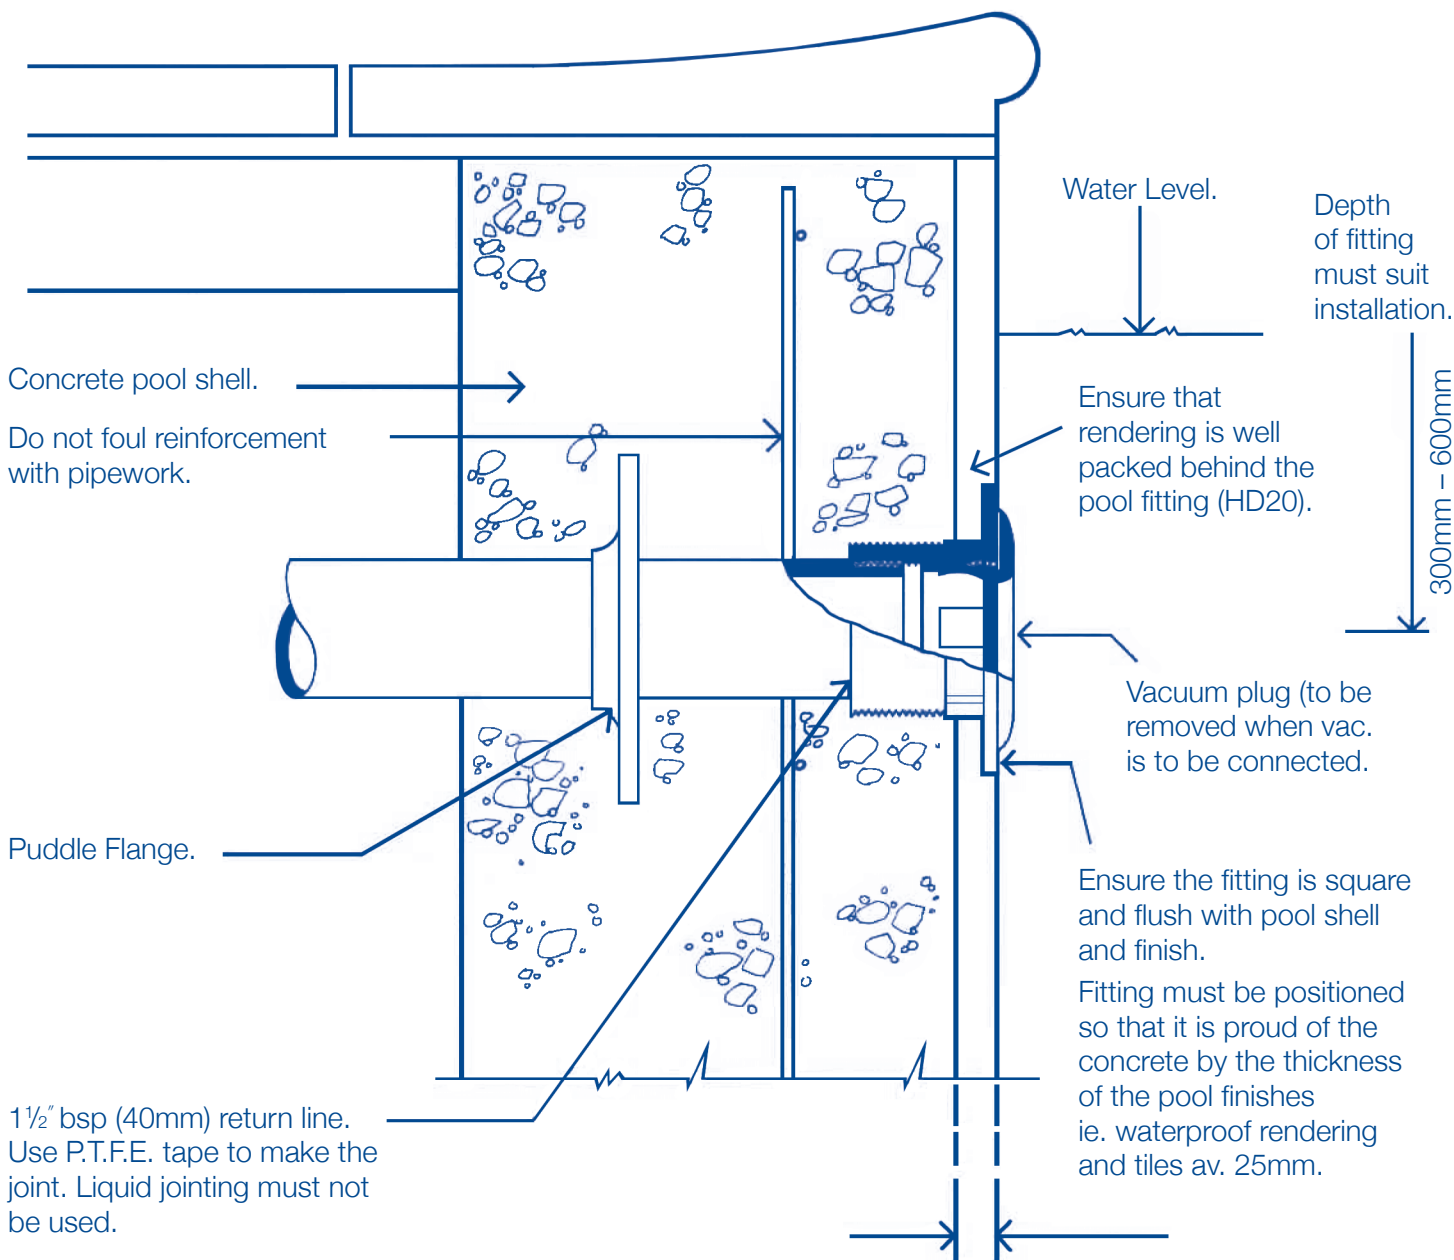

Important: All pipework and pool fittings must be pressure tested before backfilling and commissioning. Drawing is not to scale.

HD20L Liner Vacuum Point & Plug

Installation Instructions

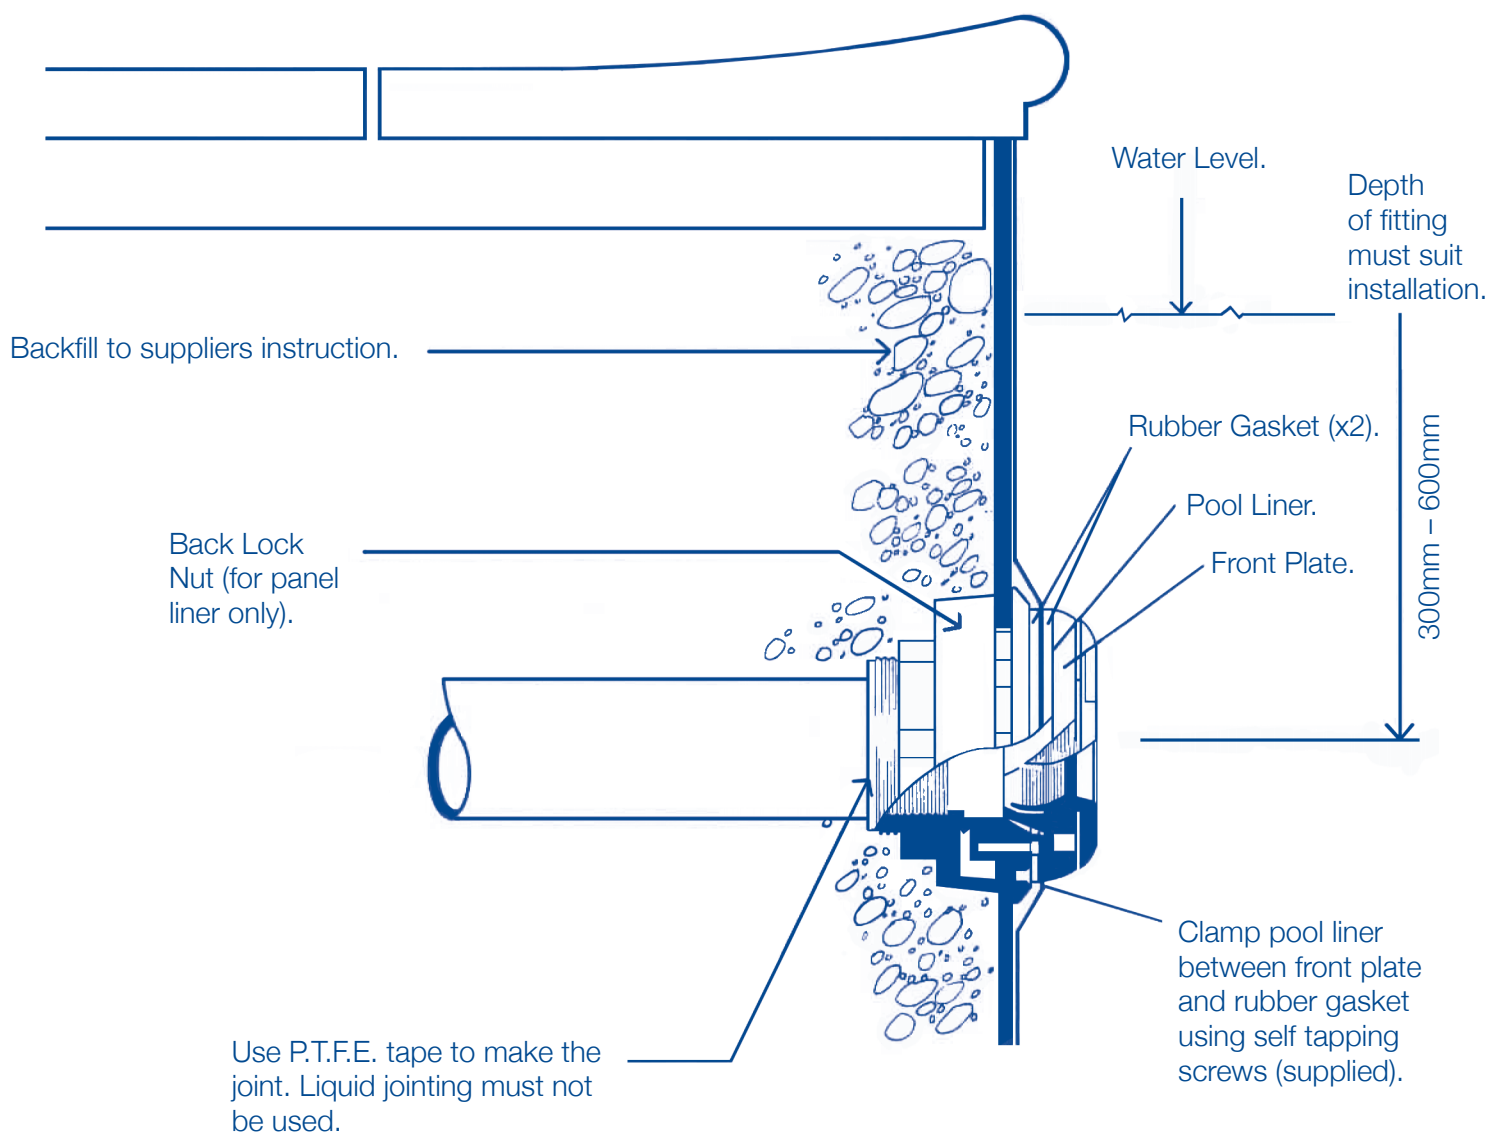

Important: All pipework and pool fittings must be pressure tested before backfilling and commissioning. Drawing is not to scale.