
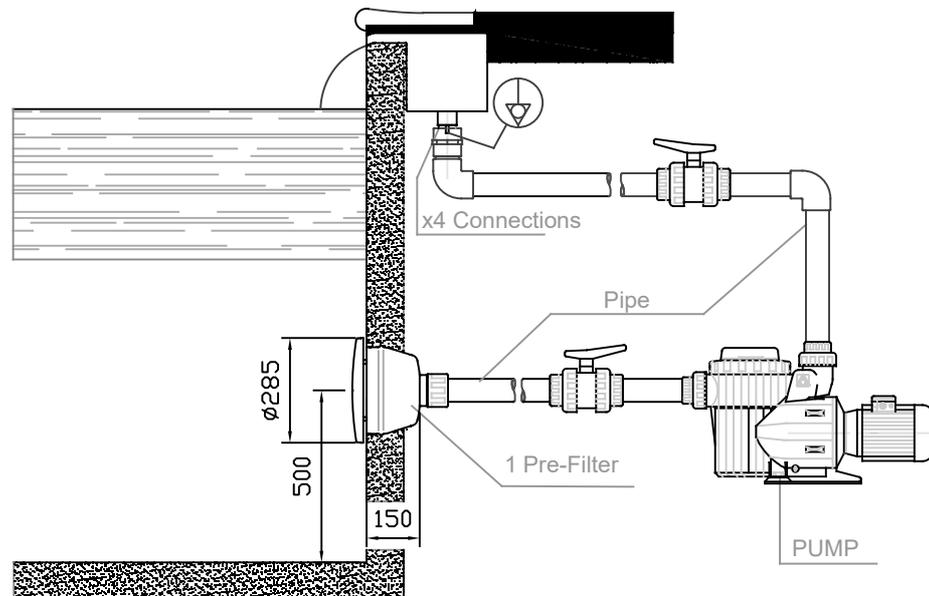

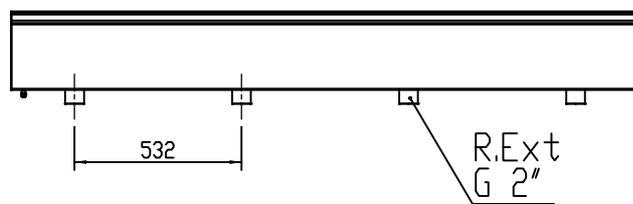
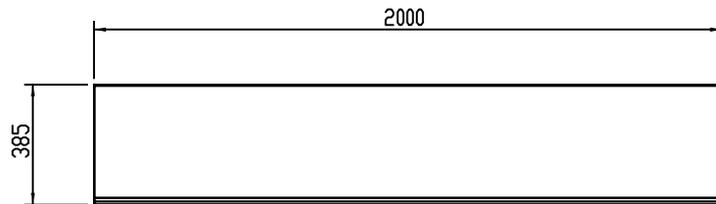


ASTRALPOOL

WATERFALL
2000

66552

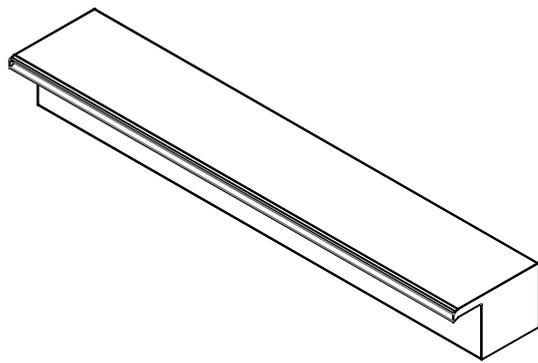

Cuidado! Es imprescindible instalar un pre-filtro antes de las tomas de agua.
Caution! It is mandatory to install a a pre-filter before water inlets.