


DATA SHEET

600MM DOUBLE DISHDRAWER™

Model no:

DD60DCX9, DD60DCHX9

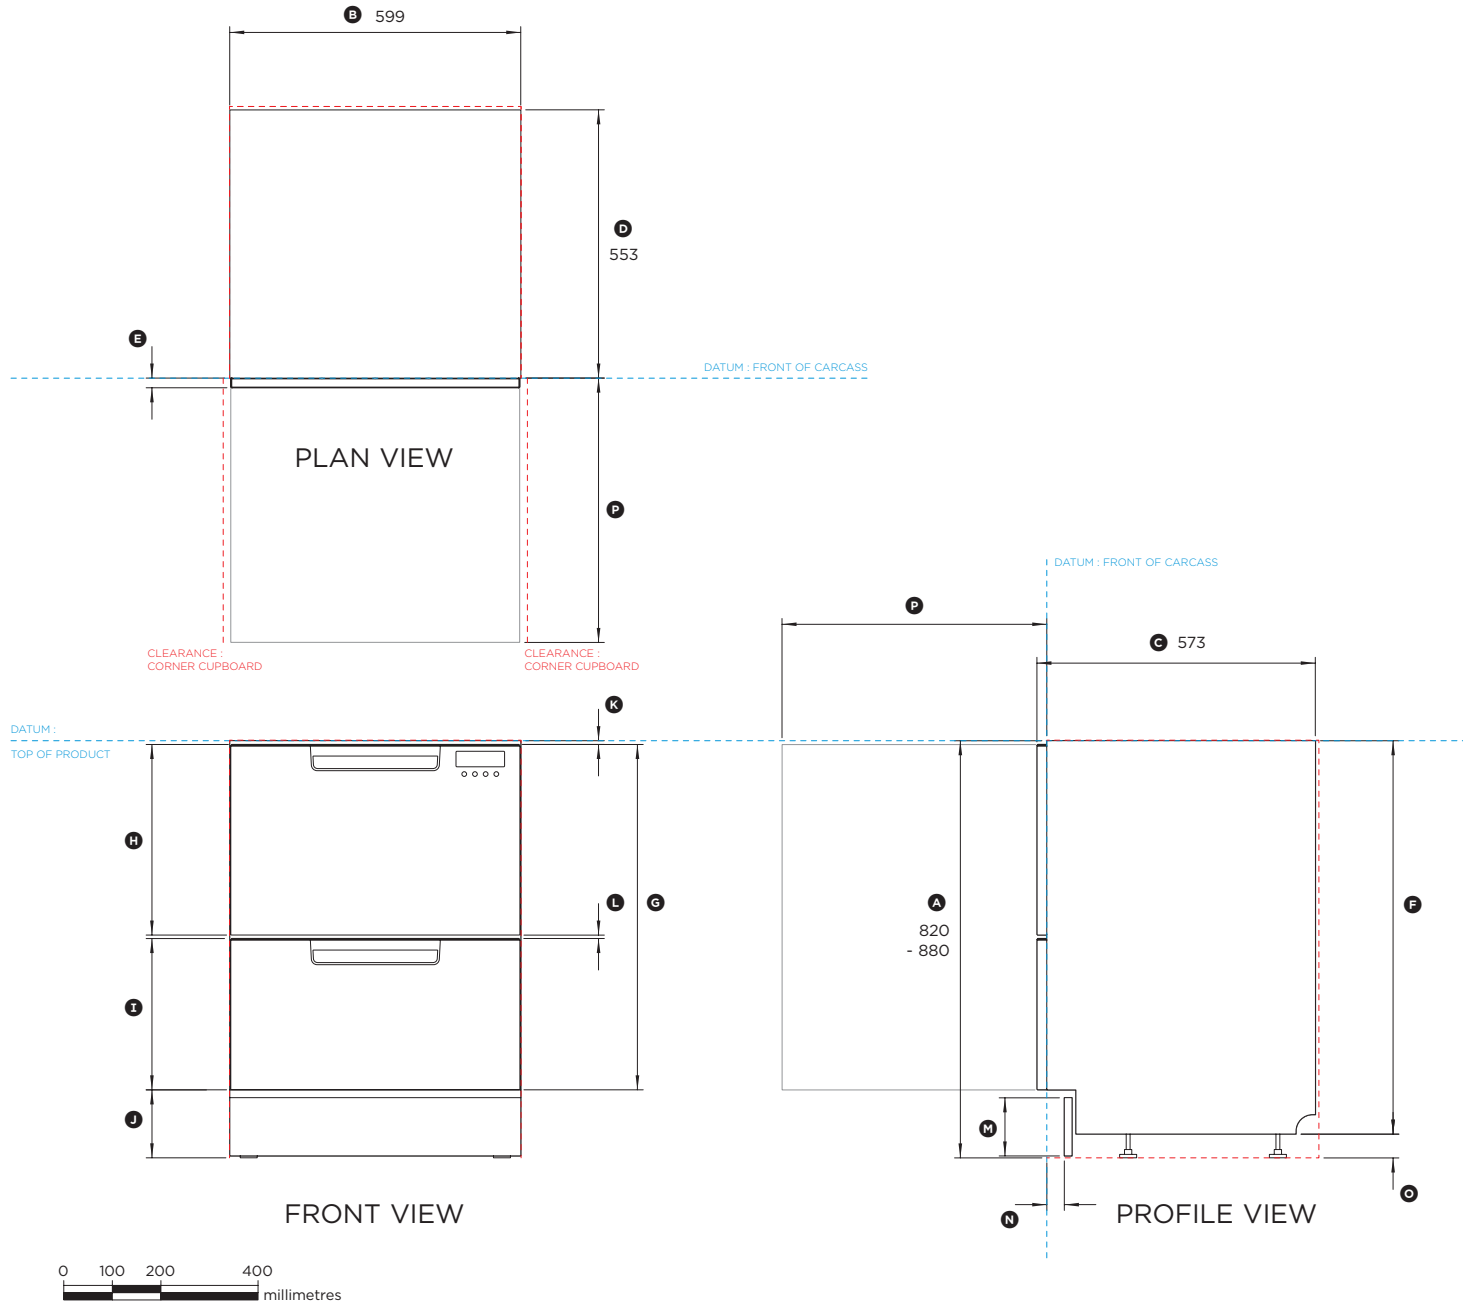

Dimensions

	mm
Ⓐ Overall height* of DishDrawer™	820 - 880
Ⓑ Overall width of DishDrawer™	599
Ⓒ Overall depth of DishDrawer™	573
Ⓓ Depth of chassis	553
Ⓔ Depth of front panel	20
Ⓕ Height of chassis	811
Ⓖ Height of drawer fronts	712
Ⓗ Height of upper front panel	393
Ⓙ Height of lower front panel	312
Ⓚ Height from floor to bottom of lower front panel	100 - 160
Ⓛ Height from top of front panel to top of chassis	8
Ⓜ Ventilation gaps between panels	7
Ⓝ Height of toe-kick panel	72 - 127
Ⓞ Depth of toe-kick recess	38 - 54
Ⓟ Height of adjustable levelling feet	9 - 69
Ⓠ Maximum extension of drawer from front datum	547

* includes mounted feet

Minimum Clearances

	mm
Height of cavity	min 820
Width of cavity	600
Depth of cavity	min 560
Minimum clearance from a corner cupboard	13

Note: Service outlet at rear extends both sides, hoses and cords can be routed to either or both.

INDICATES CABINETRY / PRODUCT DATUM -----
 INDICATES CABINETRY CLEARANCES - - - - -

DATE: **07.09.2016**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit www.fisherpaykel.com