


Model no:  
RF331TLPW6

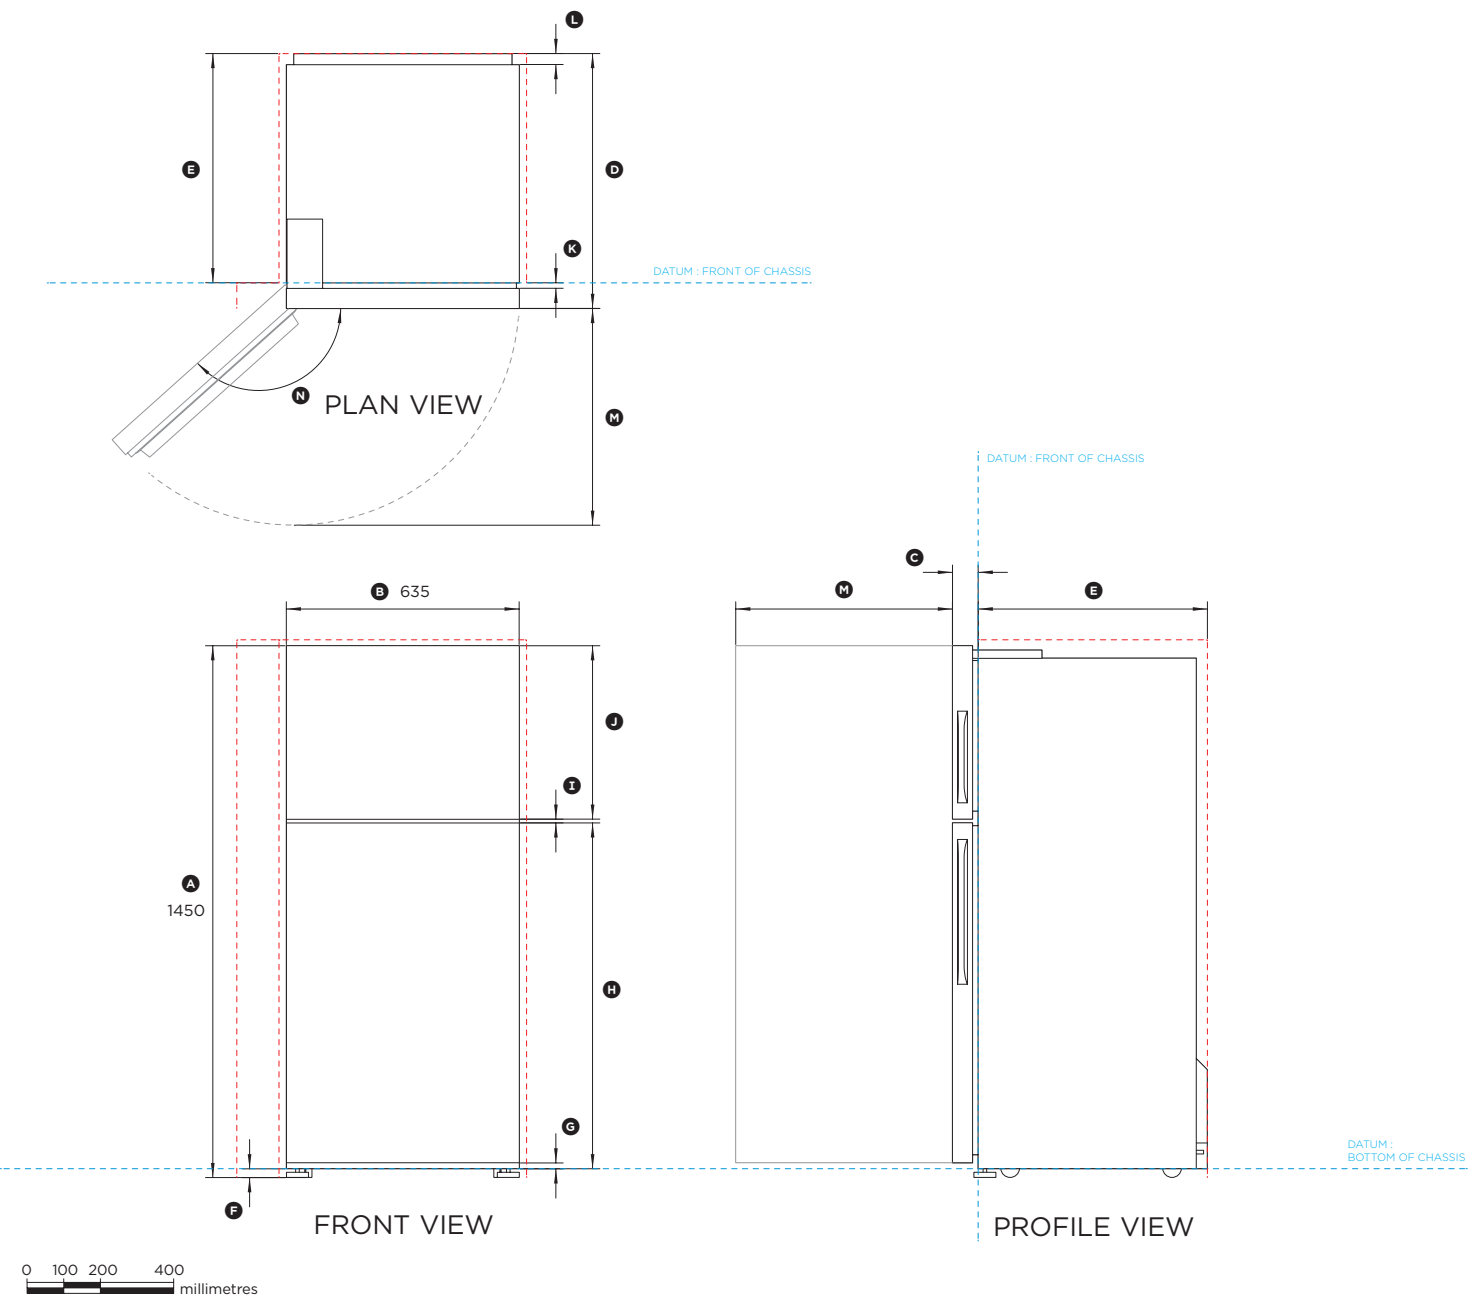

Product Dimensions	mm
Ⓐ Overall height* of fridge	1450
Ⓑ Overall width of fridge	635
Ⓒ Depth of fridge door and gasket	70
Ⓓ Depth of fridge door and chassis	695
Ⓔ Depth of fridge chassis (does not include fridge door)	625
Ⓕ Height of feet (adjustable)	24
Ⓖ Height from bottom of chassis to bottom of bottom door	16
Ⓗ Height from bottom of chassis to top of bottom door	943
Ⓘ Gap between doors	10
Ⓚ Height of top door	473
Ⓛ Depth of door gasket	15
Ⓛ Depth of evaporator tray	30
Ⓜ Depth of door (open at 90°) (measured from front of door)	591
Ⓝ Rotation of door (open)	135°

\* Includes mounted feet

Minimum Clearances	mm
Minimum height of cavity	1470
Minimum side clearance installed flush with chassis	20
Side clearance (hinge side) installed flush with door - full rotation	135
Rear clearance (including evaporator tray)	30

INDICATES PRODUCT DATUM  
INDICATES CABINETY CLEARANCES

DATE: 2.12.2016

IMPORTANT NOTE: Throughout this guide, dimensions may vary by  $\pm 2\text{mm}$  ( $3/32''$ ). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)