
# FISHER & PAYKEL

### DATA SHEET

Model no: DD24DDFTX9\_N 24" Double DishDrawer™ Tall

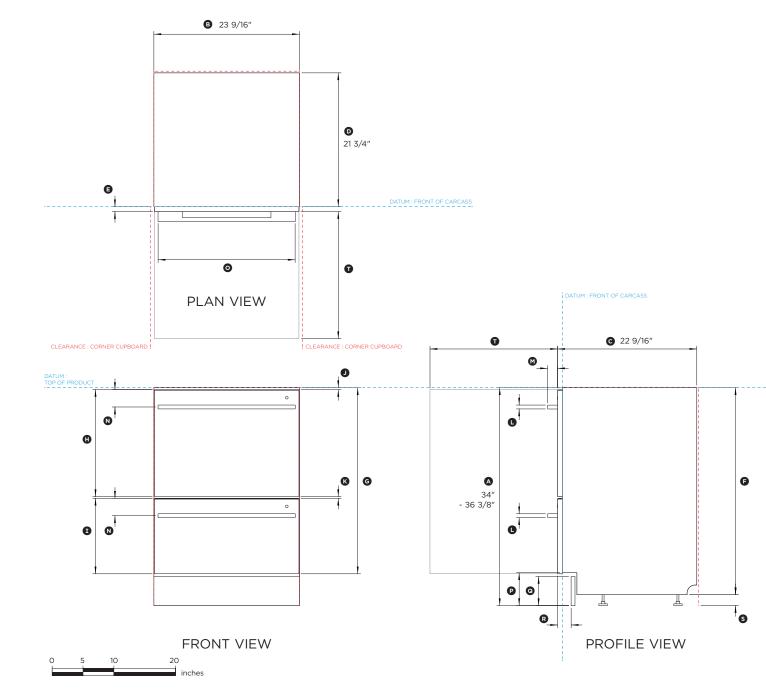

Dimensions	in
Overall height* of DishDrawer™	34" - 36 3/8"
Overall width of DishDrawer™	23 9/16"
© Overall depth of DishDrawer™	22 9/16"
Depth of chassis	21 3/4″
E Depth of front panel	13/16″
🖻 Height of chassis	33 11/16"
ⓒ Distance from top datum to bottom of lower drawer front	30 1/4"
Height of upper front drawer panel	17 3/8"
<ol> <li>Height of lower front drawer panel</li> </ol>	12 1/4"
④ Height from top of front panel to top of chassis	5/16"
🕅 Ventilation gaps between panels	5/16"
L Height of handle	5/8"
Depth of handle	1 5/8"
N Height from top of upper front panel to centerline of handle	2 13/16"
Width of handle	22 3/16"
P Height of toekick recess	4" - 6 5/16"
③ Height of toekick panel	2 13/16" - 5"
Depth from front of drawer panel to front of toekick     (adjustable)	1 1/2" - 4"
S Height of adjustable levelling feet	3/8" - 2 3/4"
① Maximum extension of drawer from drawer front	20 3/4"

Minimum Clearances	in
Minimum inside height of cavity*	34"
Minimum inside width of cavity	23 5/8"
Minimum inside depth of cavity from front datum	22 1/16"
Minimum clearance from a corner cupboard	1/2"

\* Depending on adjustment of leveling feet.

Note: Service outlet at rear extends both sides, hoses and cords can be routed to either or both.

#### DATE: 28.05.2018

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com


# FISHER & PAYKEL

### DATA SHEET

24" Double DishDrawer™ Tall

Model no: DD24DDFTX9\_N

(refer page 1 for imperial measurements)

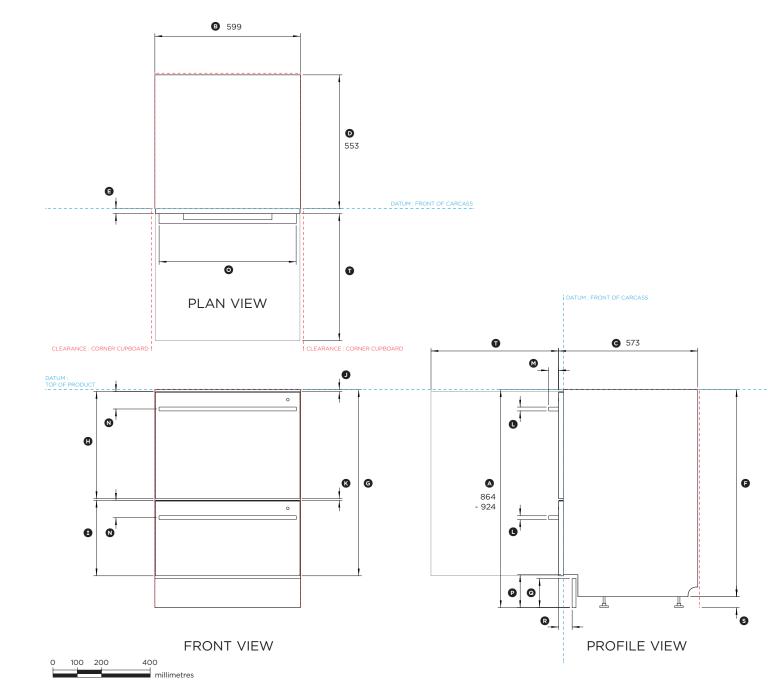

Dimensions	mm
<ul> <li>Ø Overall height* of DishDrawer™</li> </ul>	864 - 924
® Overall width of DishDrawer™	599
© Overall depth of DishDrawer™	573
Depth of chassis	553
© Depth of front panel	20
F Height of chassis	855
© Distance from top datum to bottom of lower drawer front	769
Height of upper front drawer panel	442
<ol> <li>Height of lower front drawer panel</li> </ol>	312
<ol> <li>Height from top of front panel to top of chassis</li> </ol>	8
<ul> <li>Ventilation gaps between panels</li> </ul>	8
① Height of handle	16
Ø Depth of handle	41
Height from top of upper front panel to centreline of handle	72
<ul> <li>Width of handle</li> </ul>	564
P Height of toekick recess	100 - 160
<ul> <li>Height of toekick panel</li> </ul>	72 - 127
® Depth from front of drawer panel to front of toekick (adjustable)	38 - 102
③ Height of adjustable levelling feet	9 - 69
① Maximum extension of drawer from drawer front	527
* Includes mounted feet and the range of movement.	

Minimum Clearances	mm
Minimum inside height of cavity*	864
Minimum inside width of cavity	600
Minimum inside depth of cavity from front datum	560
Minimum clearance from a corner cupboard	13

\* Depending on adjustment of leveling feet.

Note: Service outlet at rear extends both sides, hoses and cords can be routed to either or both.

#### DATE: 28.05.2018

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com