

WASH PROGRAM DATA

Wash program times and temperatures indicated are approximate. For information on which program to use for your load, refer to your user guide.

DD60DTX6HI models

CYCLE	WASH PROGRAM (CYCLE TIME)							
	AUTO (108-149min)	HEAVY (175min)	MEDIUM (155min)	LIGHT (35min)	60 MIN (60min)	GLASSWARE (140min)	ECO* (229min)	RINSE (15min)
Pre wash	n/a	50°C	48°C	n/a	n/a	45°C	n/a	n/a
Main wash	48°C - 65°C	65°C	58°C	48°C	56°C	55°C	53°C	n/a
Post rinse	Yes	Yes	Yes	Yes	Yes	Yes	Yes	n/a
Final rinse	60°C	65°C	60°C	40°C	53°C	60°C	53°C	n/a
Drying phase	Yes	Yes	Yes	n/a	n/a	Yes	Yes	n/a

USAGE PER DRAWER	WASH PROGRAM							
	AUTO	HEAVY	MEDIUM	LIGHT	60 MIN	GLASSWARE	ECO*	RINSE
Water (L)	7.6-10.7	9.9	7.2	6.1	8.2	11.2	6.4	2.3
Energy (kWh)	0.53-0.73	0.90	0.67	0.30	0.60	0.62	0.49	n/a

DD60STX6HI models

CYCLE	WASH PROGRAM (CYCLE TIME)							
	AUTO (143-184min)	HEAVY (208min)	MEDIUM (190min)	LIGHT (35min)	60 MIN (60min)	GLASSWARE (175min)	ECO* (260min)	RINSE (15min)
Pre wash	n/a	50°C	48°C	n/a	n/a	45°C	n/a	n/a
Main wash	48°C - 65°C	65°C	58°C	48°C	56°C	55°C	53°C	n/a
Post rinse	Yes	Yes	Yes	Yes	Yes	Yes	Yes	n/a
Final rinse	60°C	65°C	60°C	40°C	53°C	60°C	53°C	n/a
Drying phase	Yes	Yes	Yes	Yes	n/a	Yes	Yes	n/a

USAGE PER DRAWER	WASH PROGRAM							
	AUTO	HEAVY	MEDIUM	LIGHT	60 MIN	GLASSWARE	ECO*	RINSE
Water (L)	7.6-10.7	9.9	7.2	6.1	8.2	11.2	6.4	2.3
Energy (kWh)	0.53-0.73	0.90	0.67	0.30	0.60	0.62	0.49	n/a

*Reference program for energy label in compliance with EN60436:2020 & A11:2020 Regulations.

Wash times and energy consumption can vary depending on the incoming water temperature, ambient conditions, type of dish load and whether the drawer has been opened during the wash. Wash times are only APPROXIMATE on the electronic display (where applicable) and based on 15°C (Great Britain and Ireland) incoming water.

STANDARDS TEST

The DishDrawer™ Dishwashers are tested to EN60436 standards for both wash and dry performances using the parameters detailed below.

Wash program

Eco

Detergent quantity (IEC type D)

PRE WASH: 2g per drawer - added directly to the drawer below the detergent dispense

MAIN WASH: 12g per drawer - added to the powdered detergent dispenser

Rinse aid setting

3

Water softener setting

2

Capacity

6 place settings per drawer

Accessories

Base rack, folding tines, fixed plate rack, cutlery basket with cutlery grid, fold away cup racks, glass supports are to be used for the test.

Height setting of cup racks


Adjust the height to a position clear of other load items.

Note: Ensure the product is level and has the correct drain hose height. Refer to 'Installation Guide' for details.

Correct orientation of glass supports on side of drawer



Recommended loading pattern Top and bottom drawer

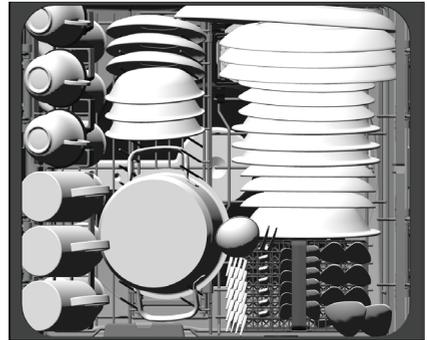

Cutlery basket

