

RESQ QUICK ACCESS VACUUM SOLUTION



1	INTRODUCTION	2
2	INSPECTION OF VACUUM	2
3	MARKING AND LABELS	2
4	INSPECTION- AND USER LOG	3
5	RESQ QUICK ACCESS	3
6	DAMAGED FOIL-BAG	3

1 INTRODUCTION

When sealing the Smartline X in vacuum, the unit will be protected from moisture by condensation, UV-light and abrasion by fixation from internal movement. We can therefore extend the inspection intervals of the content from 12 months to 10 years, with inspection interval of the vacuum seal every 12 months. By controlling the internal atmosphere, we are also able to extend the lifetime of the Aramid rope from 7 years to 10 years from date of manufacturing, which gives the user another 3 years lifetime with the product.

2 INSPECTION OF VACUUM

A person should be authorized by Cresto or Cresto authorized partner to inspect the Smartline X vacuum pack. The vacuum must be inspected at least once every 12 months and documented in accordance with the user manual under chapter 10 "Inspection- and user log".

Contact Cresto AB for further information on how to become authorized for inspection. After 10 years the unit must be taken out of service.

3 MARKING AND LABELS

On the top of the aluminium foil bag you will find two next inspection labels, for the unit (white label) and for the vacuum (green label), stating next inspection in month and year. See figure 1.

New next inspection labels for the next 9 inspections are located inside the user manual.

Individual marking of the Smartline X is located on the backside of the PVC bag and a copy on the aluminium foil inside the bag, see figure 2.

Figure 1



4 INSPECTION- AND USER LOG

Register the inspection in the user manual under chapter 10. Date of the inspection, log item e.g. vacuum inspection, name and signature of the competent person and date for next inspection.

Note: all languages in the user manual have an Inspection- and user log.


5 RESQ QUICK ACCESS

The ResQ Quick Access opening eliminates any cutting tools to open the aluminium foil bag and accessing the equipment. Just tear open the bag at the indication on the sides of the bag.

6 DAMAGED FOIL-BAG

If the foil bag for some reason is punctured, the equipment must be sent to Cresto or a Cresto authorized partner for inspection and re-seal.

Figure 2

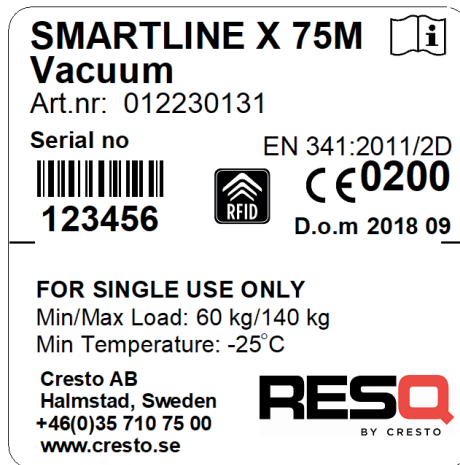



CRESTO AB | Lägatan 3 | SE-302 63 Halmstad | Sweden |
+46 (0)35 710 75 00 | support@cresto.se | cresto.com