


Phosphate

ppb

Code 3021-H

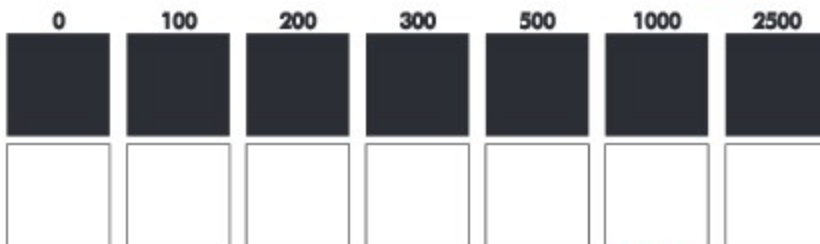

1. Fill test tube (0106) to 10 mL line.
2. Remove one test strip from bottle. Close bottle cap tightly after removing strip. Gently bend strip in half (do not fold) with pads facing inward. Place strip inside test tube cap (as shown).
3. Cap test tube and invert slowly 5 times (invert the tube slowly to allow the bubble to go from the top to bottom and bottom to top).
4. Remove cap and test strip.
5. Place bottom of test tube on white boxed area of color chart. Look down through OPEN test tube (as shown) and compare to color chart.



TIPS

Close bottle cap tightly after removing strip. Keep wet fingers out of the bottle. Store in cool, dry place. For best results, read in natural light.

Lot# 2140 Exp. 1/14

